




# Series 11 LED Standard Driver Replacement Installation Instruction

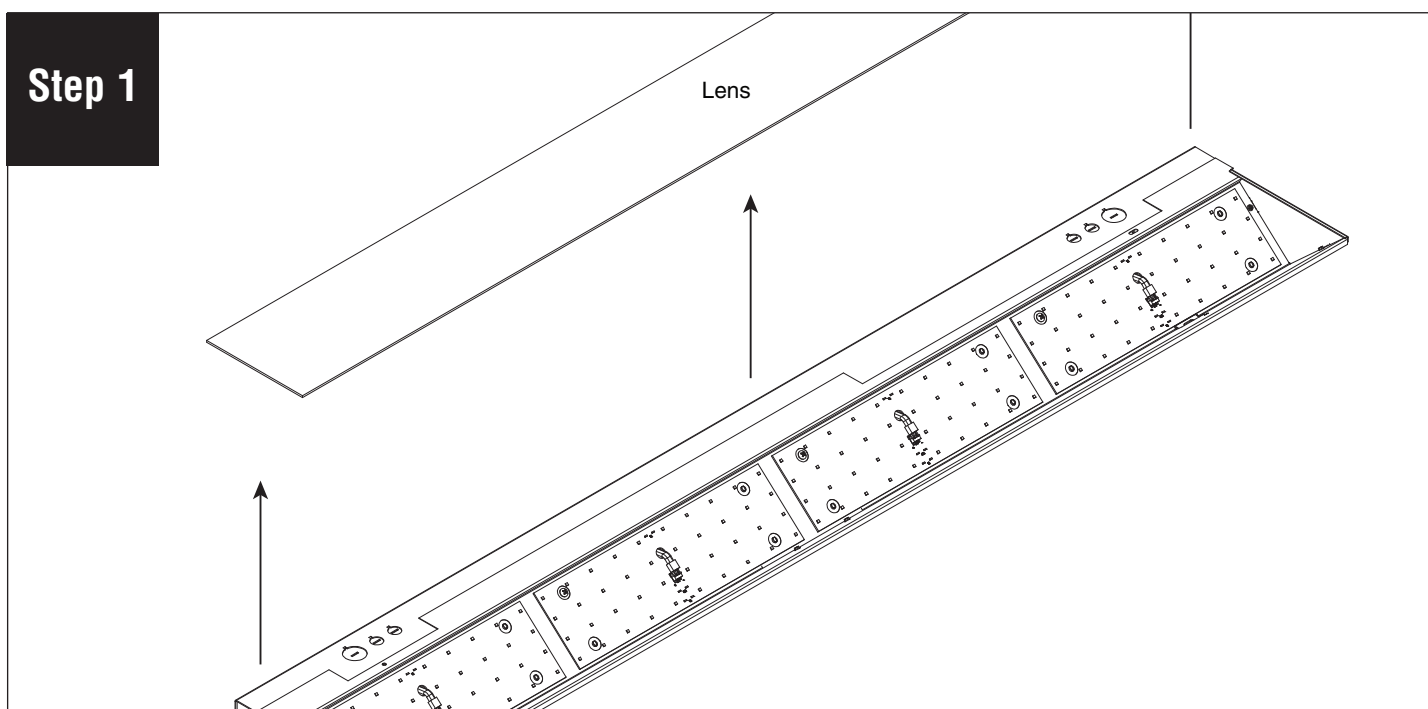


Gently slide lens forward and lift up to remove.

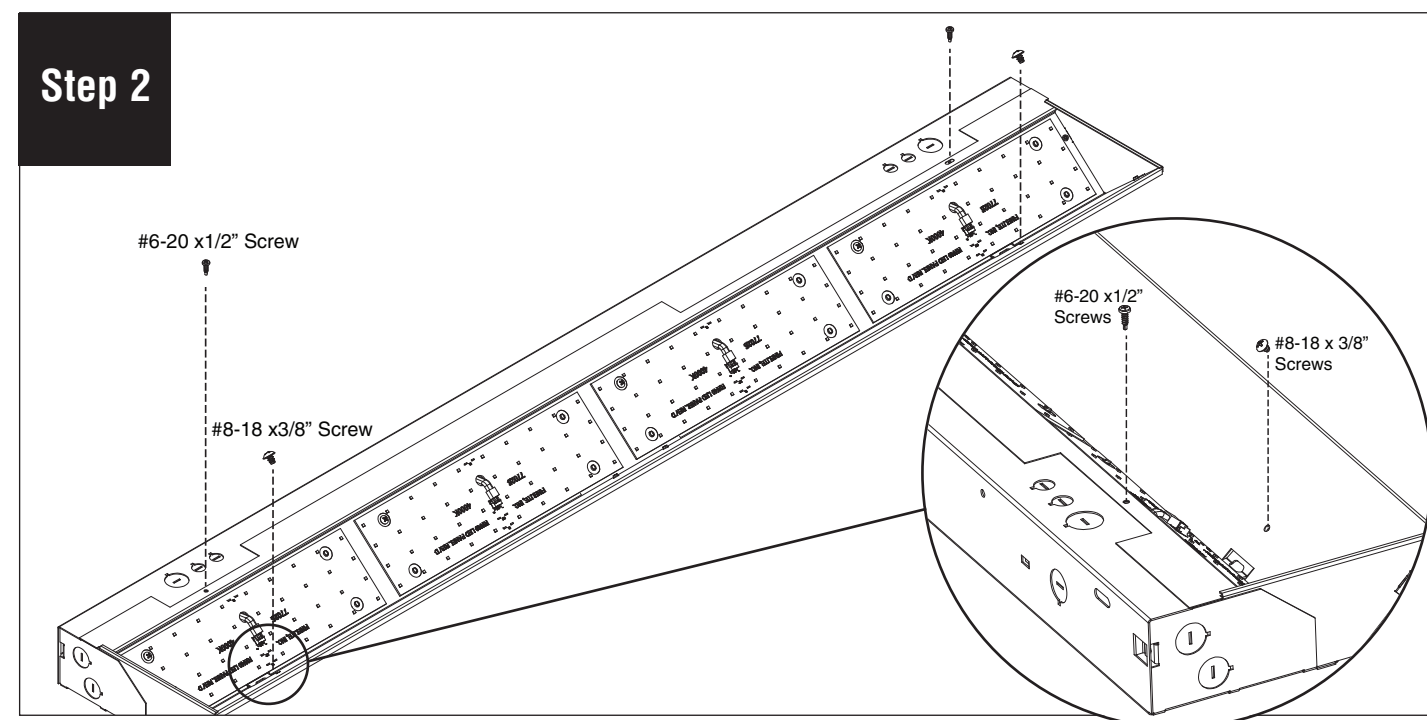

Remove screws (#6-20 x1/2" & #8-18 x3/8") holding backplate to body.

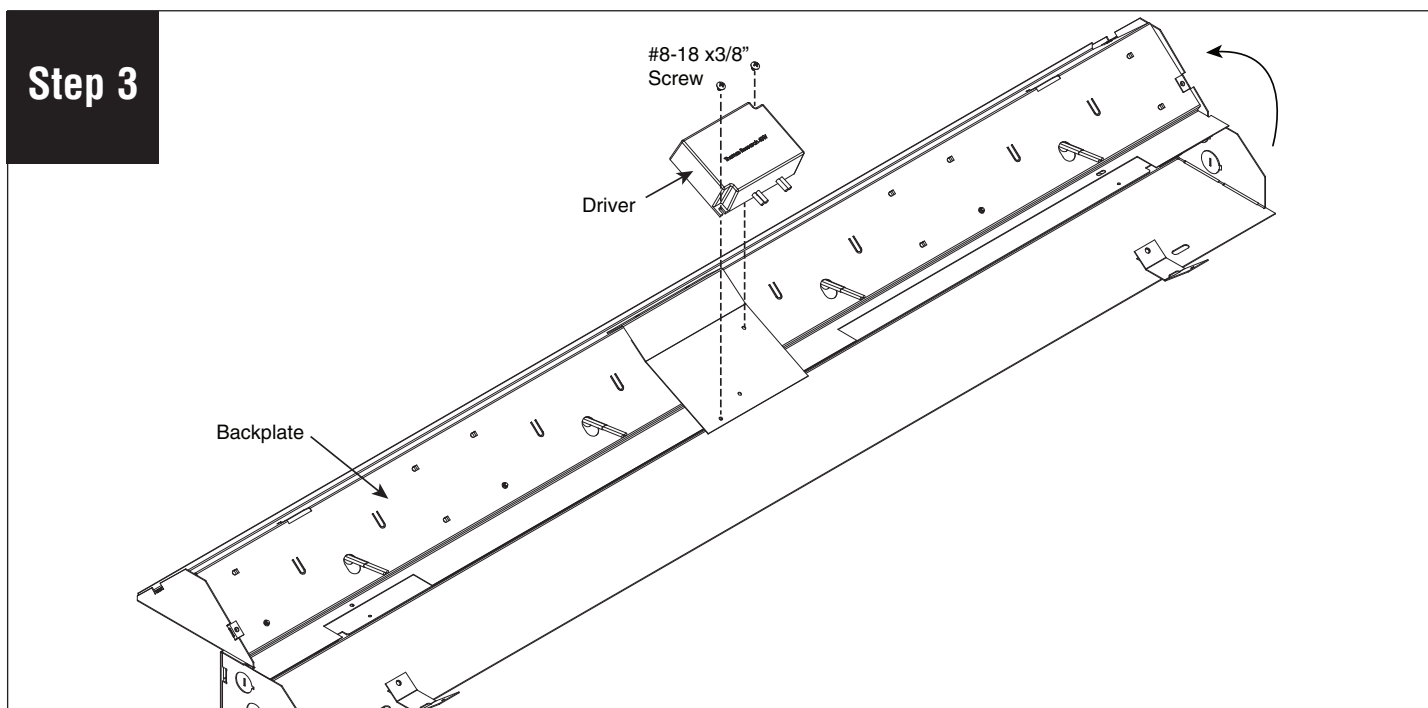

Lift backplate and flip over. Unplug ballast disconnect and remove screws from driver. Replace new driver and reconnect ballast disconnect. Install screws to secure driver.

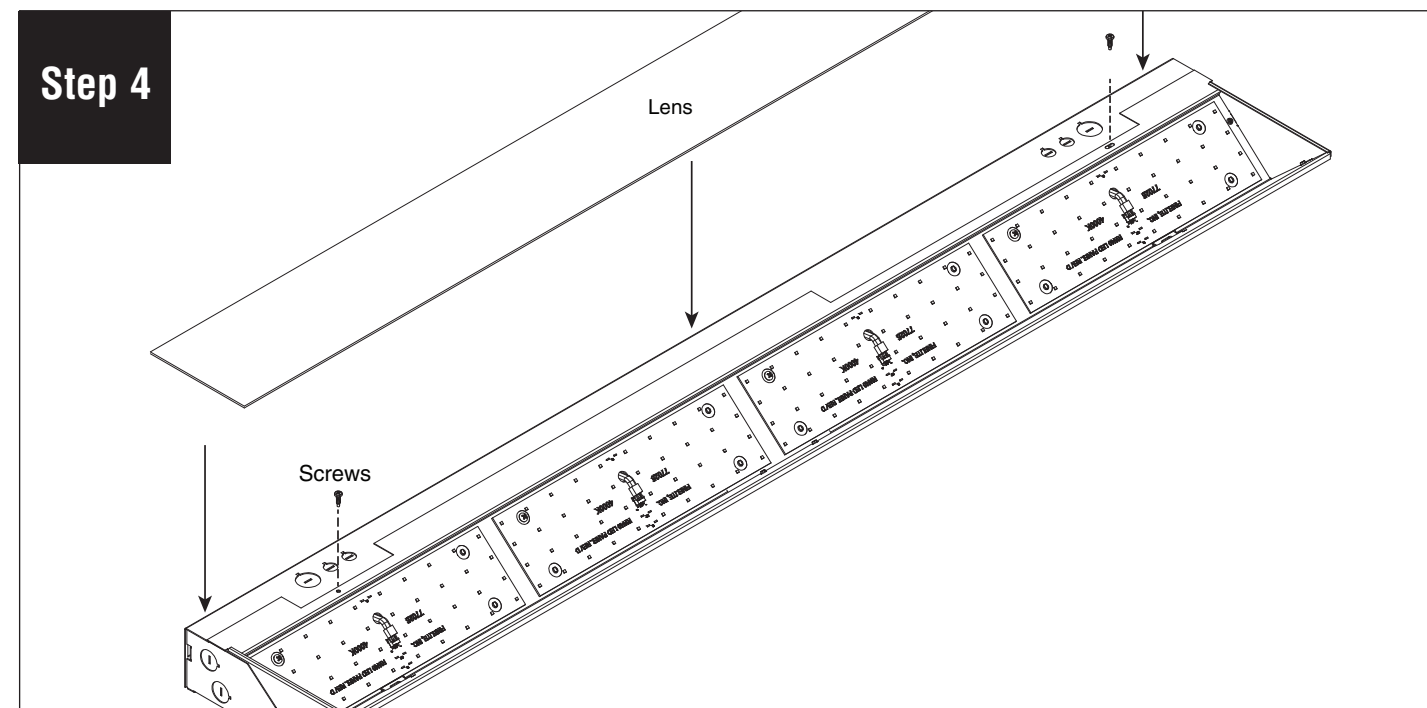

Replace backplate, secure with screws, and replace lens.