


Series 19 Driver Replacement Installation Instructions

Overview

FINELITE[®]
Better Lighting


- NOTES**
- All power connections should be installed according to local/national codes by a Certified Electrician.

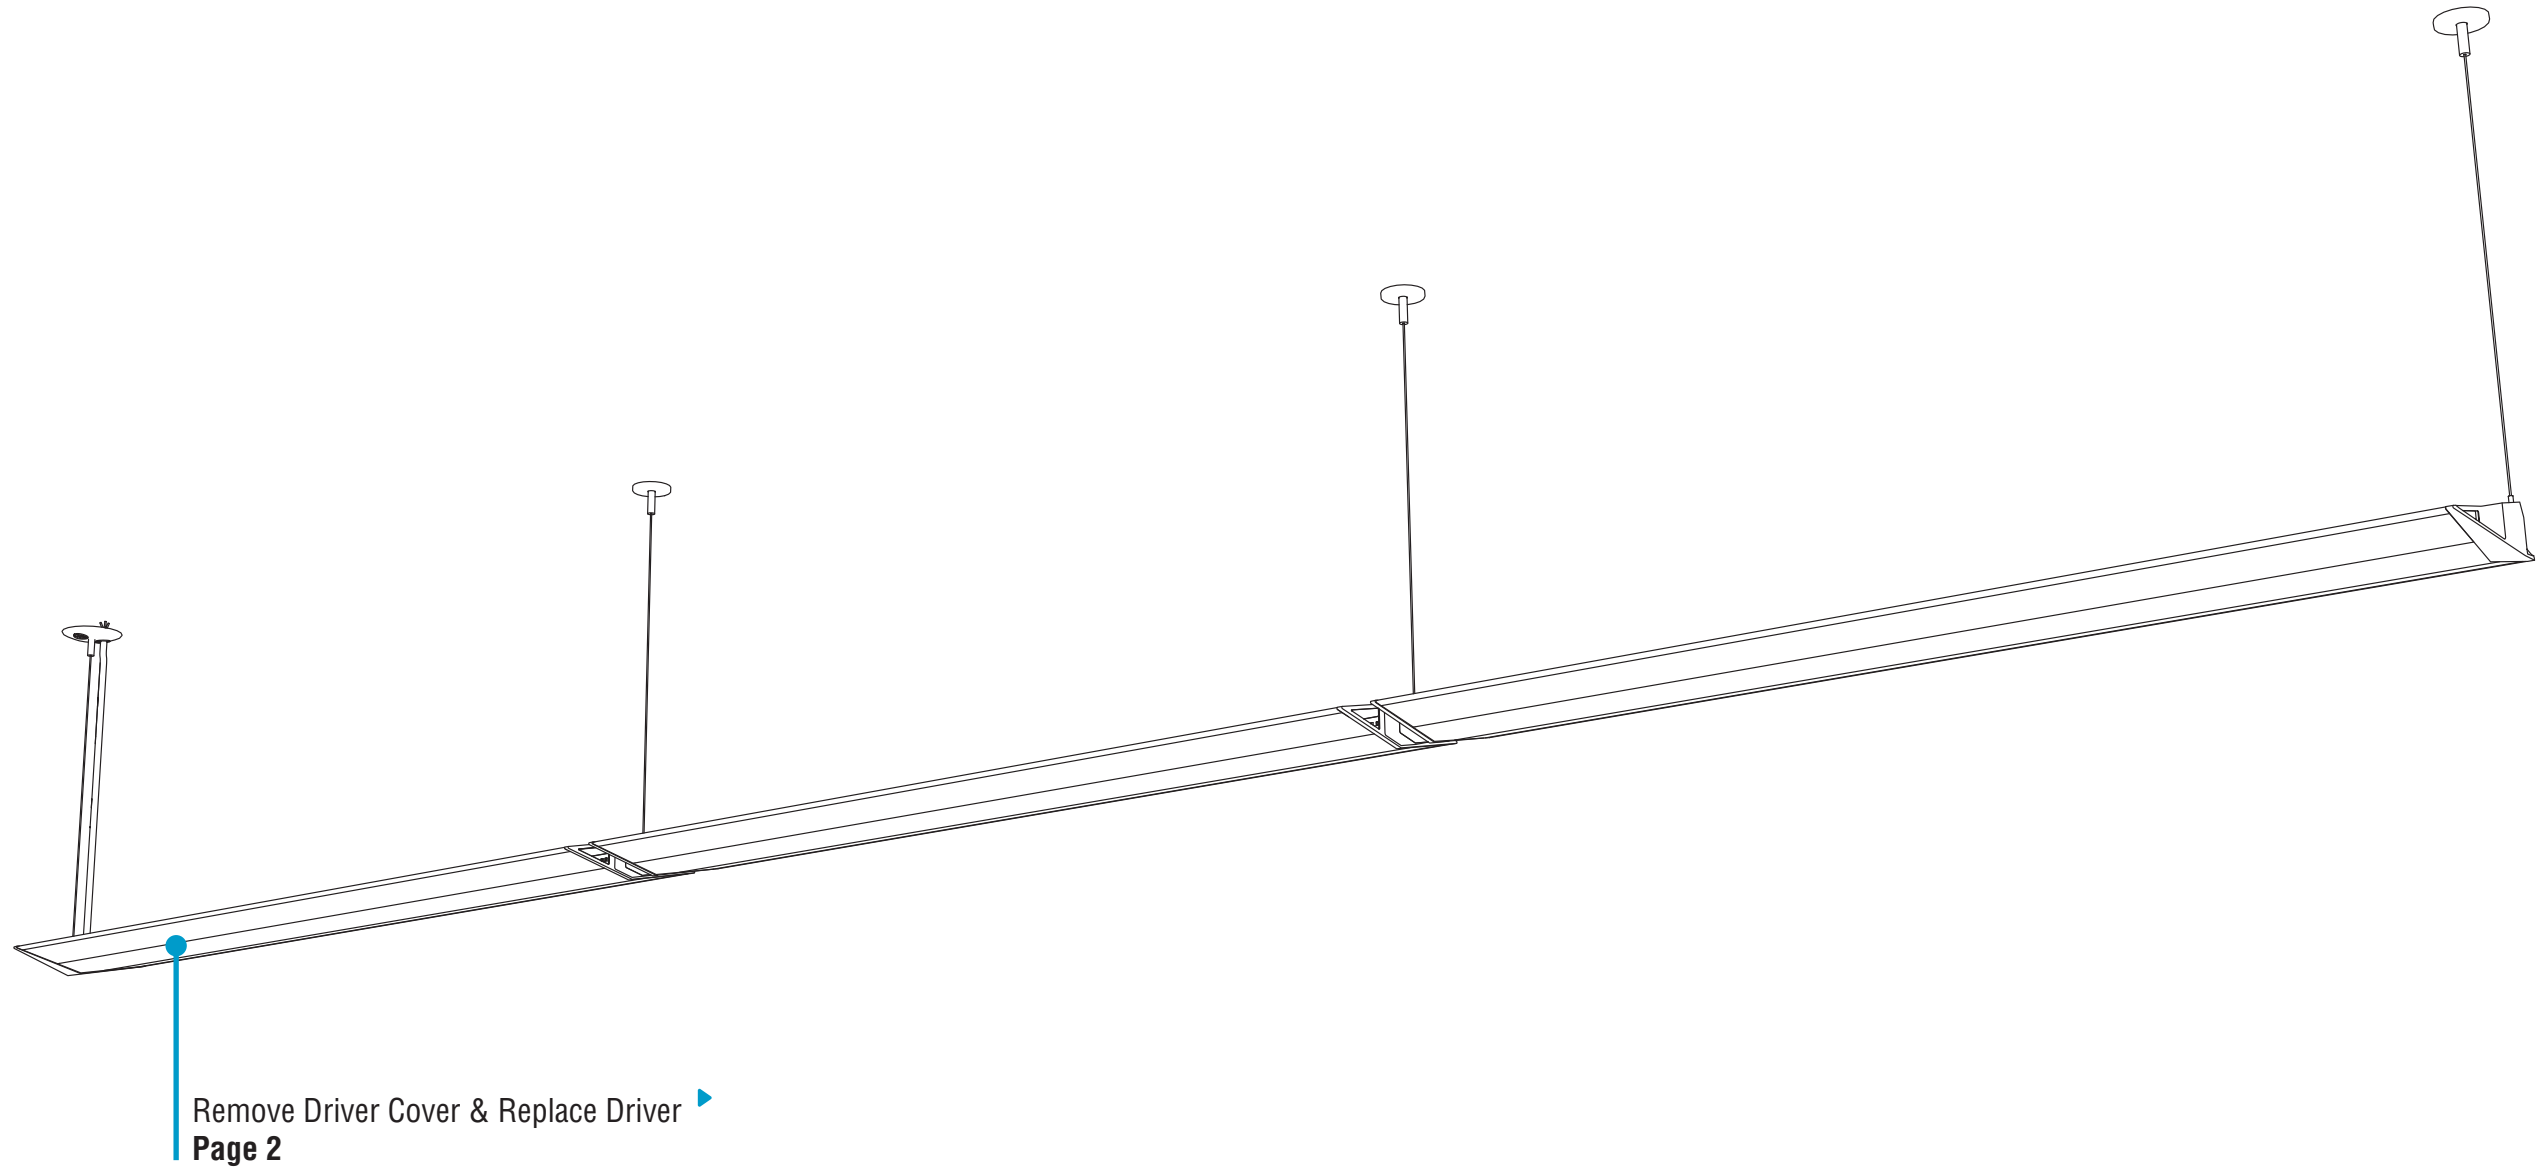

Series 19 Driver Replacement Installation Instructions


Remove Driver Cover & Replace Engine

A. Remove Access Plates Top-Down View

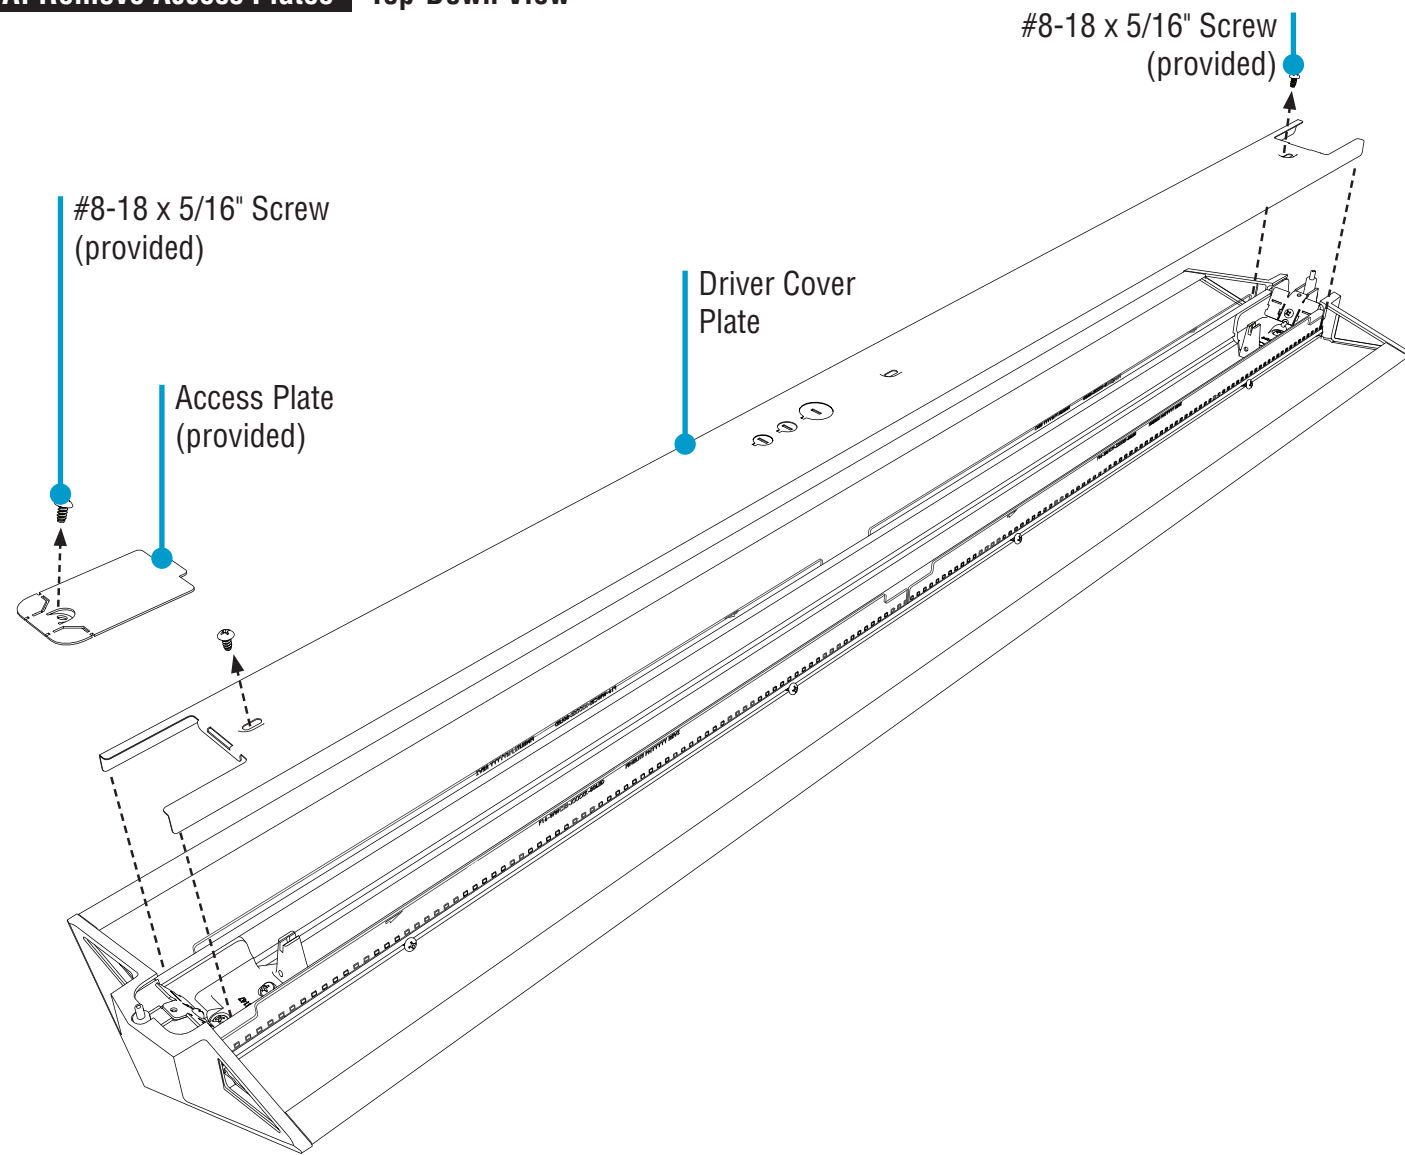

- Remove #8-18 x 5/16" screws from access plates & driver cover.
- Remove access plates and driver cover.

B. Replace Driver Top-Down View

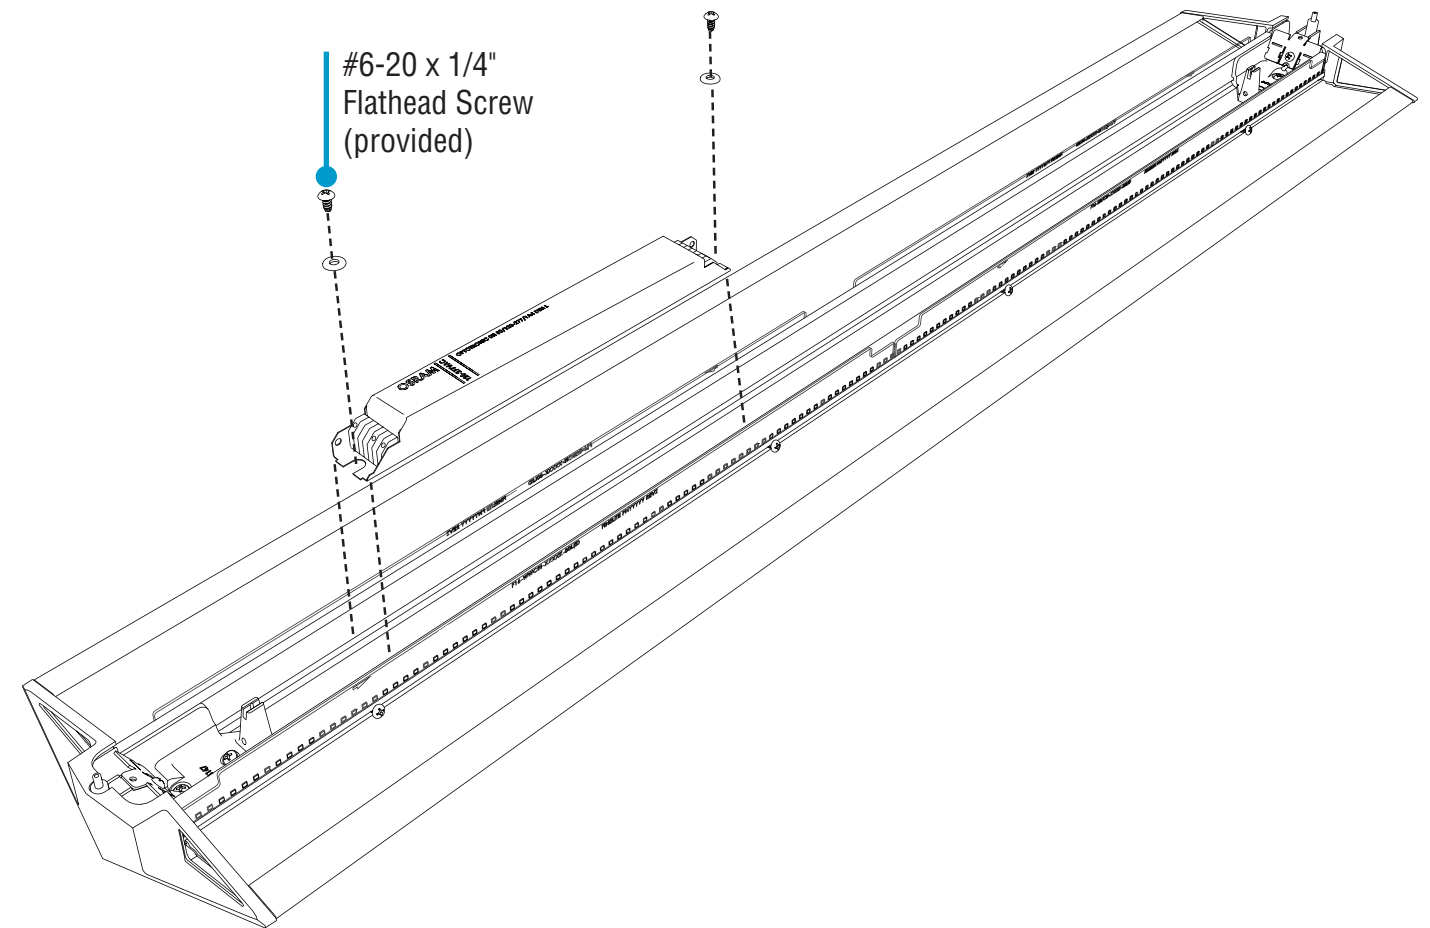


- Disconnect driver from driver harness.
- Remove #6-20 x 1/4" flathead screws.
- Remove driver from luminaire. Replace new driver.
- Reconnect driver harness to new driver
- Replace access plates & driver cover.
- Turn power on.



#8-18 x 5/16" Screws
(provided)


 
#6-20 x 1/4" Flathead Screws
(provided)



Driver Harness
Part # 15501