
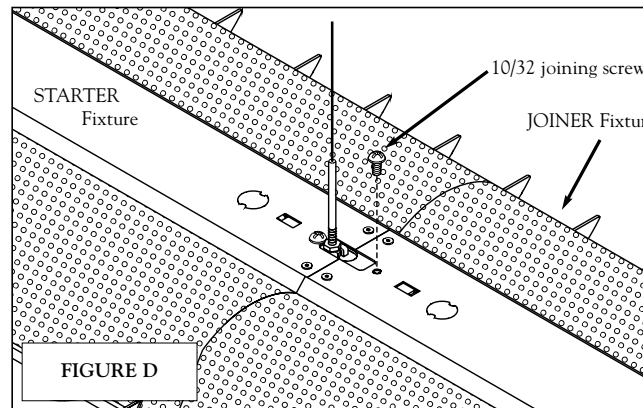
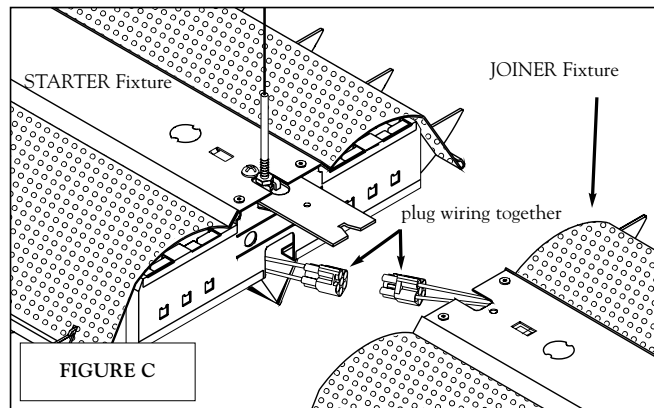
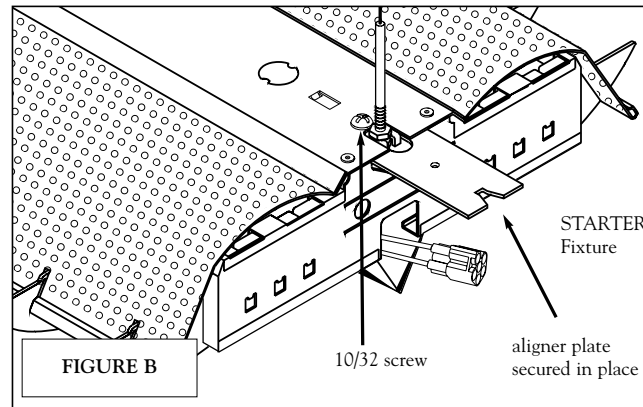


# FINELITE

## Series 4 Joining Instructions (Semi-Adjustable Cable)\*

DO NOT attempt to join fixtures together on the floor. Damage may result when lifted. Follow these instructions.

### INSTRUCTIONS

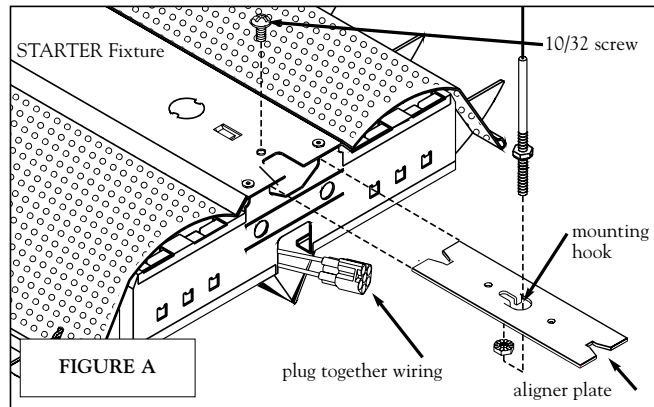

Perforations not to scale.

\* Pictured with Standard Semi-Adjustable Air Craft Cable Assembly. See additional instructions for Fully Adjustable Air Craft Cable hardware.

Finelite, Inc. ◊ 30500 Whipple Road ◊ Union City, CA 94587-1530 ◊ 510 / 441-1100 ◊ FAX: 510 / 441-1510 ◊ www.finelite.com

**STEP 1.** Hang STARTER Fixture: at endcap end of fixture place bottom kep nut of Air Craft Cable assembly under mounting hook, rotate up to sit securely on mounting hooks, tighten securely (avoid over-tightening).

**STEP 2.** While supporting fixture, slide aligner plate into fixture (be sure mounting hook is facing down), and securely fasten with 10/32 screw (provided) **FIGURE A.**

**STEP 3.** Connect Air Craft Cable assembly, as described in STEP 1, into aligner plate at joint end of STARTER Fixture. **FIGURE B.**

**STEP 4.** Hang far end of JOINER Fixture while supporting both ends. At joint end of JOINER Fixture connect plug together wiring between STARTER and JOINER fixtures. Slide JOINER Fixture onto aligner plate. Push fixtures together. **FIGURE C.**

**STEP 5.** Secure aligner plate with 10/32 screw (provided) to complete connection. **FIGURE D.**

### FINAL CHECK—FIGURE D.

- Air Craft Cable assembly sits securely on mounting hook, bottom kep nut is tight.
- Plug together wiring is connected.
- Two 10/32 screws have been installed and are tightly in place in the aligner plate.

Repeat for remaining JOINER and ENDER fixtures to complete row.