FINELITE® Better Lighting


NOTES

- · All power connections should be installed according to local/national codes by a Certified Electrician.
- This installation requires proper support as each luminaire is being installed.






Dimming

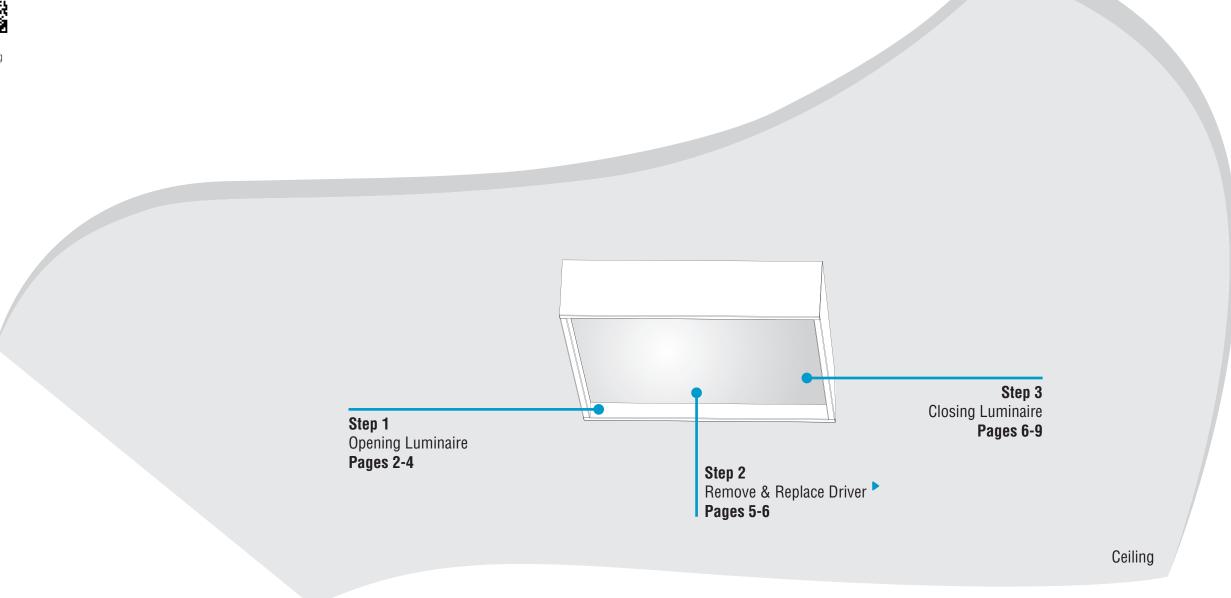



Step 1 - Opening Luminaire

FINELITE®
Better Lighting

A. Remove Diffuser Bottom-Up View

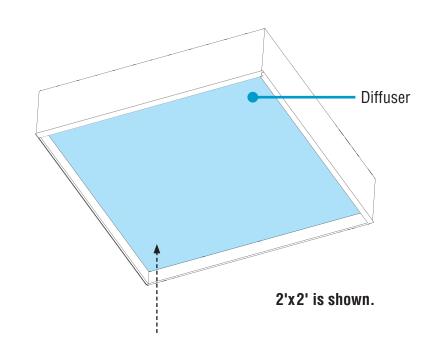

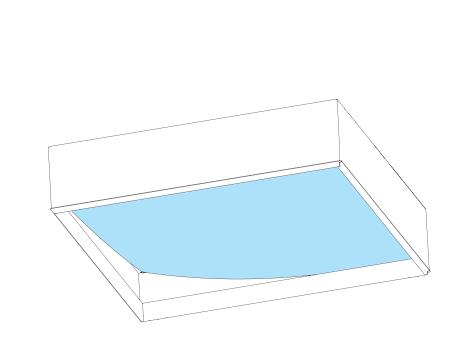

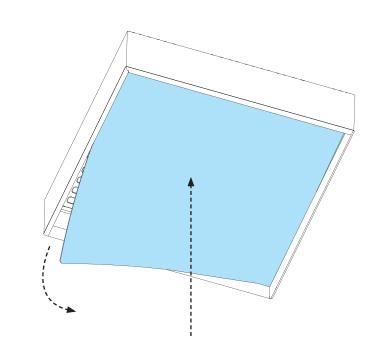

- CAUTION: Wear gloves to keep diffuser surface clean.
- Turn power off to luminaire.
- Gently push any corner of the diffuser upward into the body.


- Once the diffuser is pushed up, grab the corner of the diffuser using your finger as a hook.
- Once the corner is hooked, gently press the center of the diffuser upward into the body. At the same time, pull the hooked corner out of the body as you gently bend the diffuser.
- Continue pulling from one corner to the next in order to dislodge the diffuser with a zipper-like motion until the diffuser is completely removed.
- Set aside all diffusers to prevent from getting dirty or damaged.
- Ensure diffuser can be clearly identified back to its corresponding luminaire.


Step 1 - Opening Luminaire



B. Remove Backpanel

2'x2'

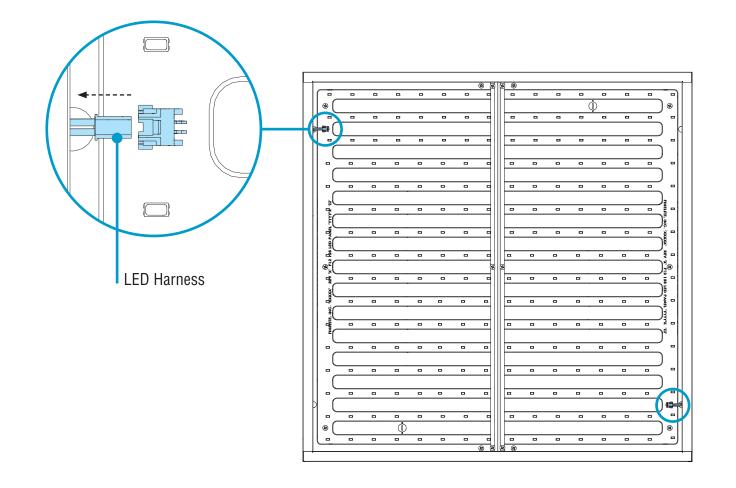

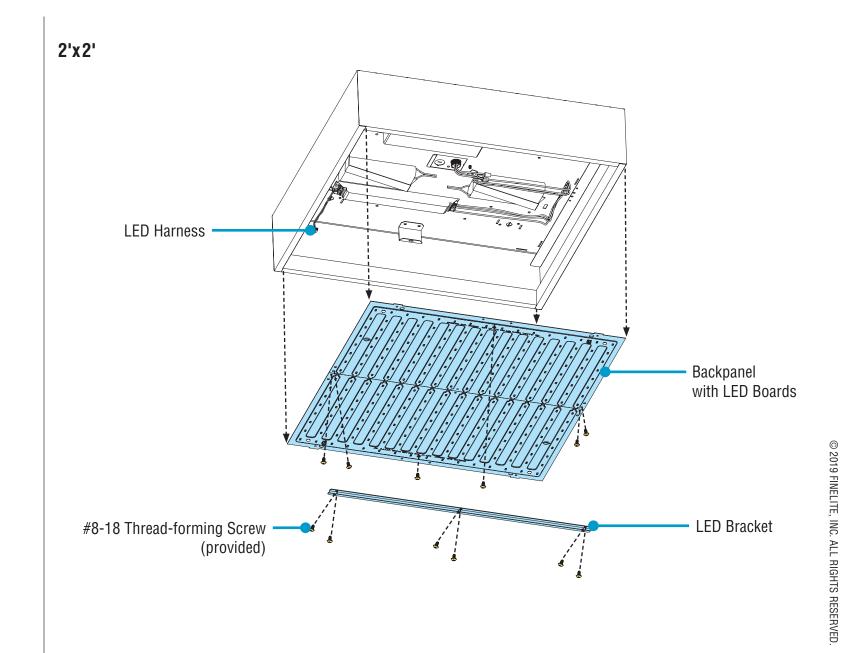

• Disconnect LED Harnesses.


• Remove backpanel with LED boards and LED bracket by removing the #8-18 thread-forming screws.

Step 1 - Opening Luminaire




B. Remove Backpanel - Continued Bottom-Up View

3'x3' & 4'x4'

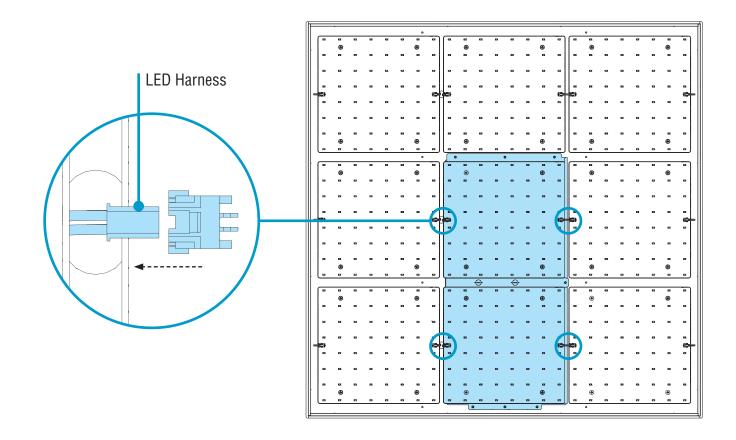

3'x3' is shown.

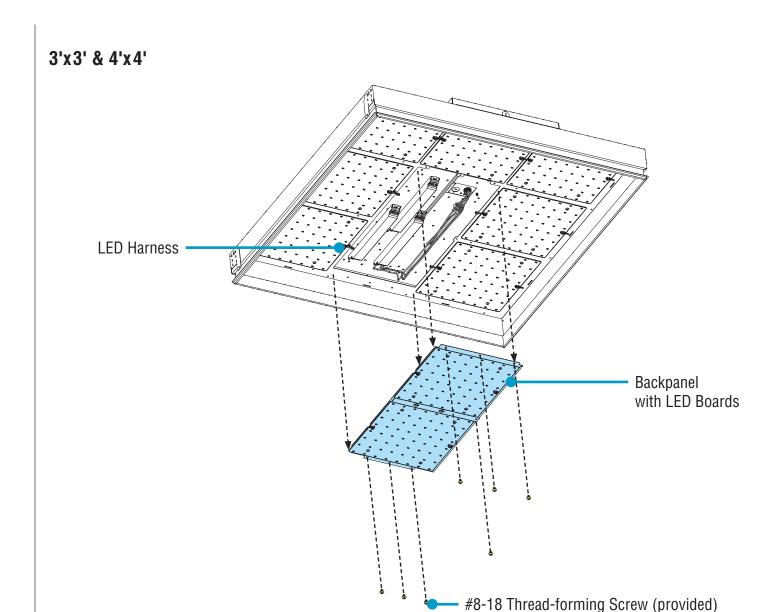

• Remove backpanel with LED boards by removing the #8-18 thread-forming screws.


[·] Disconnect LED Harnesses.

Step 2 - Remove & Replace Driver

FINELITE® Better Lighting

Remove & Replace Driver Bottom-Up View

2'x2'

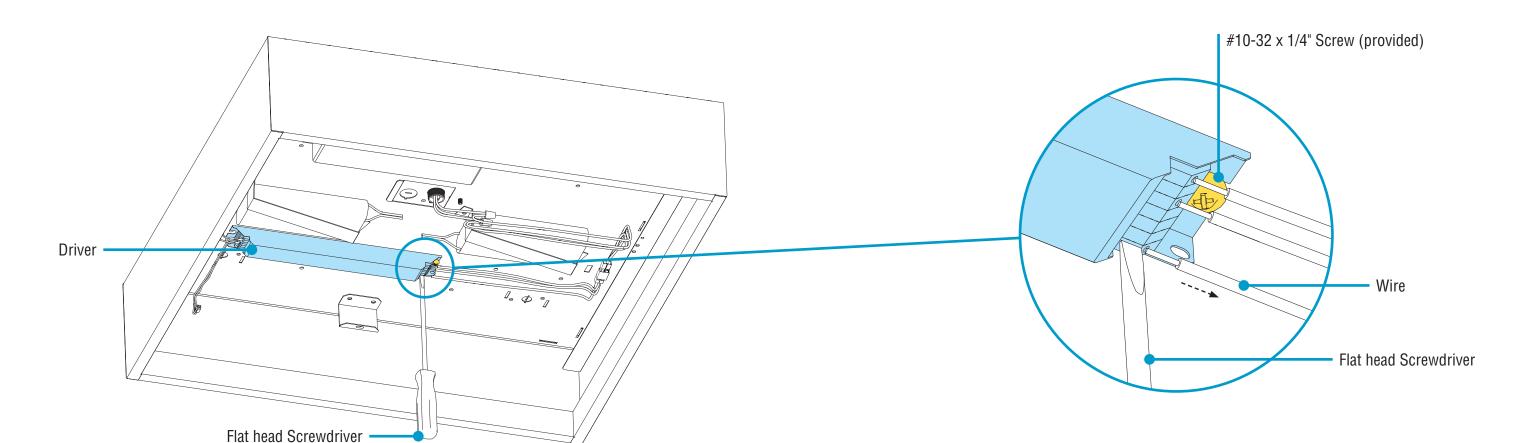

- Use flat head screwdriver to push connector head at each terminal to release wires from driver.
- Remove #10-32 x 1/4" screw from both ends of driver.
- · Remove old driver and replace with new driver.
- Replace #10-32 x 1/4" screw at both ends of new driver.
- Use flat head screwdriver to push connector head at each terminal to reconnect wires to new driver.

CONTINUED




© 2019 FINELITE, INC. ALL RIGHTS RESERVED. Form - 98447. V2 EFFECTIVE DATE: 05/28/19

Step 2 - Remove & Replace Driver

FINELITE® Better Lighting

Remove & Replace Driver - Continued Bottom-Up View

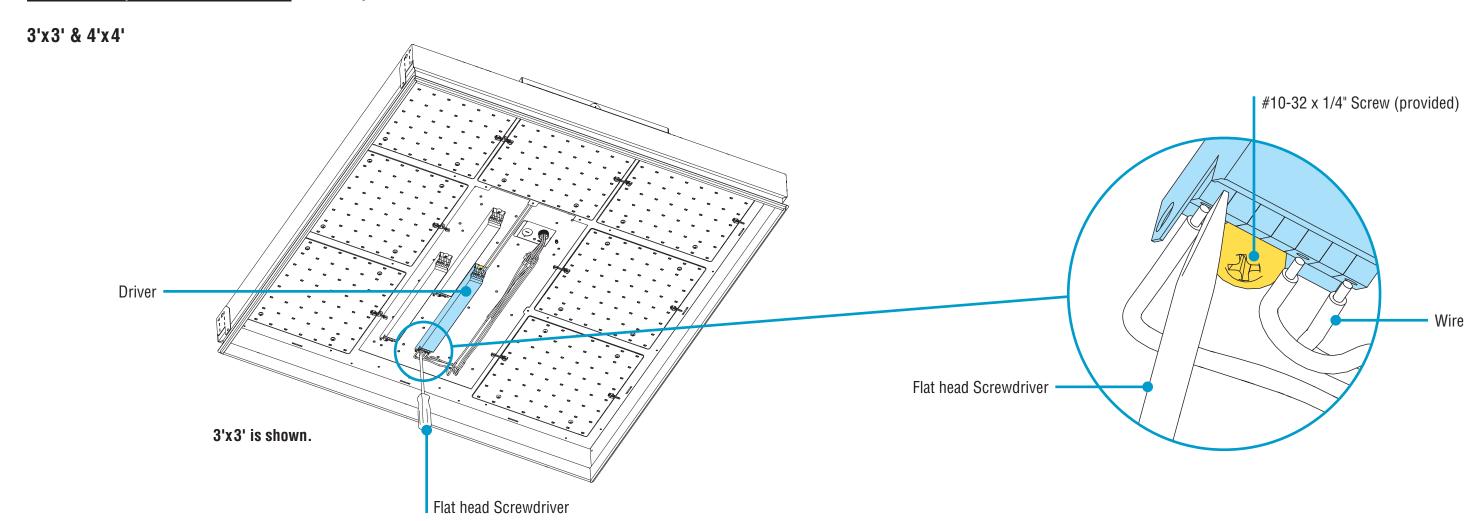


- Use flat head screwdriver to push connector head at each terminal to release wires from driver.
- Remove #10-32 x 1/4" screw from both ends of driver.
- · Remove old driver and replace with new driver.
- Replace #10-32 x 1/4" screw at both ends of new driver.
- Use flat head screwdriver to push connector head at each terminal to reconnect wires to new driver.
- NOTE: Repeat this step for each driver that needs to be replaced.



Step 3 - Closing Luminaire



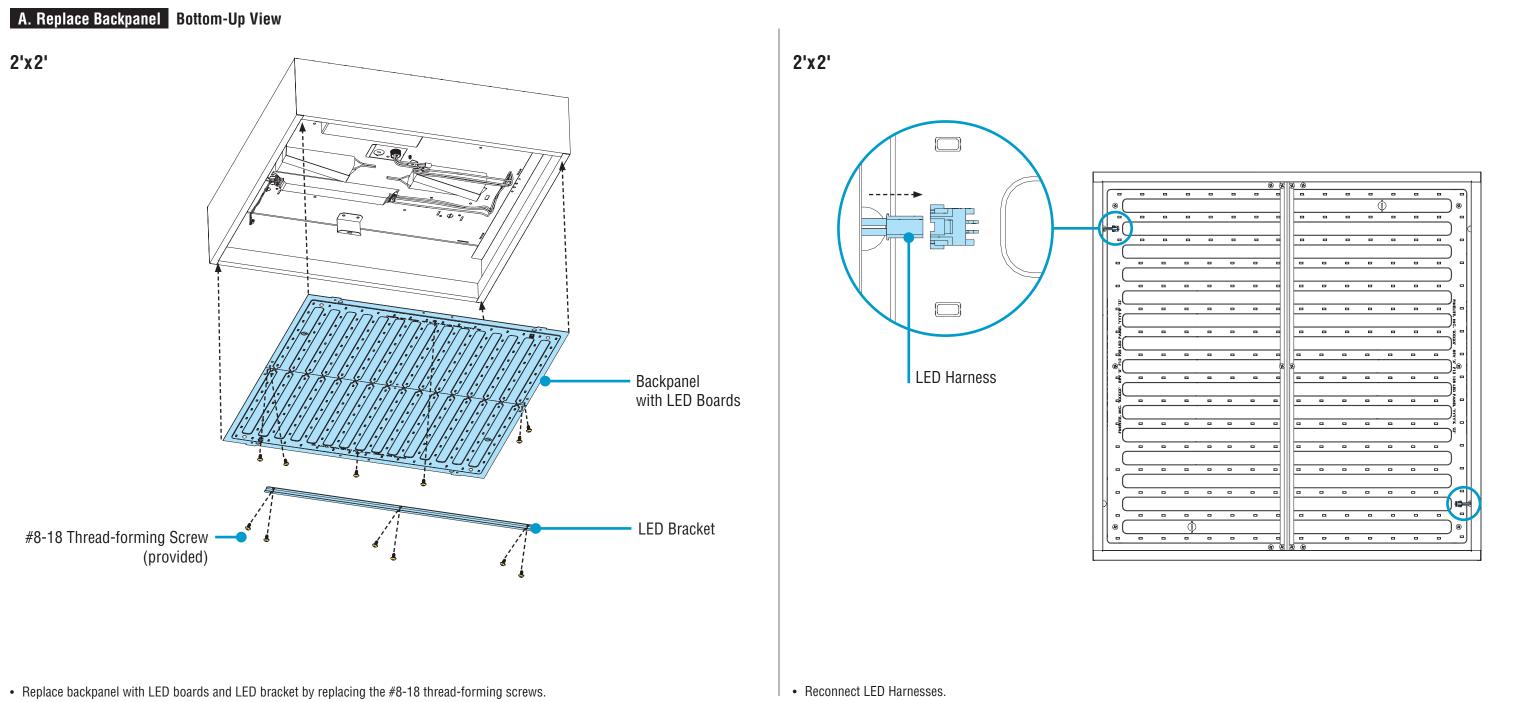


Step 3 - Closing Luminaire




A. Replace Backpanel - Continued Bottom-Up View

3'x3' & 4'x4'

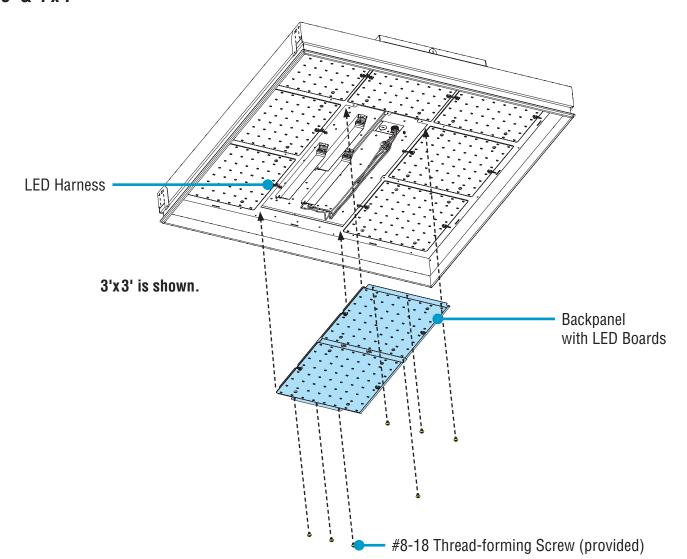

3'x3' & 4'x4'

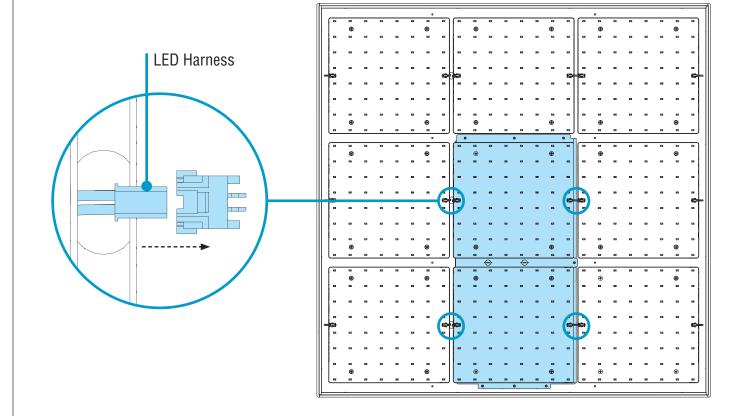


• Replace backpanel with LED boards by replacing the #8-18 thread-forming screws.


· Reconnect LED Harnesses.


Step 3 - Closing Luminaire

FINELITE® Better Lighting

B. Final Step - Replace Diffuser Bottom-Up View

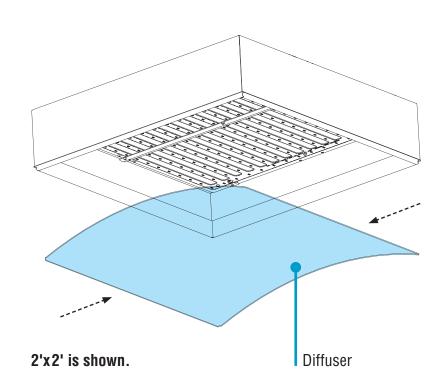

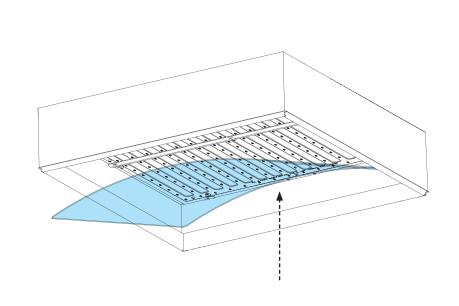

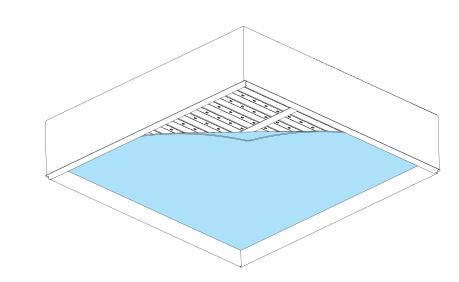

- CAUTION: Wear gloves to keep diffuser surface clean.
- CRITICAL: Be sure to install correct diffuser to its corresponding luminaire ID.
- Hold diffuser on either side as indicated by the arrows.
- Gently bend diffuser.

- Place one edge of the diffuser into the luminaire.
- Push the rest of the diffuser into the luminaire from one corner to the next.
- Push a corner into the luminaire and then work your way across diffuser to the next corner.
- Turn power on to luminaire.