



HP-WG LED Engine Replacement Installation Instructions

A. Open Kickplate Bottom-Up View

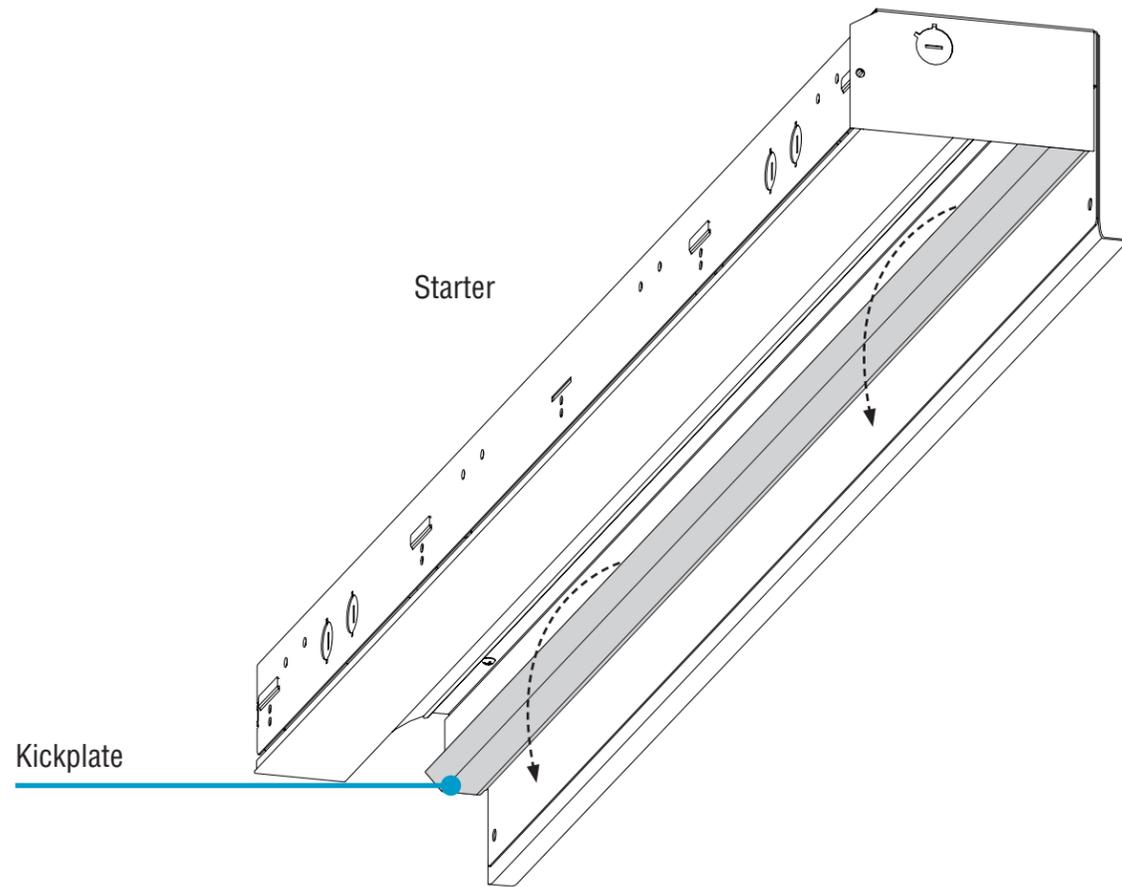

Turn off power. Unsnap kickplate.


B. Remove Carrier Side View

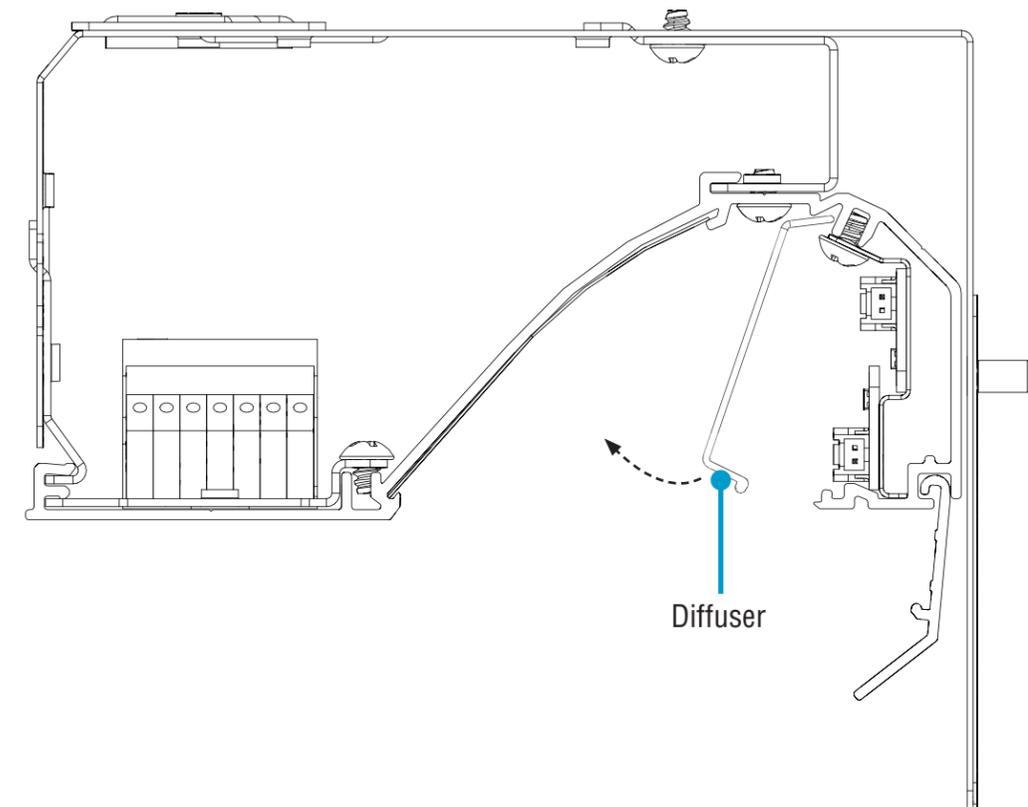

Unsnap the diffuser to remove it from the luminaire. We recommend using a putty knife. Set diffuser aside to prevent from getting or damaged.


HP-WG LED Engine Replacement Installation Instructions

C. Disconnect Feed Harnesses Side View

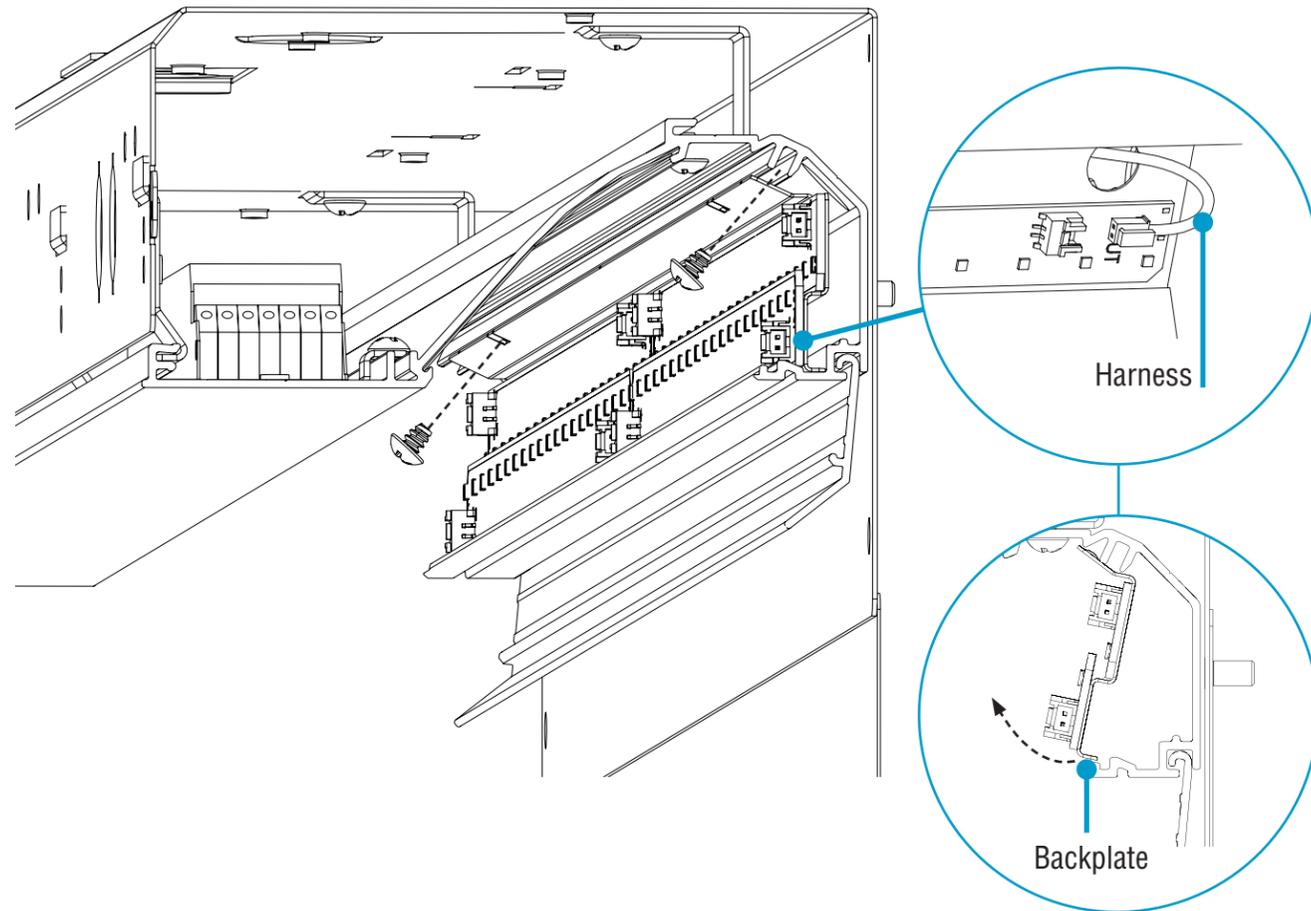

Remove two #8-18 x 1/4" screws that hold the backplate to carrier. Unplug harness and shunt. Keep shunt to put on the new LED board.

D. Replace LED Board Side View

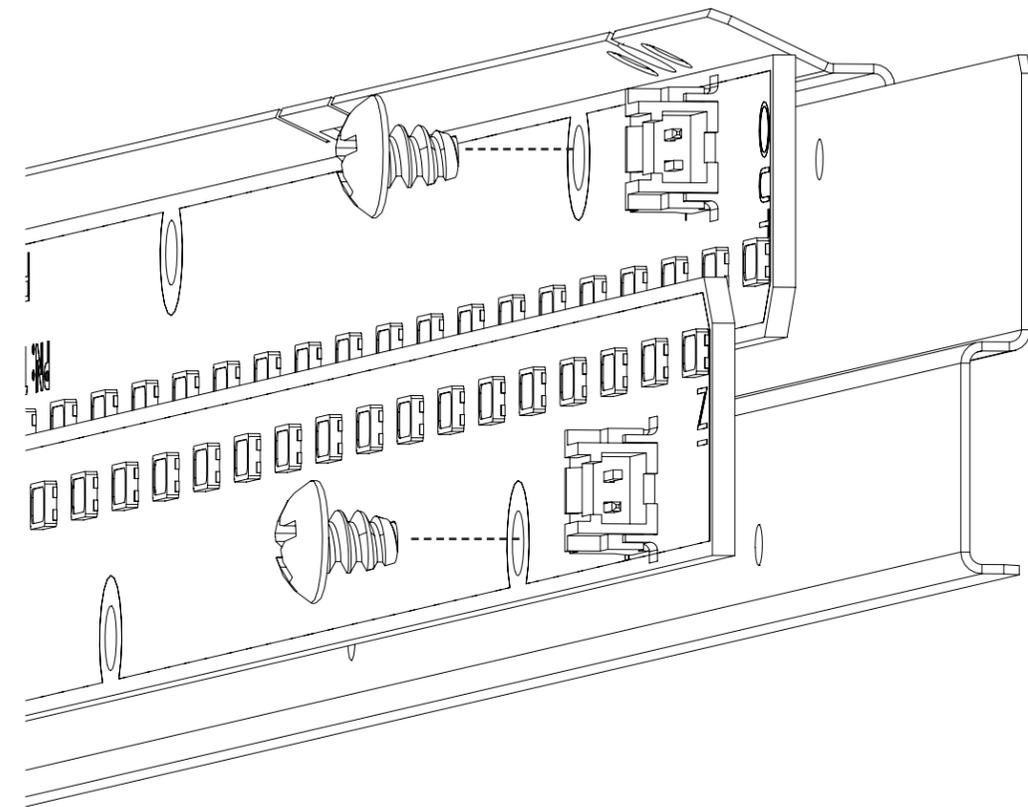

Remove #8-18 x 1/4" screws from LED board and install new LED board. Reconnect wiring and reinstall carrier by hooking to the luminaire housing brackets and securing with #8-18 x 1/4" screw. **Reinstall diffuser and turn power on to luminaire.**

 #8-18 x 1/4" Screw(s)
(provided)

 Shunt
(provided)