

# HP Perimeter Slot (HP-WS) LED Engine Replacement Installation Instructions

## NOTES

- All power connections should be installed according to local/national codes by a Certified Electrician.



HELPFUL  
VIDEOS




0-10V  
Dimming





LED Engine  
Replacement

### A. Remove Diffuser

4W

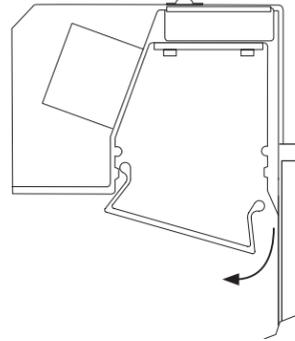


6W

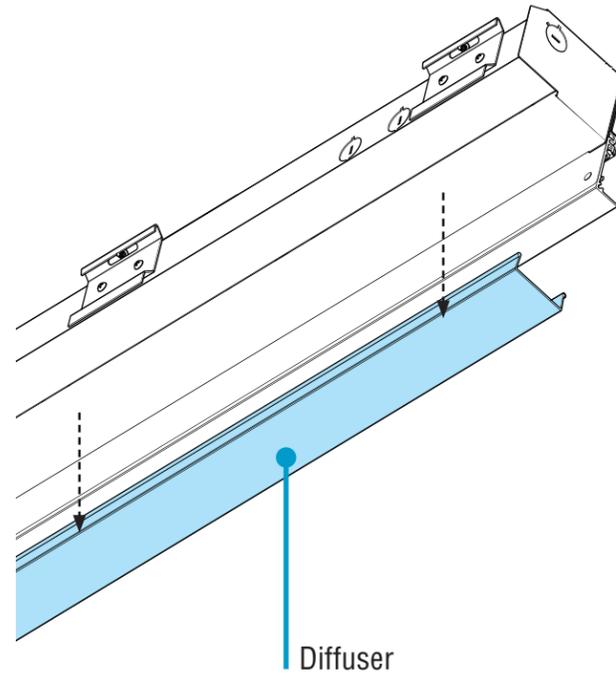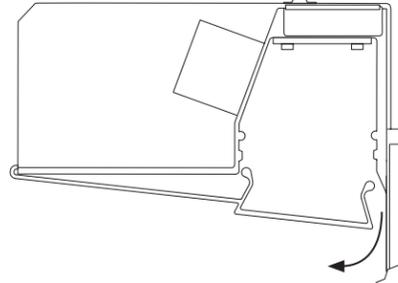

- Turn off power.
- Remove diffuser and set aside to prevent it from getting dirty or damaged.


### B. Remove Carrier Assembly

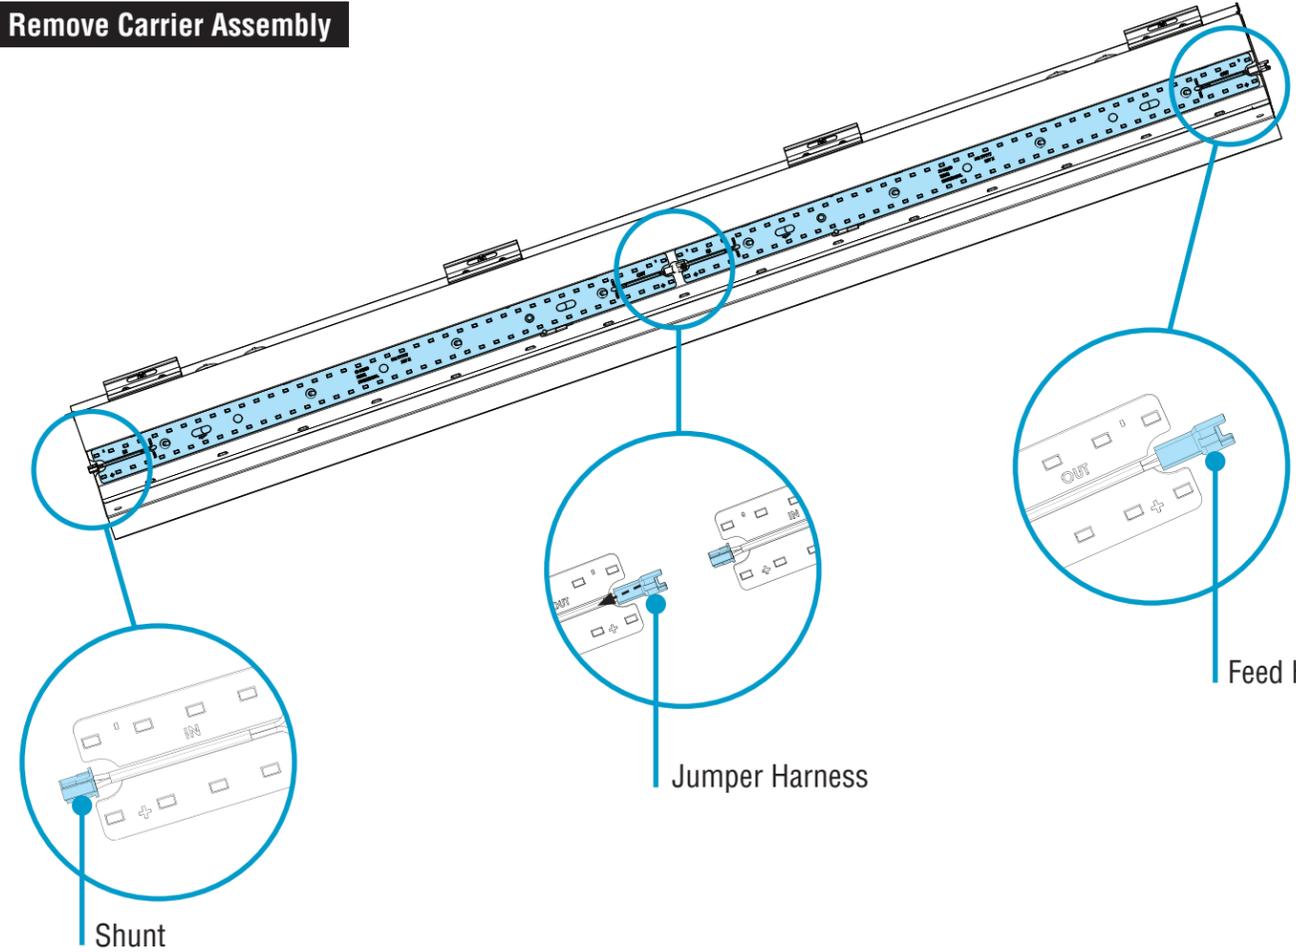

- Disconnect the feed harness, jumper harnesses and shunt from LED boards.


# HP Perimeter Slot (HP-WS) LED Engine Replacement Installation Instructions

## C. Remove LED Engine

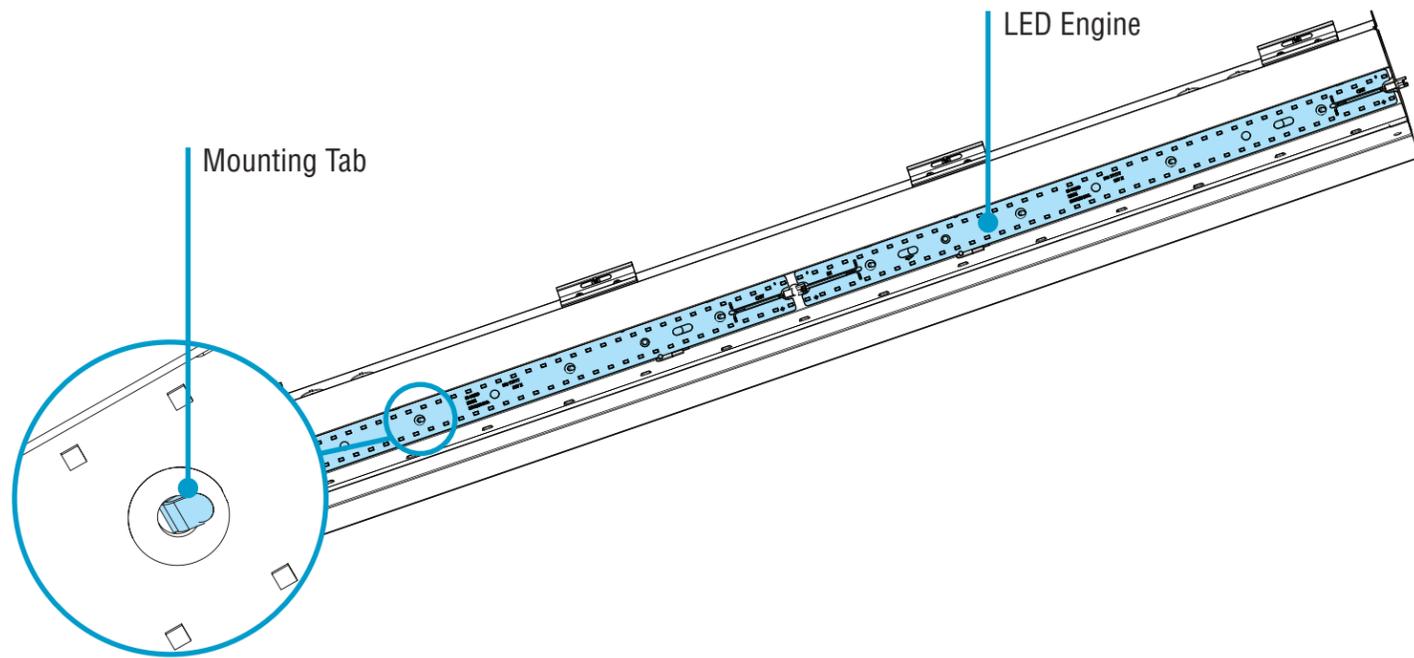

- Shift LED board away from mounting tabs.
- Bend tabs open if needed.

## D. Replace LED Boards

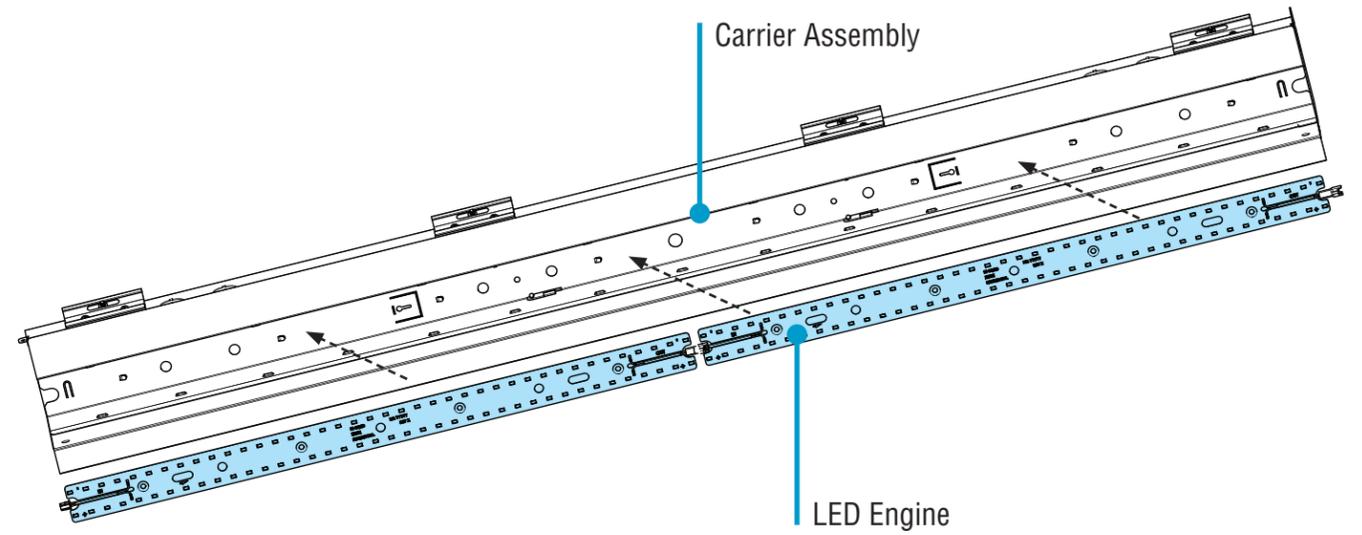

- Lift LED engine away from the carrier assembly.
- Replace the LED engine, bend tabs down to secure.
- Reconnect feed harness, jumper harnesses and shunt.
- Reinstall diffuser(s) and turn power on to fixture.