# HP-2 / HP-4 Wall Mount Indirect/Direct Installation Instructions

**Regressed Luminaires** Use Same Instructions

## Overview

- **NOTES**
- If luminaire contains a sensor or socket refer to the appropriate Addendum.
  - All power connections should be installed according to local/national codes by a Certified Electrician.
  - This installation requires proper support as each luminaire is being installed.
  - DO NOT attempt to join luminaires together on the floor. Damage may result when lifted.



VIDEOS



Louver

Removal


0-10V Dimming

Effortless Access

Socket Removal Universal & & Installation **Robust Joints** 

回热回

Simple Plug-Together

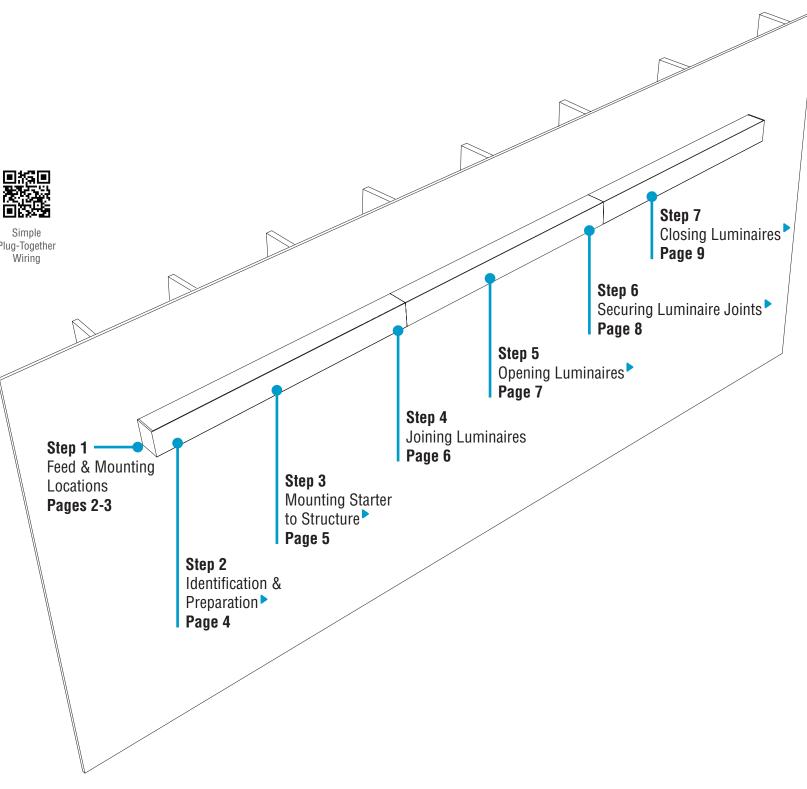




## HP-2 / HP-4 Wall Mount Indirect/Direct Installation Instructions Step 1 - Feed & Mounting Locations


#### J-Box & Feed Location

- Position luminaire on wall in desired location.
- Mark the top corner of the luminaire, not including the endcap. This is Point A. Use Point A to find and mark feed location.
- Use feed location to center and install 2x4 (single-gang) J-Box.
- Position and install starter wall rail. (See page 3.)

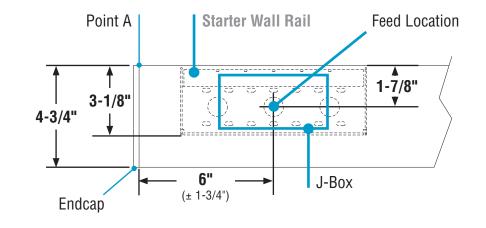

#### Mounting Locations

- X = Luminaire section length(X Measurements do not include endcaps)
- Position wall rails as indicated to the right.
- Center of starter wall rail is  $6" (\pm 3/4")$  from Point A.
- Ensure wall rail mounts are secured to proper structural support.

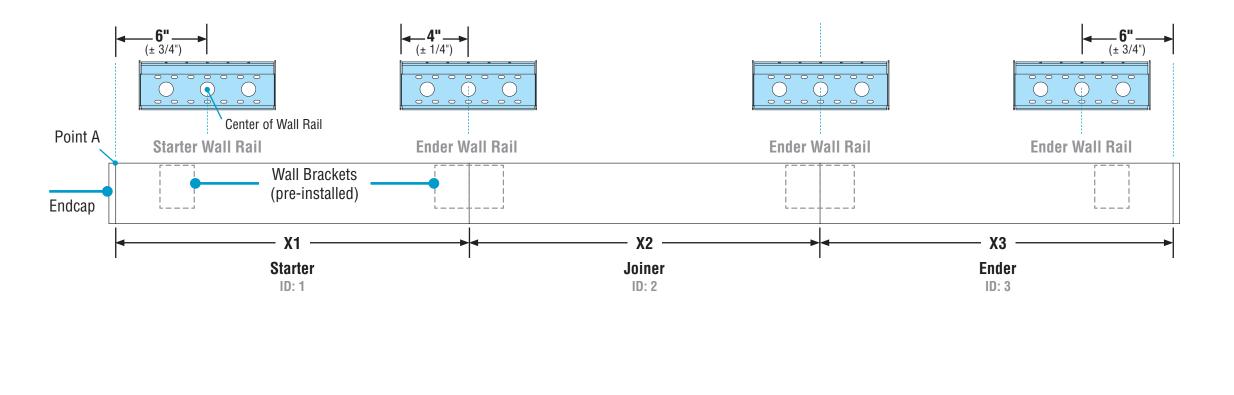







#### CONTINUED


2 of 9
 
## HP-2 / HP-4 Wall Mount Indirect/Direct Installation Instructions **Step 1** - Feed & Mounting Locations

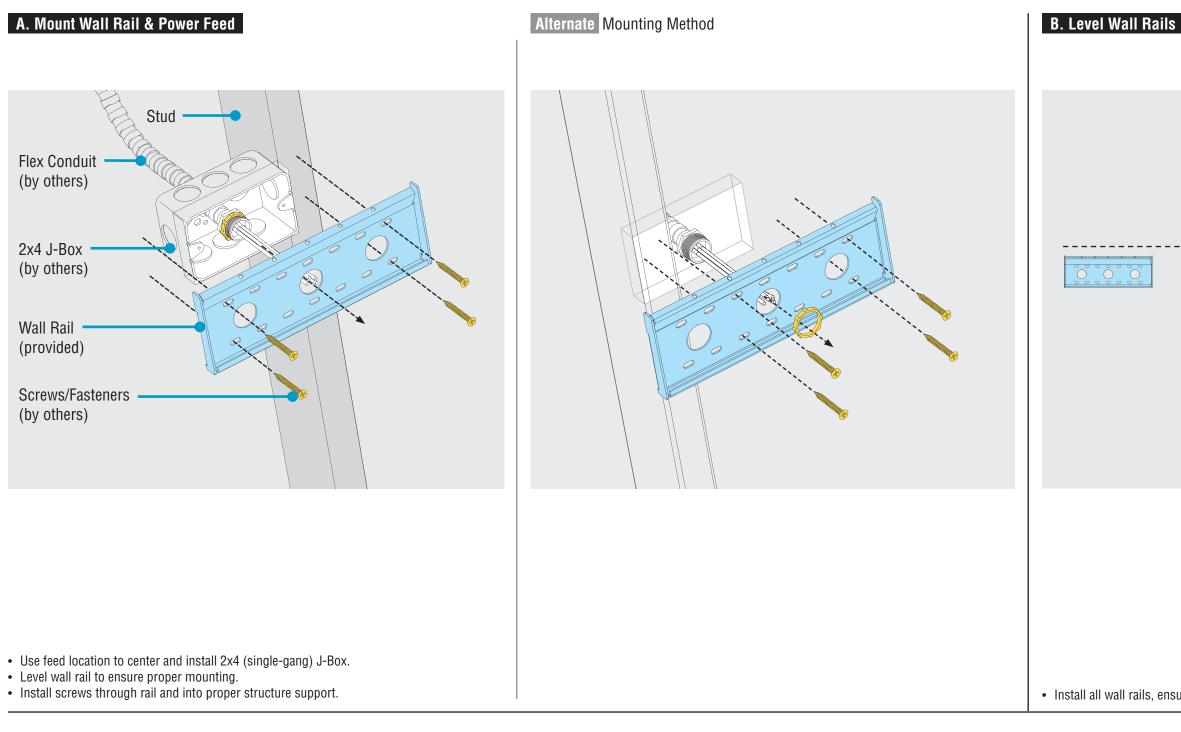






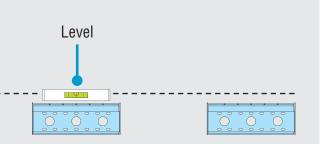

• Install all wall rails, ensuring they are level with each other.


3 of 9

## HP-2 / HP-4 Wall Mount Indirect/Direct Installation Instructions Step 2 - Identification & Preparation

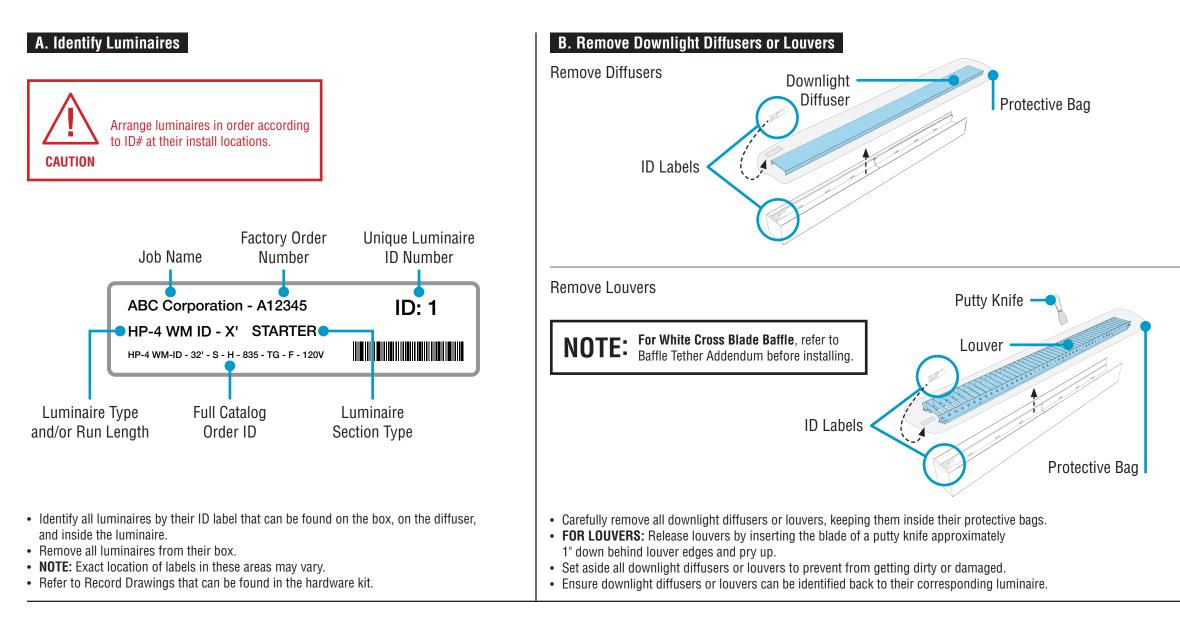

#### **Kitted Hardware**

 - Finelite has provided items listed here, with their Finelite part numbers. These items can be found in separate boxes shipped with the luminaire.
- Account for all parts and set aside until they are needed.
- All other hardware needed for this installation will be by others.




Wall Rail Part# 20081 Feed & Mounting Locations pp. 2-3, Step 1 #8-18 x 1/4" Mounting Screw Part# 94059 Mounting Starter to Structure p. 5, Step 3 Closing Luminaires p. 9, Step 7

Yoke Bracket Part# 45042

**#10-32 x 5/8"** Yoke Screw Part# 94144 Securing Luminaire Joints p.8, Step 6



## C. Remove Uplight Diffuser

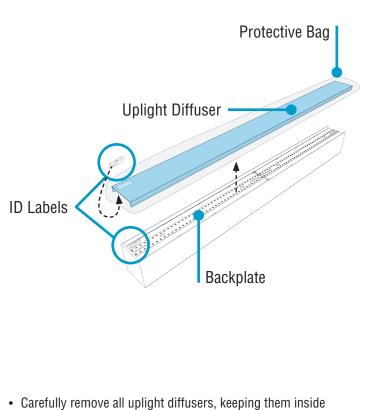


- their protective bag.
- Set aside all uplight diffusers to prevent from getting dirty or damaged.
- Ensure uplight diffusers can be identified back to their corresponding luminaire.



Louver Remova



## HP-2 / HP-4 Wall Mount Indirect/Direct Installation Instructions **Step 3** - Mounting Starter to Structure

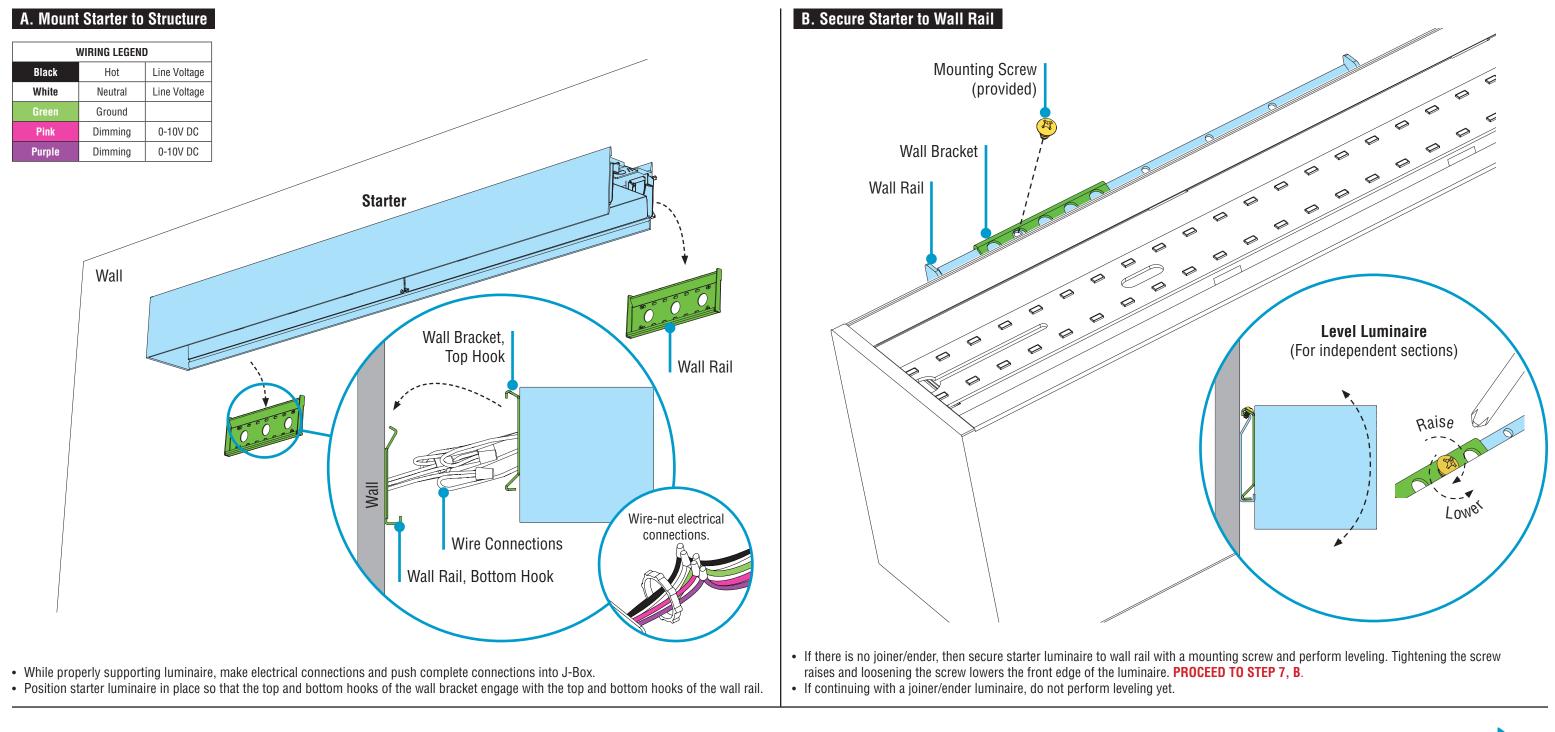








0-10V




# HP-2 / HP-4 Wall Mount Indirect/Direct Installation Instructions Step 4 - Joining Luminaires

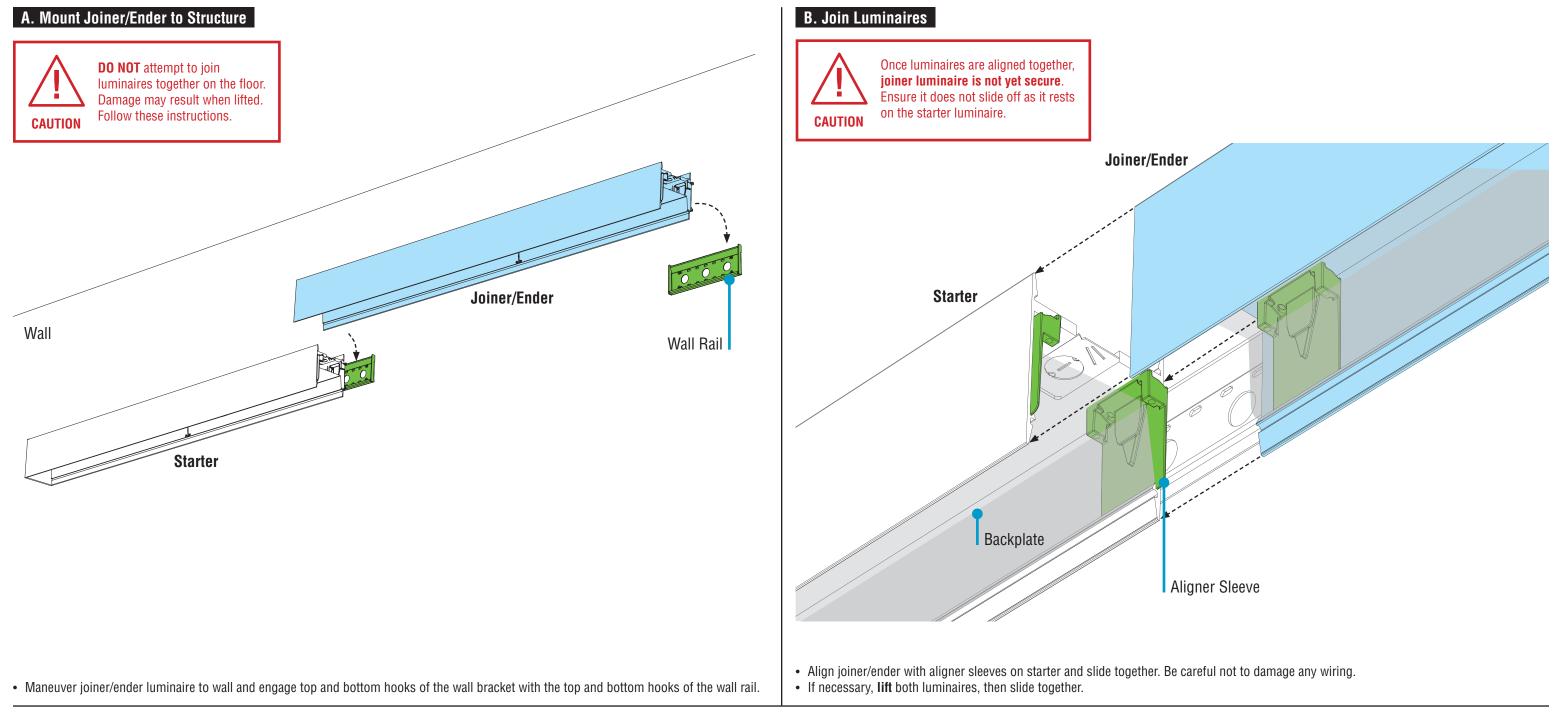



6 of 9

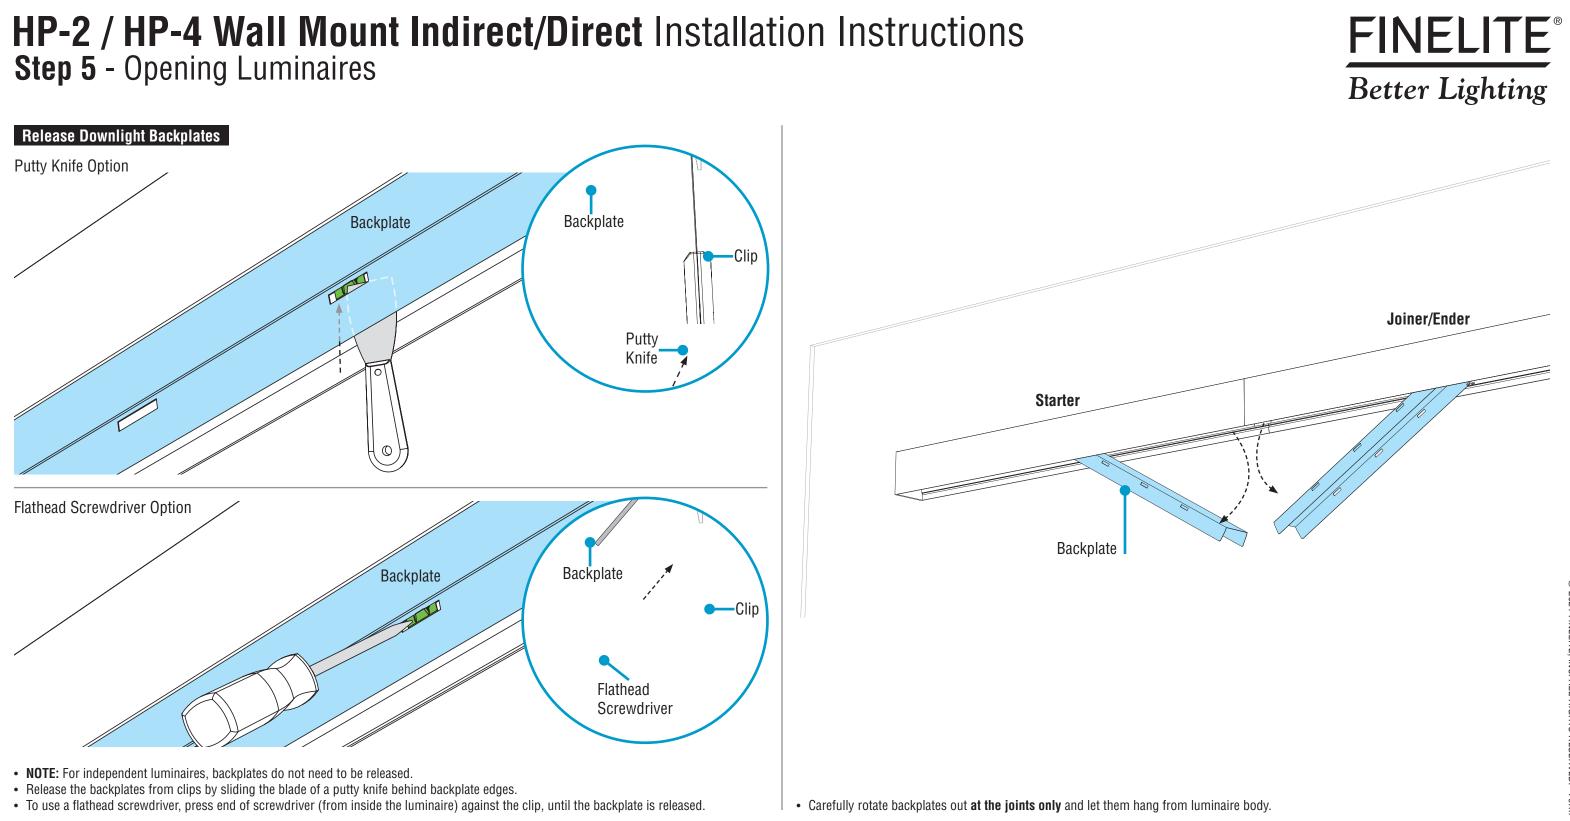




Effortless Access



## HP-2 / HP-4 Wall Mount Indirect/Direct Installation Instructions Step 6 - Securing Luminaire Joints

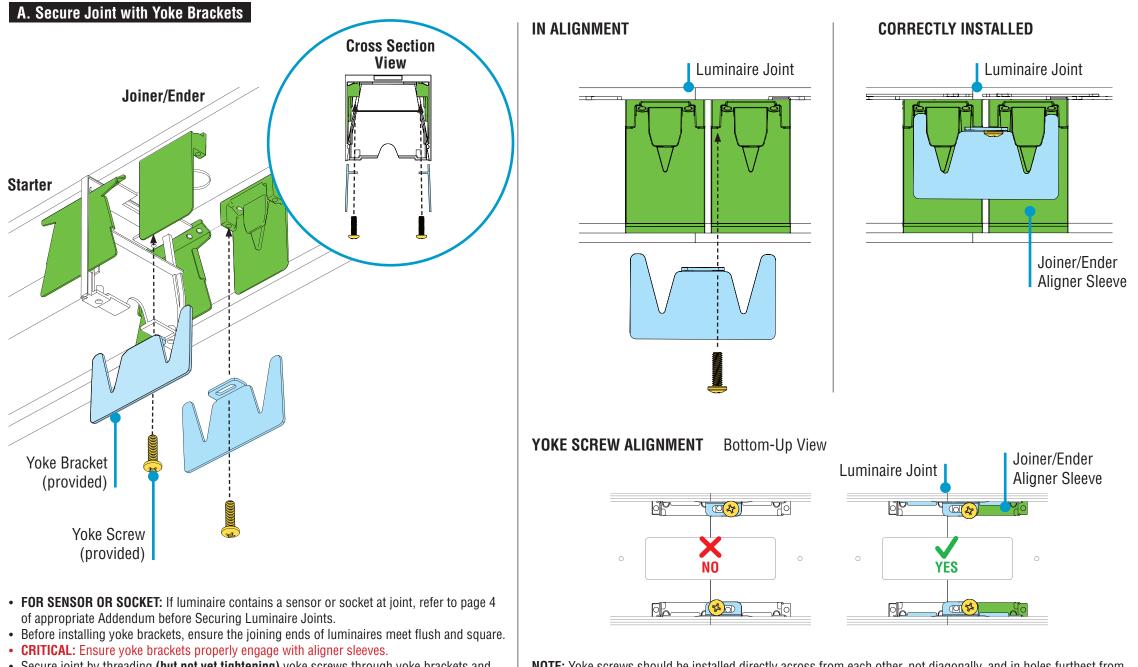


• Secure joint by threading (but not yet tightening) yoke screws through yoke brackets and into the aligner sleeves.

**NOTE:** Yoke screws should be installed directly across from each other, not diagonally, and in holes furthest from the joint line. One yoke screw per one yoke bracket.





### B. Make Electrical Connections

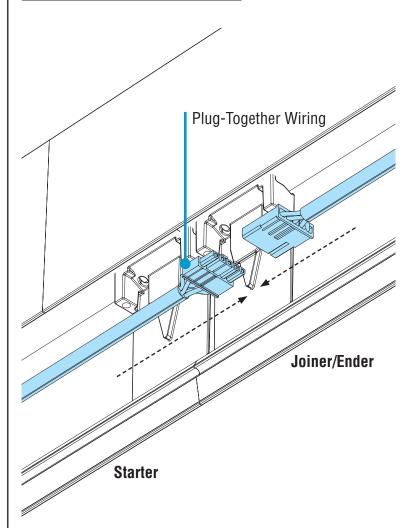

• Connect plug-together wiring.



Socket Removal & Installation



Universal & Robust Joints




Simple Plug-Together Wiring



© 2021 FINELITE, INC. ALL RIGHTS RESERVED. Form - 98524. V6 EFFECTIVE DATE: 09/2-

## HP-2 / HP-4 Wall Mount Indirect/Direct Installation Instructions **Step 7** - Closing Luminaires

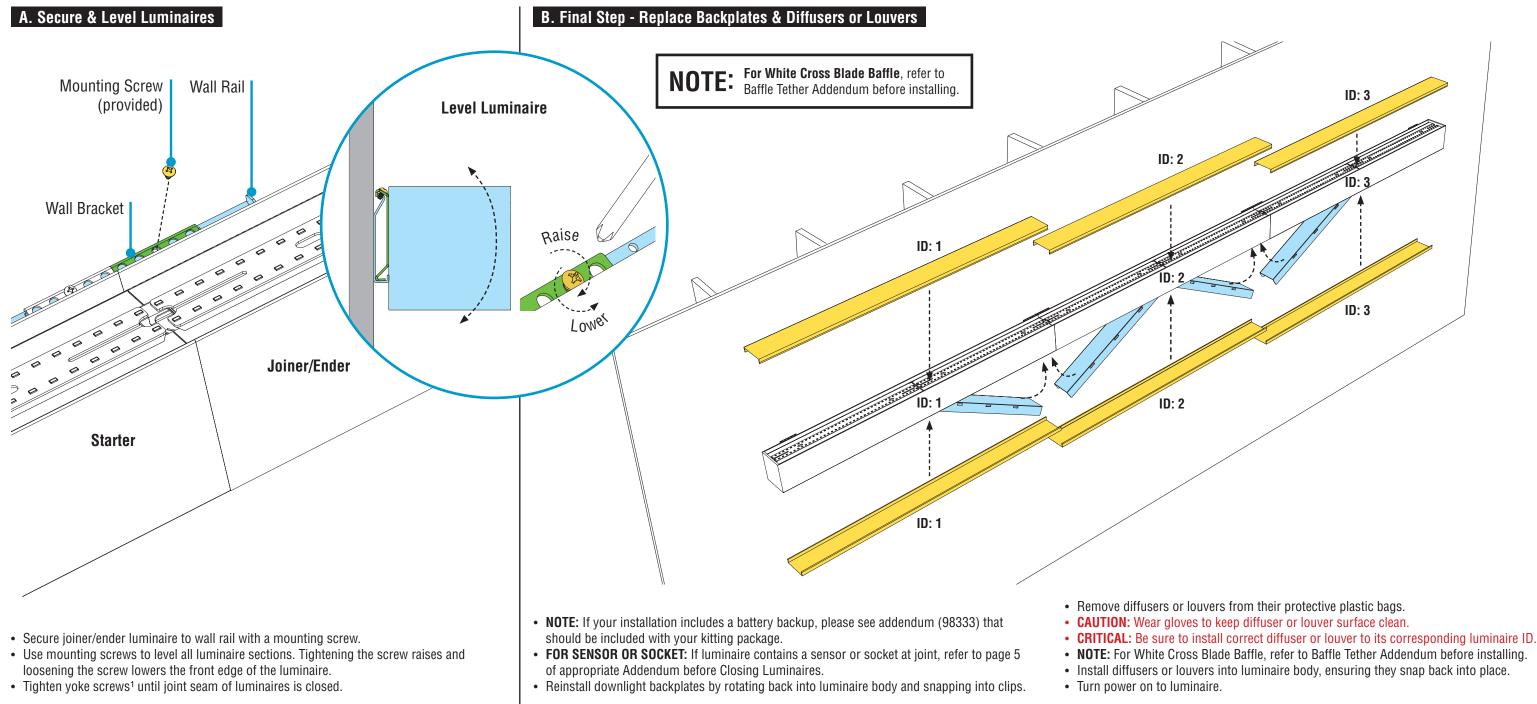

Mounting Screw Ð #8-18 x 1/4" (provided)





Socket Removal & Installation

