HP-2 / HP-4 Wall Wash LED Driver Replacement Instructions Overview

- **NOTES**
- All power connections should be installed according to local/national codes by a Certified Electrician.
- This installation requires **proper support** as each luminaire is being installed.
- **DO NOT attempt to join luminaires together on the floor.** Damage may result when lifted.




VIDEOS




Dimming

Driver Replacement

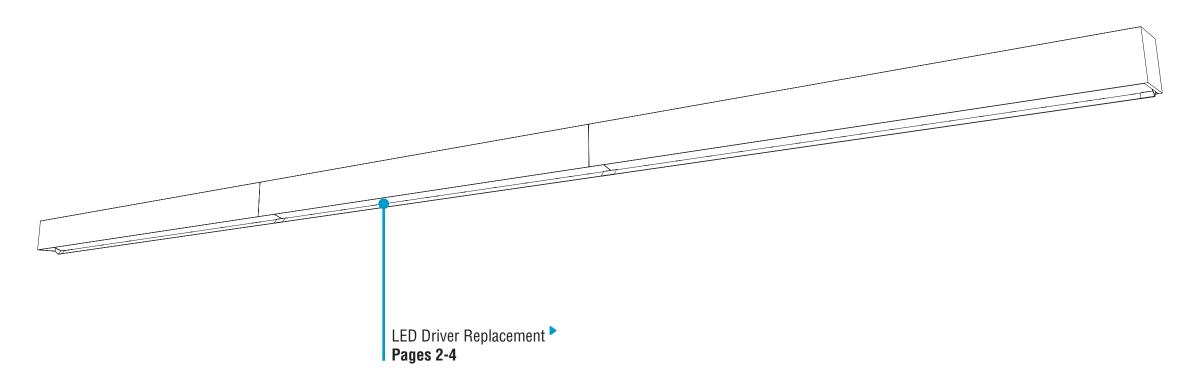





HP-2 / HP-4 Wall Wash LED Driver Replacement Instructions Step 1 - Opening Luminaires

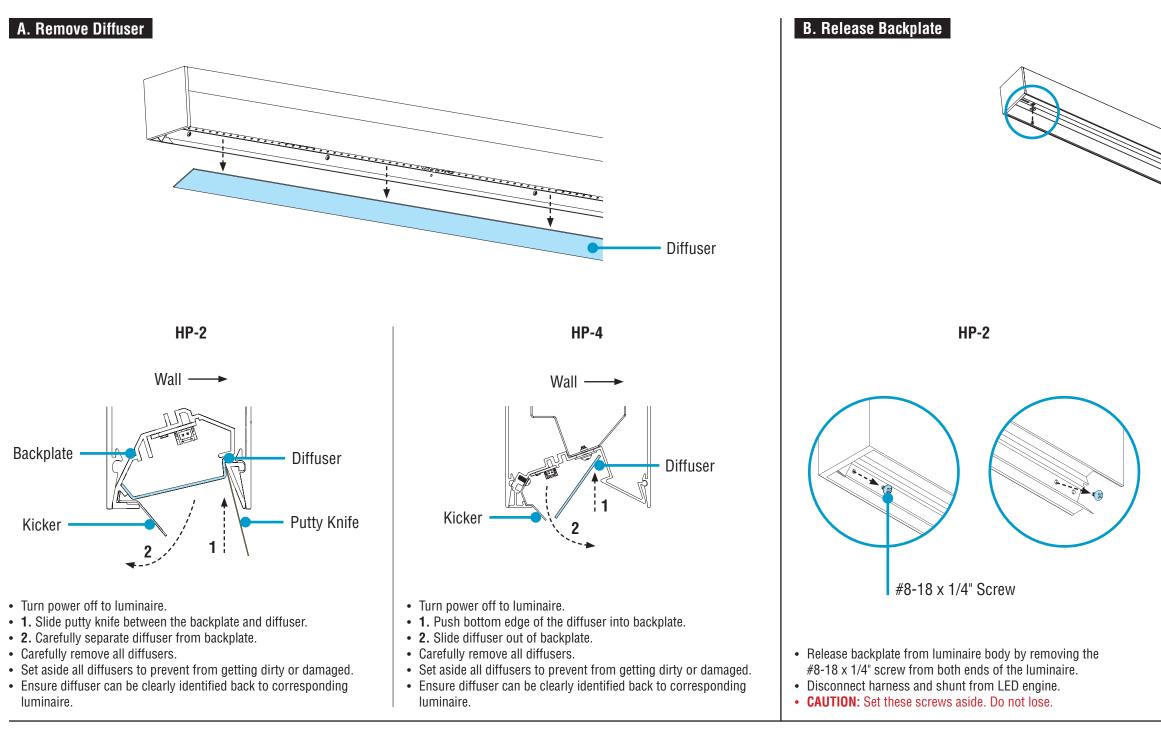



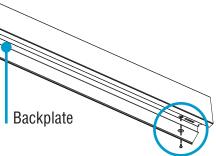




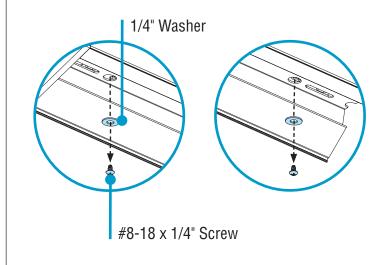


- Release backplate from luminaire body by removing the #8-18 x 1/4" screw and 1/4" washer from both ends of the luminaire.
- · Disconnect harness and shunt from LED engine.
- CAUTION: Set these screws and washers aside. Do not lose.

HP-2 / HP-4 Wall Wash LED Driver Replacement Instructions **Step 2** - Replace Driver


A. Remove Backplate

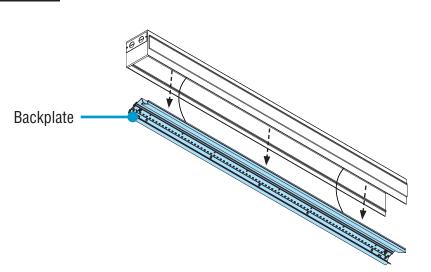

HP-2

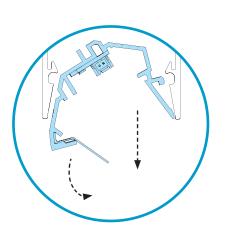

- Remove backplate by rotating then lifting down and out of the luminaire body.
- Keep backplate hanging with safety cables connected.

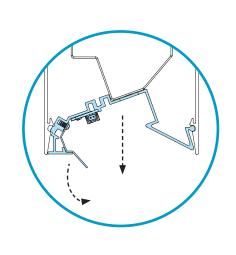


HP-4

- Remove backplate by rotating then lifting down and out of the luminaire body.
- Keep backplate hanging with safety cables connected.

B. Replace Driver

WIRING LEGEND		
Black	Hot	Line Voltage
White	Neutral	Line Voltage
Green	Ground	
Pink	Dimming	0-10V DC
Purple	Dimming	0-10V DC

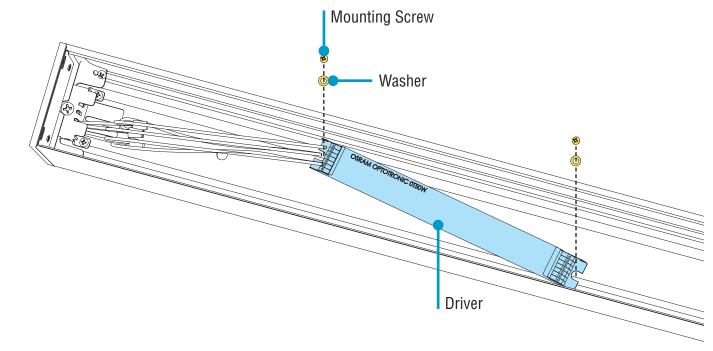

- · Remove mounting screws and washers from driver.
- · Disconnect all electrical connections from driver.
- · Remove old driver and replace with new driver.
- Reconnect all electrical connections to driver.
- Replace washers and mounting screws.














HP-2 / HP-4 Wall Wash LED Driver Replacement Instructions **Step 2** - Replace Driver

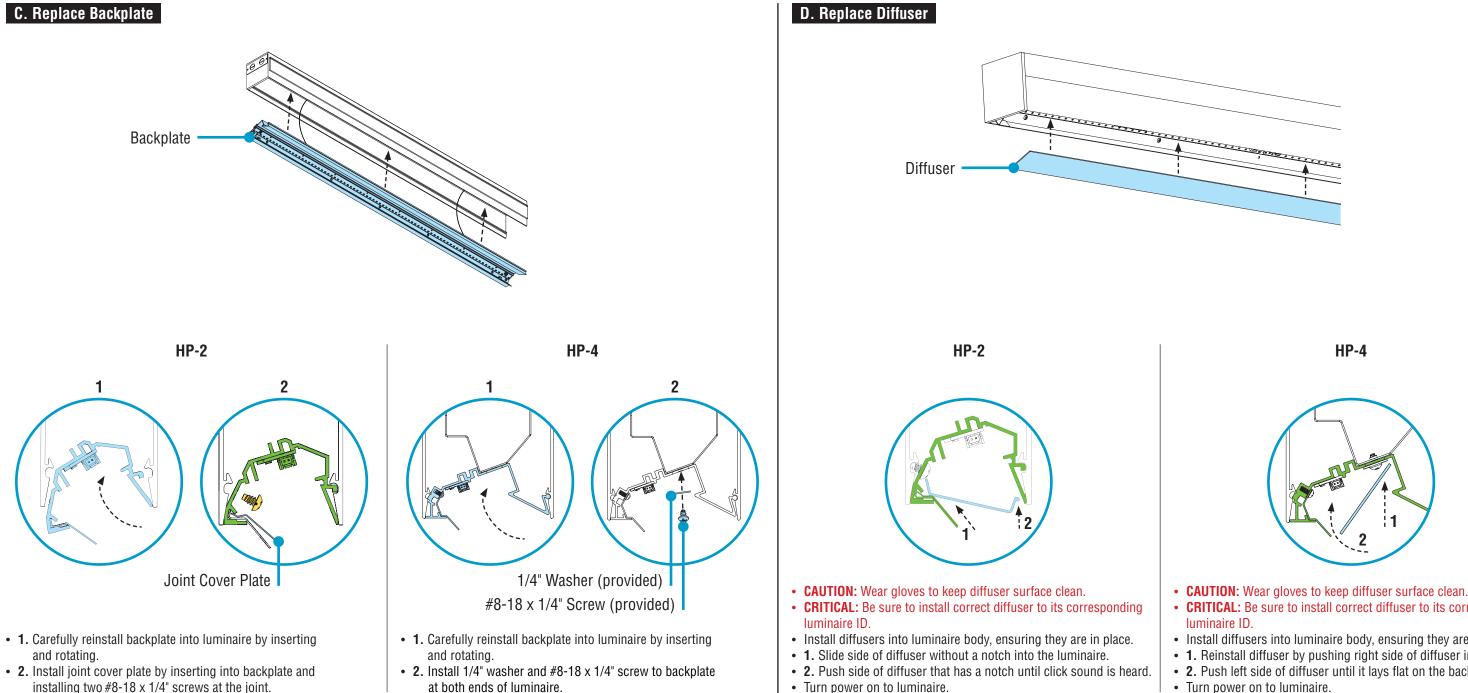



- CRITICAL: Be sure to install correct diffuser to its corresponding
- Install diffusers into luminaire body, ensuring they are in place.
- **1.** Reinstall diffuser by pushing right side of diffuser into backplate.
- 2. Push left side of diffuser until it lays flat on the backplate.
- Turn power on to luminaire.