


Series 19 LED Engine Replacement Installation Instructions

Overview


- NOTES** | • All power connections should be installed according to local/national codes by a Certified Electrician.

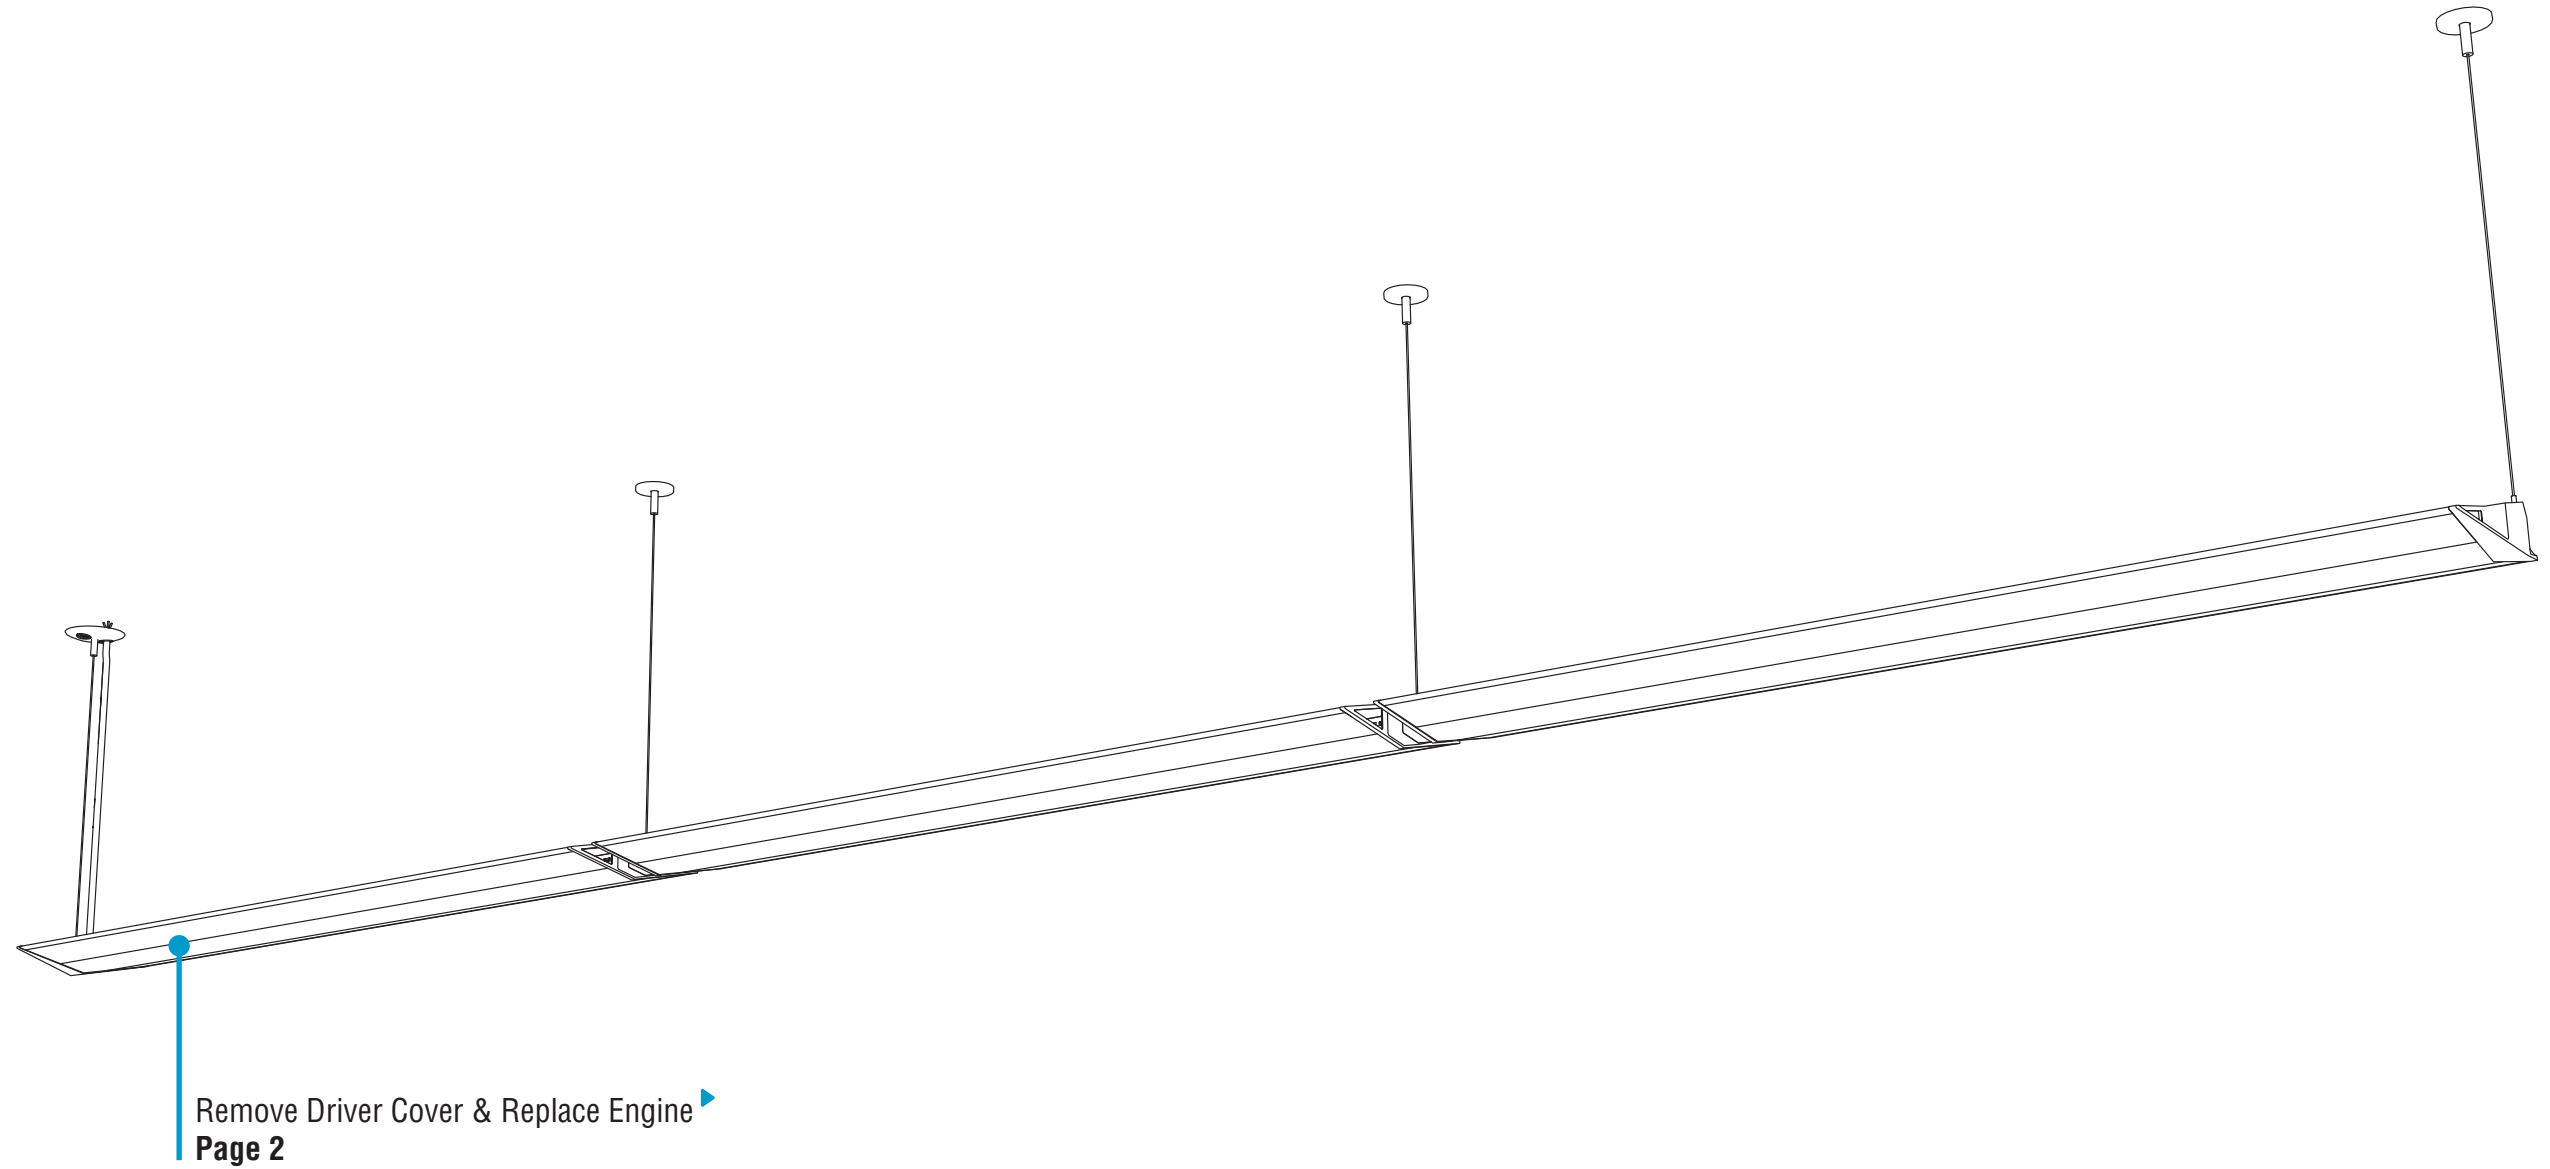

Series 19 LED Engine Replacement Installation Instructions

Remove Driver Cover & Replace Engine

A. Remove Access Plates Top-Down View

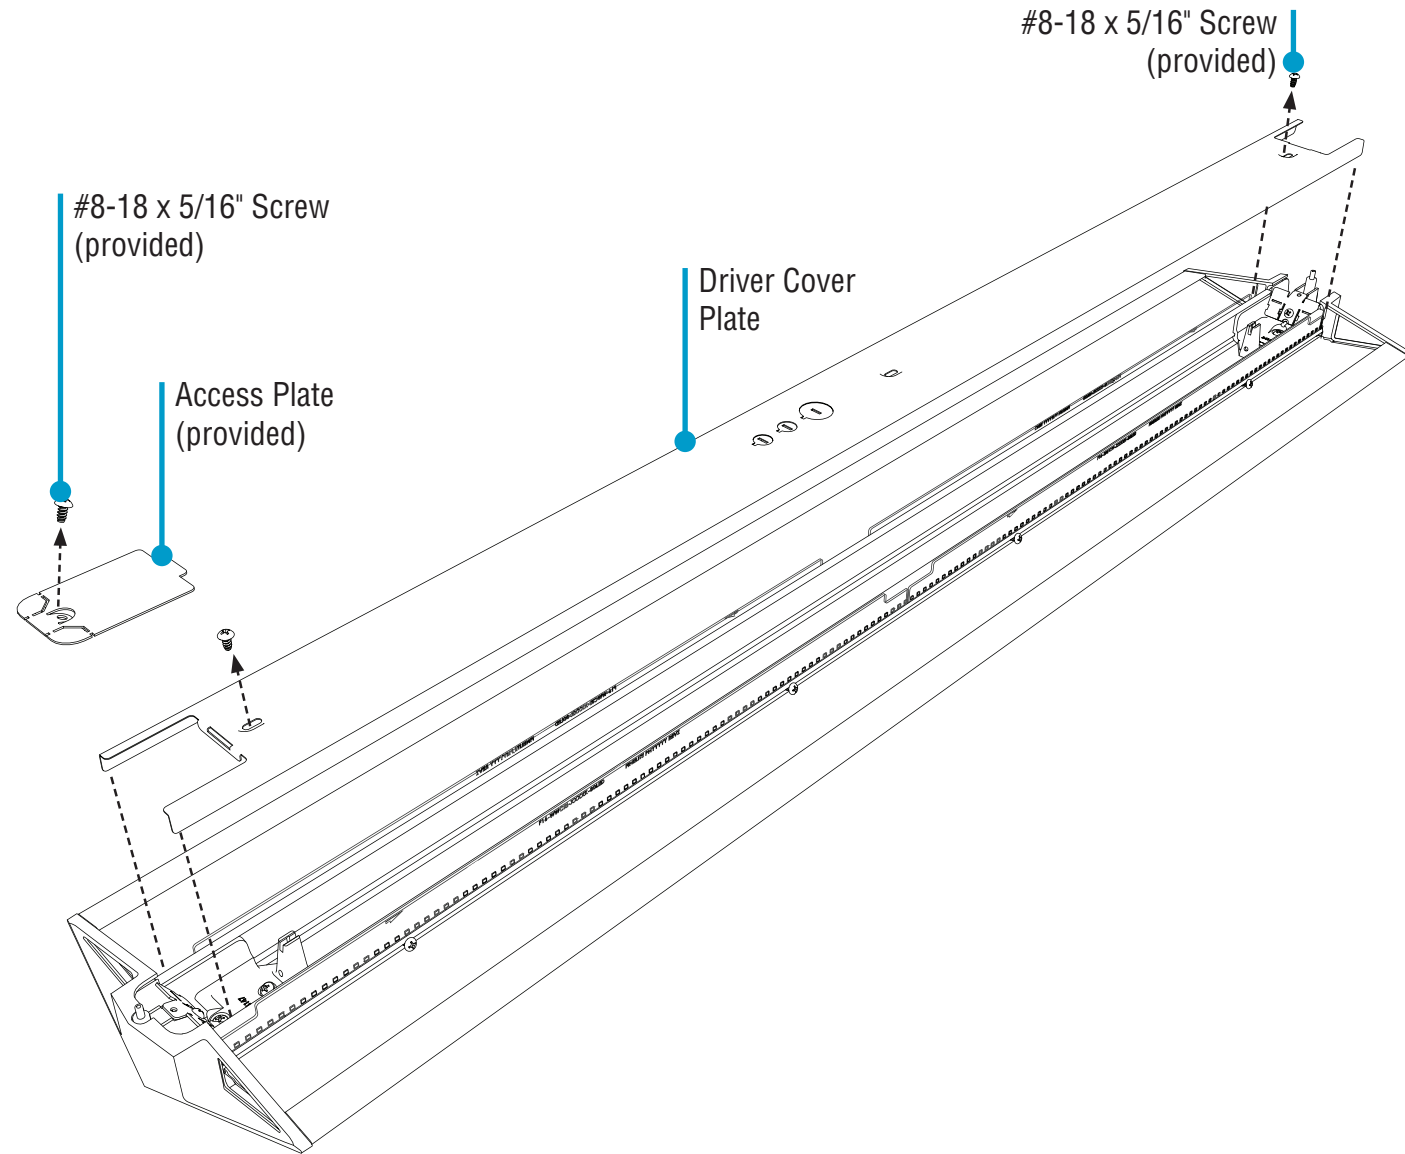


- Remove #8-18 x 5/16" screws from access plates & driver cover.
- Remove access plates and driver cover.



#8-18 x 5/16" Screws
(provided)

B. Replace Driver Top-Down View

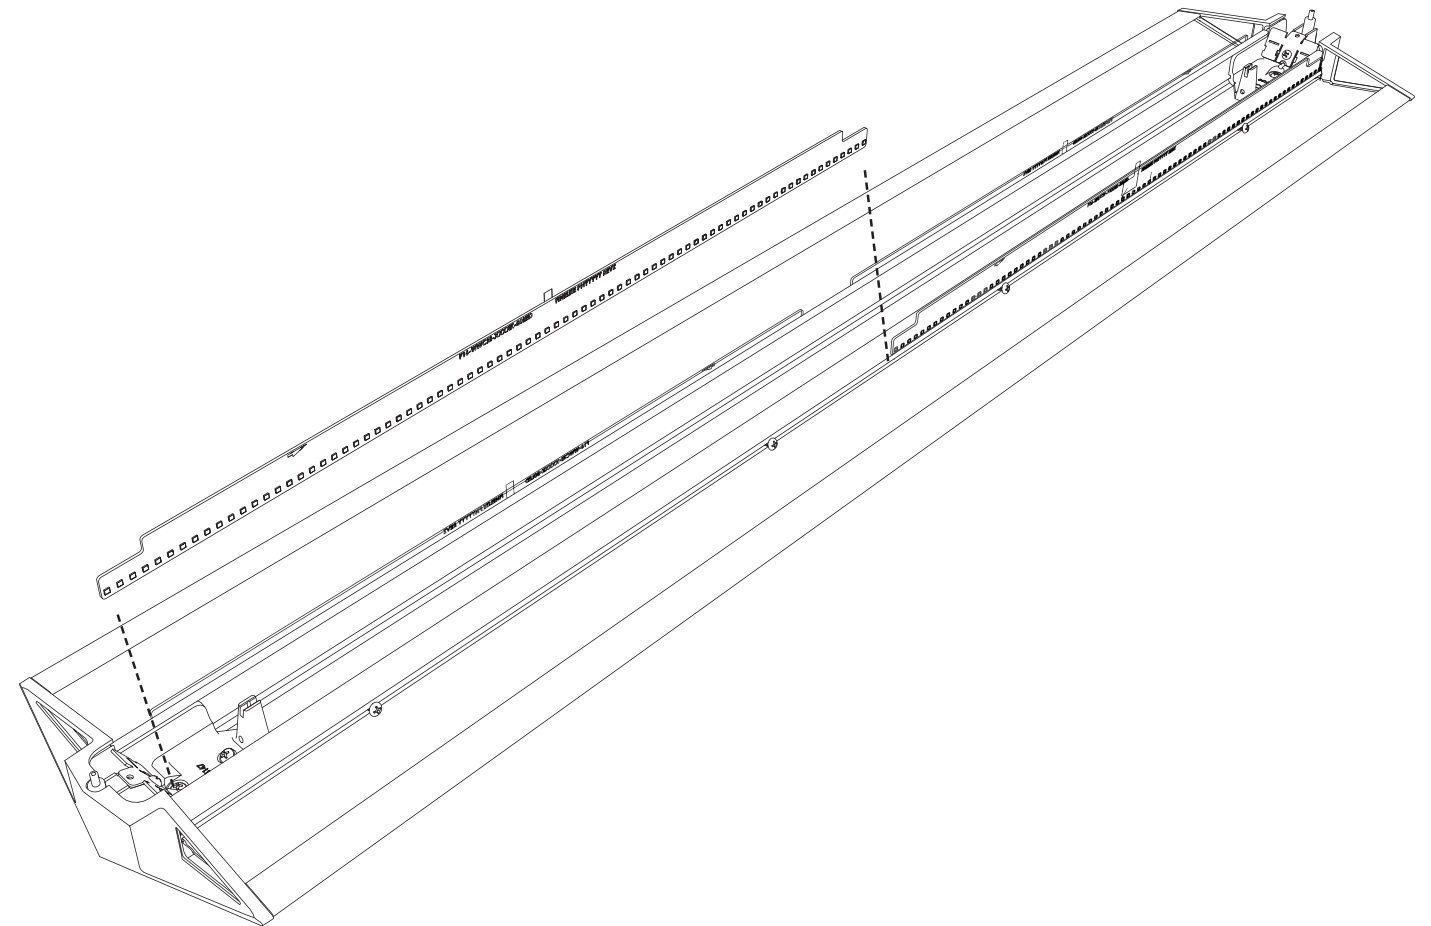

- Disconnect harness for LED engine.
- Remove LED engine. Note there is adhesive backing at the back of the LED engine.
- Replace with new LED engine by peel off wax backing from double sided tape locate on the back of the LED engine.
- Reconnect harness to LED engine.
- Replace access plates & driver cover.
- Turn power on.