HP-4 Recessed Flush Diffuser 9/16" Tegular Starter/Independent

Installation Instructions

FINELITE® Better Lighting

Scan QR code for helpful video(s)

Dimming




Step 1


Remove diffuser and set aside to prevent it from getting dirty or damaged




Configure T-Bar to luminaire size and leave an opening for luminaire. As noted above.

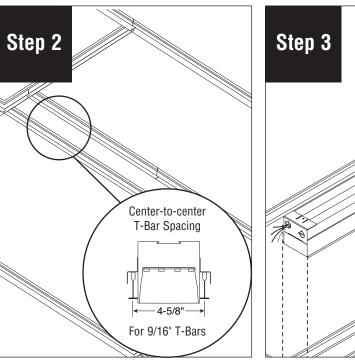

Place luminaire on T-Bar.

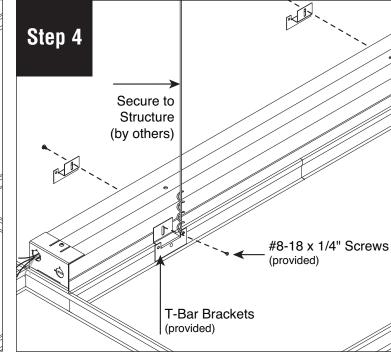


Install T-Bar bracket onto luminaire. Secure with #8-18 x 1/4" screws (provided). Secure luminaire to building structure using tie-wire, as per code.

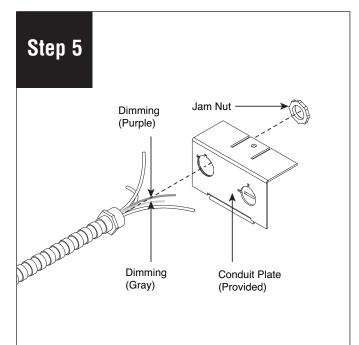


Remove conduit plate from end of luminaire and insert conduit through conduit plate. Secure conduit with jam nut. **NOTE:** Purple and gray wires are for Low Voltage Control.


local/national codes by a Certified Electrician.

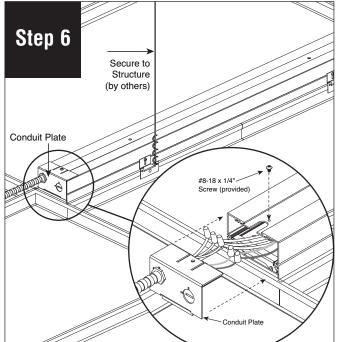

Make electrical connections and reinstall conduit plate to luminaire.

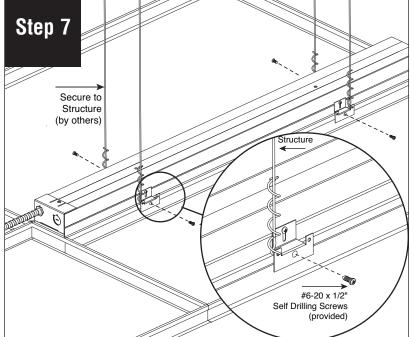

Secure luminaire to T-Bar by driving #6-20 x 1/2" self drilling screws (provided) through the T-Bar brackets (provided) into the T-Bar.

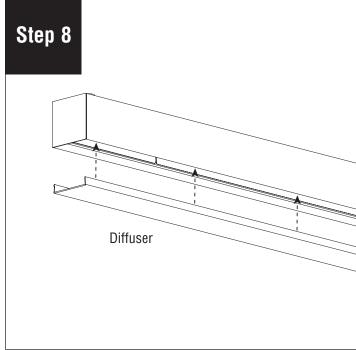

Reinstall diffuser and turn power on to luminaire. **NOTE:** If part of a longer run, diffuser will be reinstalled back into original luminaire section as lengths vary.

Note: All power connections to be installed to

Finelite, Inc. • 30500 Whipple Road • Union City, CA 94587-1530 • (510) 441-1100 • Fax: (510) 441-1510 • www.finelite.com

HP-4 Recessed Flush Diffuser 9/16" Tegular Joiner/Ender

Better Lighting


FINELITE®

Installation Instructions


Scan QR code for helpful video(s)




0 - 10V Dimming

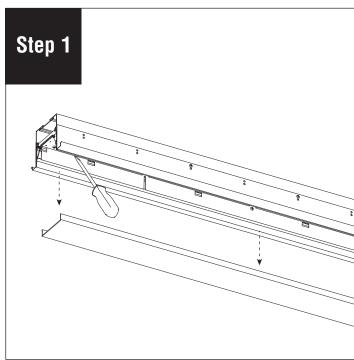


Remove diffuser and set aside to prevent it from getting dirty or damaged. NOTE: If part of a longer run, diffuser will be reinstalled back into original luminaire section as lengths vary.

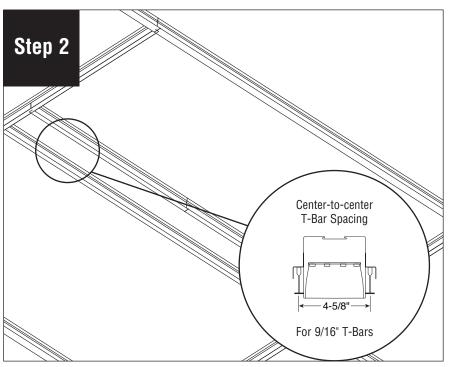


Configure T-Bar to luminaire size and leave an opening for luminaire.

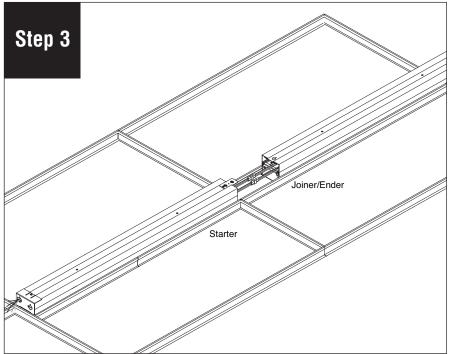


Place joiner/ender luminaire on T-Bar, next to the starter luminaire.

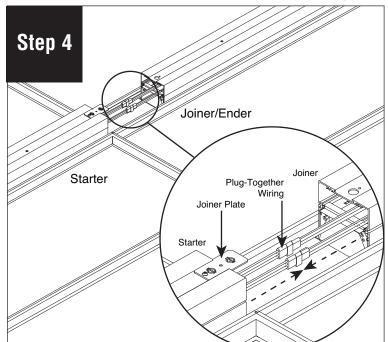

Connect plug-together wiring and align joiner/ender with joiner plate and carefully slide starter and joiner/ender together.

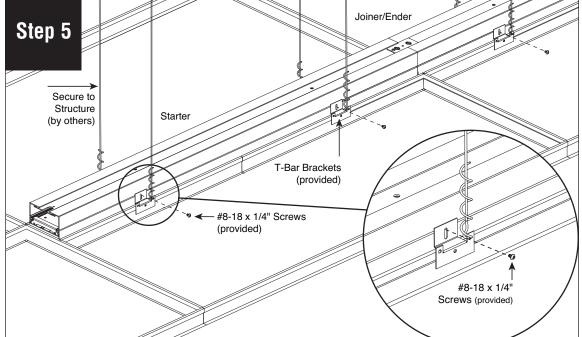

Use #8-18 x 1/4" screws (provided) to install brackets on luminaires. Secure all luminaires to building structure using tie-wire, as per code

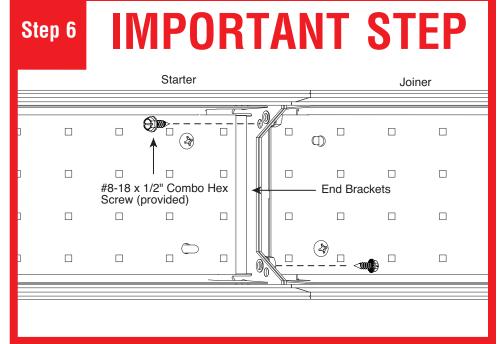


IMPORTANT STEP: Install the two #8-18 x 1/2" combo hex screws (provided) into end bracket as shown. Screws can be installed from the left or right. When installed correctly these hex screws will pull luminaires together to make a tight joint. CAUTION: Do not over-tighten.

Note: All power connections to be installed to local/national codes by a Certified Electrician.

HP-4 Recessed Flush Diffuser 9/16" Tegular Joiner/Ender Installation Instructions

FINELITE® Better Lighting

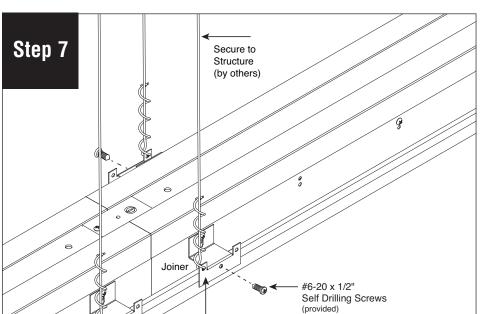

Step 8

Diffusers

Secure luminaire to T-Bar by driving #6-20 x 1/2" self drilling screws (provided) through the T-Bar brackets (provided) into the T-Bar.

Starter

Reinstall diffuser and turn power on to luminaire. **NOTE:** If part of a longer run, diffuser will be reinstalled back into original luminaire section as lengths vary.