




# HP-2 Micro Louver LED Engine Replacement Instructions

## Step 1 - Open Luminaire

### A. Remove Diffuser or Louver


Remove Diffusers

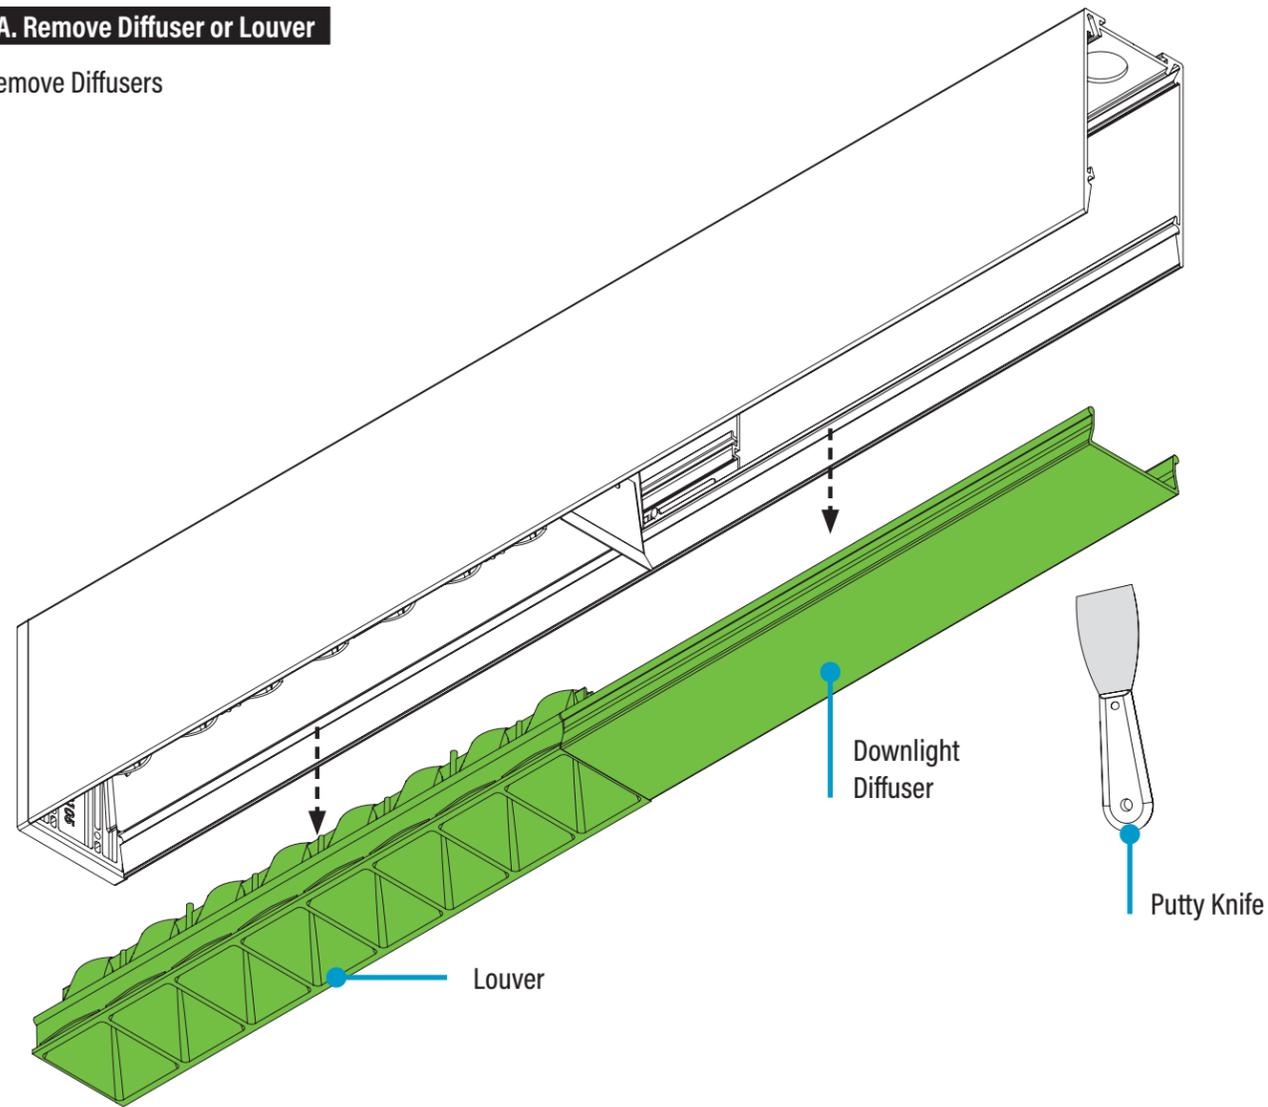


- Carefully remove the louver wearing clean gloves. Do not use a putty knife or other tool to avoid damage to the finish
- Remove diffusers if present

### B. Remove Downlight Backplate

Putty Knife Option

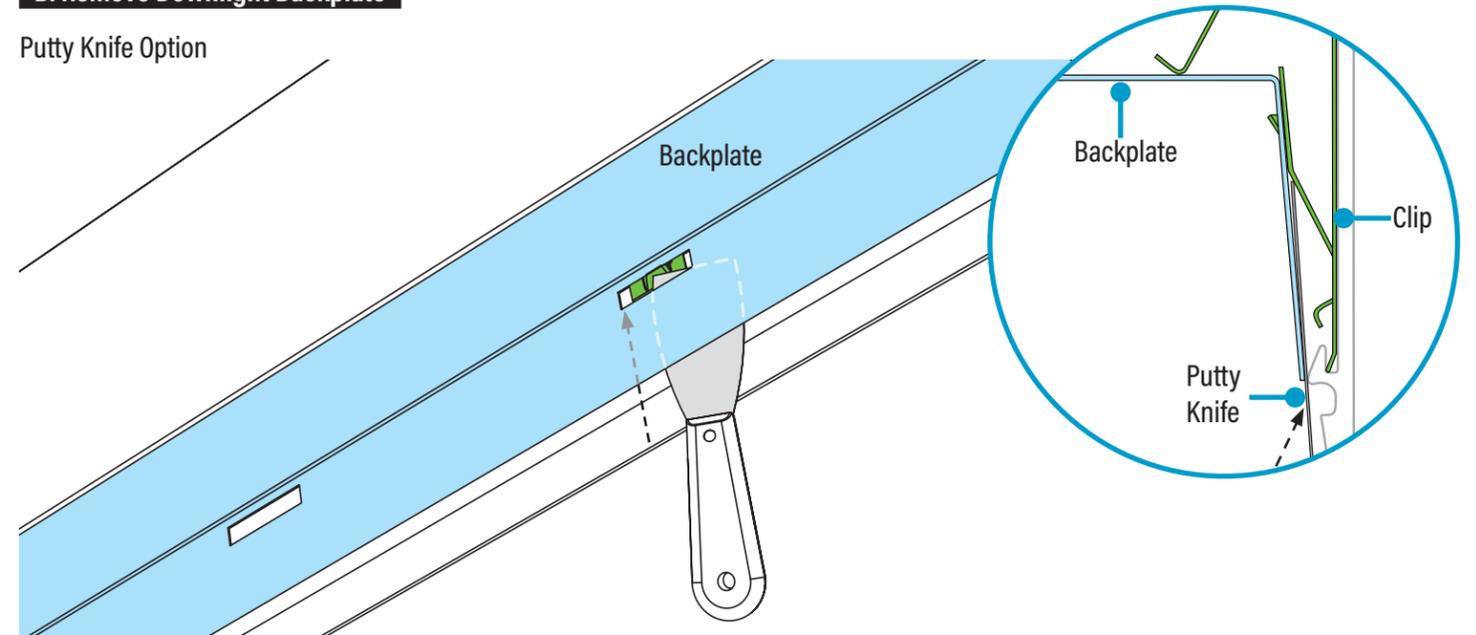

Flathead Screwdriver Option

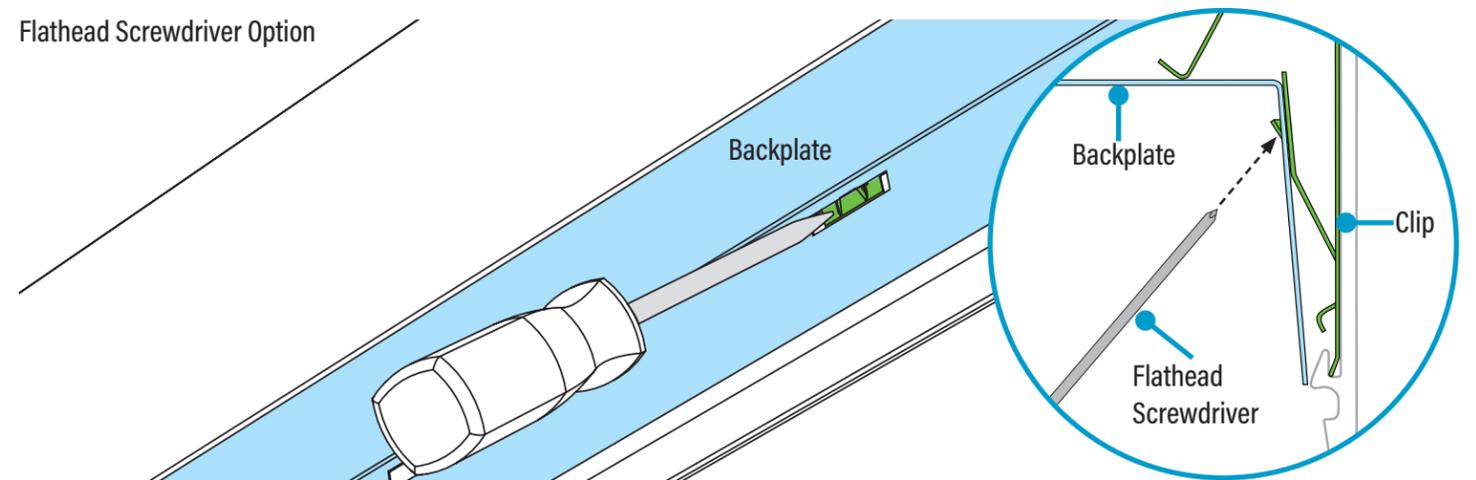

- **NOTE:** For independent luminaires, backplates do not need to be released.
- Unclip the backplates from clips by sliding the blade of a putty knife behind backplate edges.
- To use a flathead screwdriver, press end of screwdriver (from inside the luminaire) against the clip, until the backplate is released.




Louver  
Removal

# HP-2 Micro Louver LED Engine Replacement Instructions


## Step 2 - Replace LED Engine

### A. Rotate Out Backplate

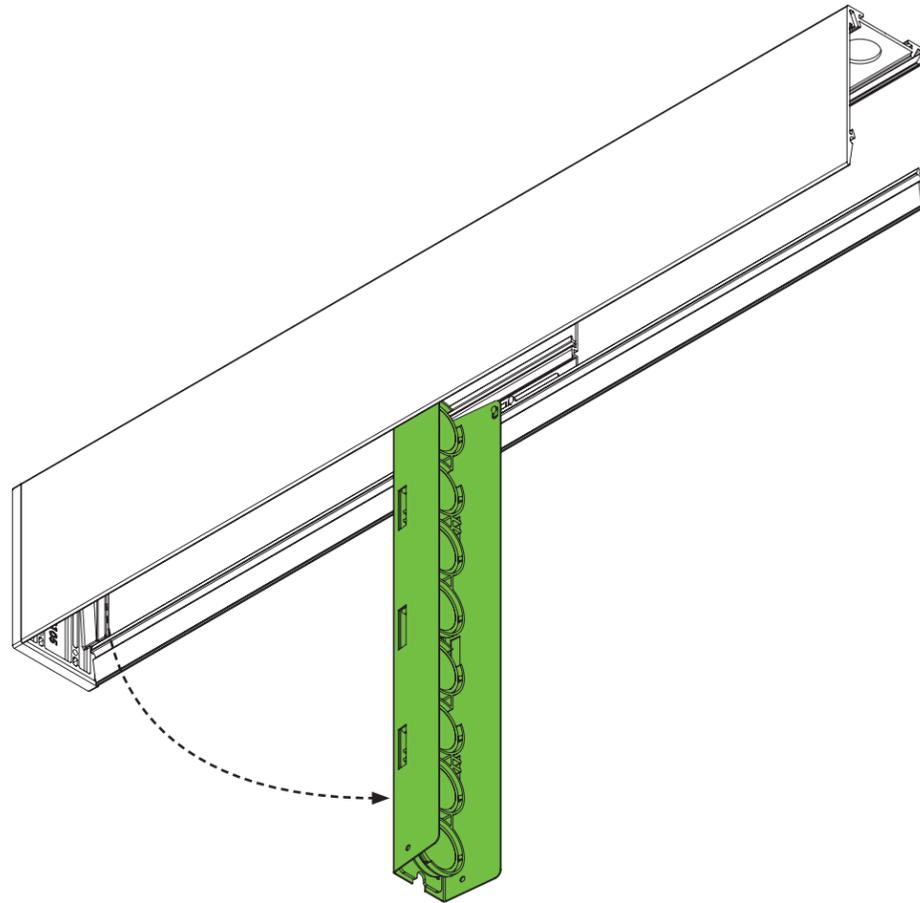


- Carefully rotate backplate out and let it hang from luminaire body.

### B. Remove Lens Holder

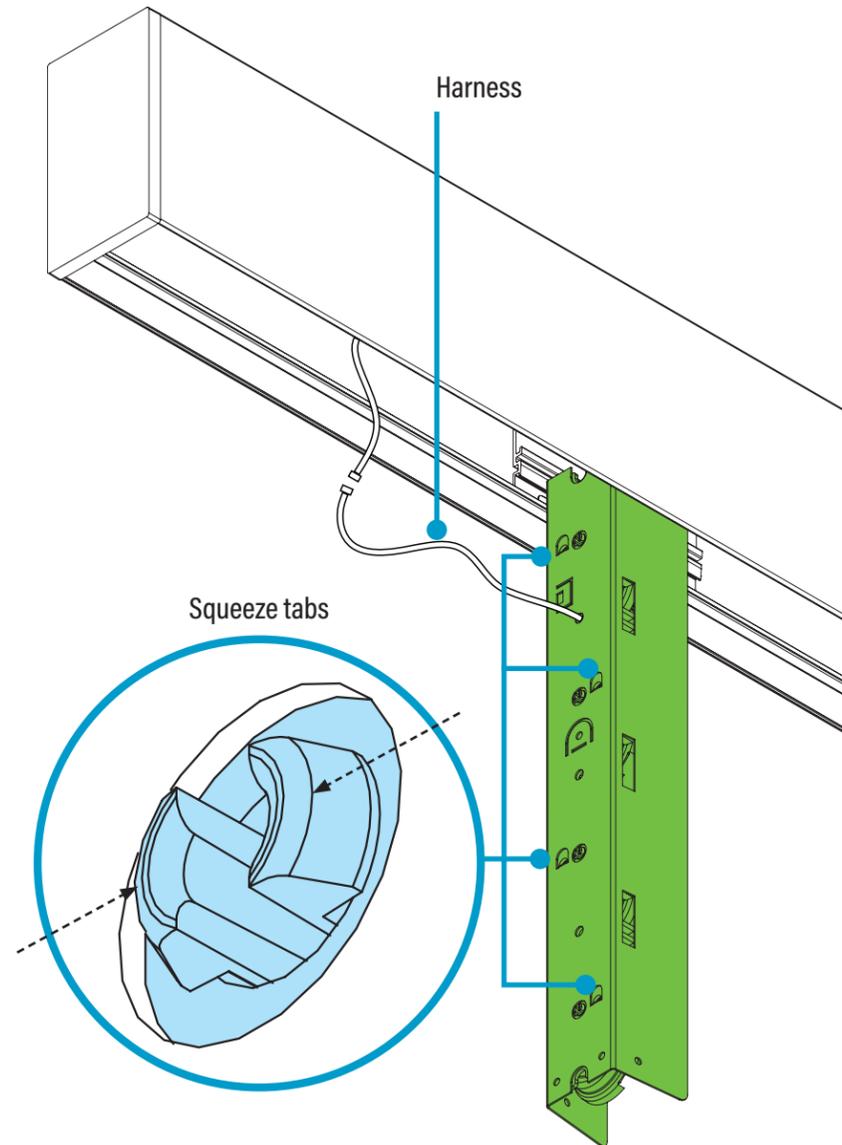

- Disconnect harness from LED engine.
- Remove lens holder by squeezing tabs together and pushing out of backplate.
- **NOTE:** Use care with tabs. They can bend or break from too much pressure.



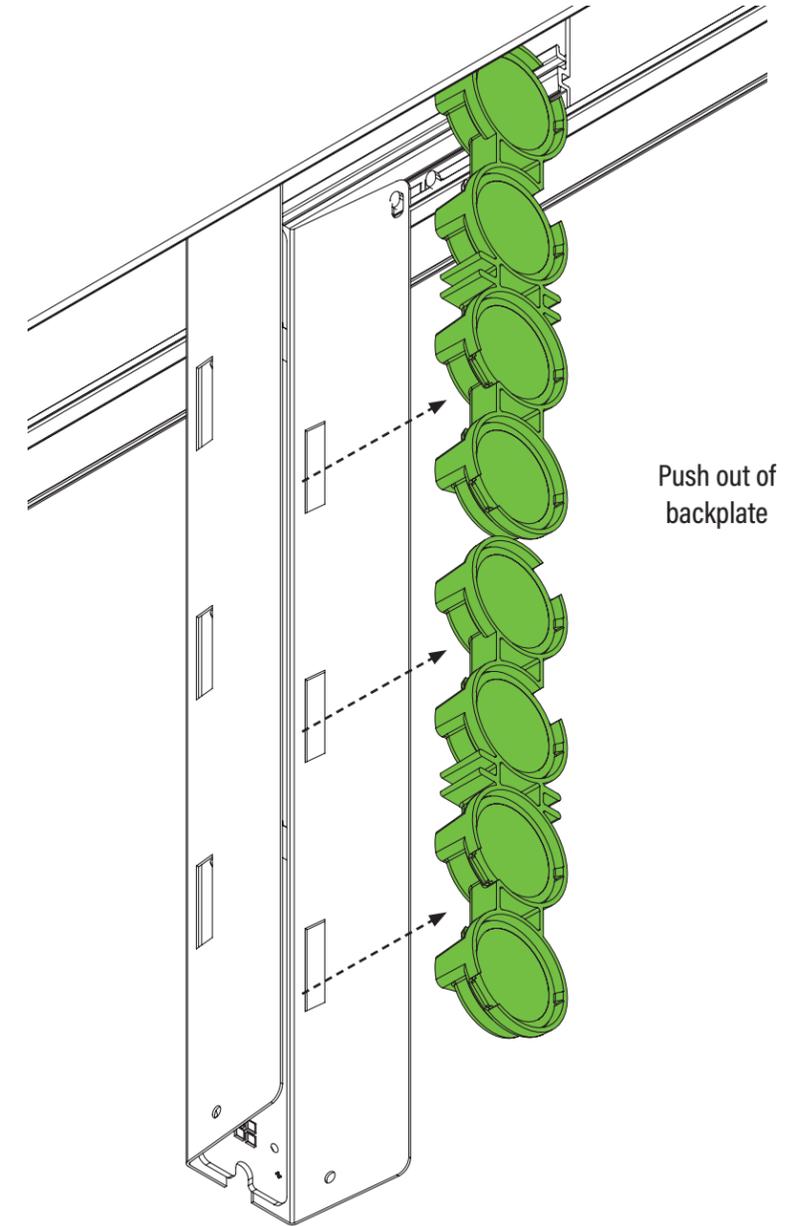


Louver  
Removal

# HP-2 Micro Louver LED Engine Replacement Instructions

## Step 2 - Replace LED Engine

### C. Disconnect LED Engine

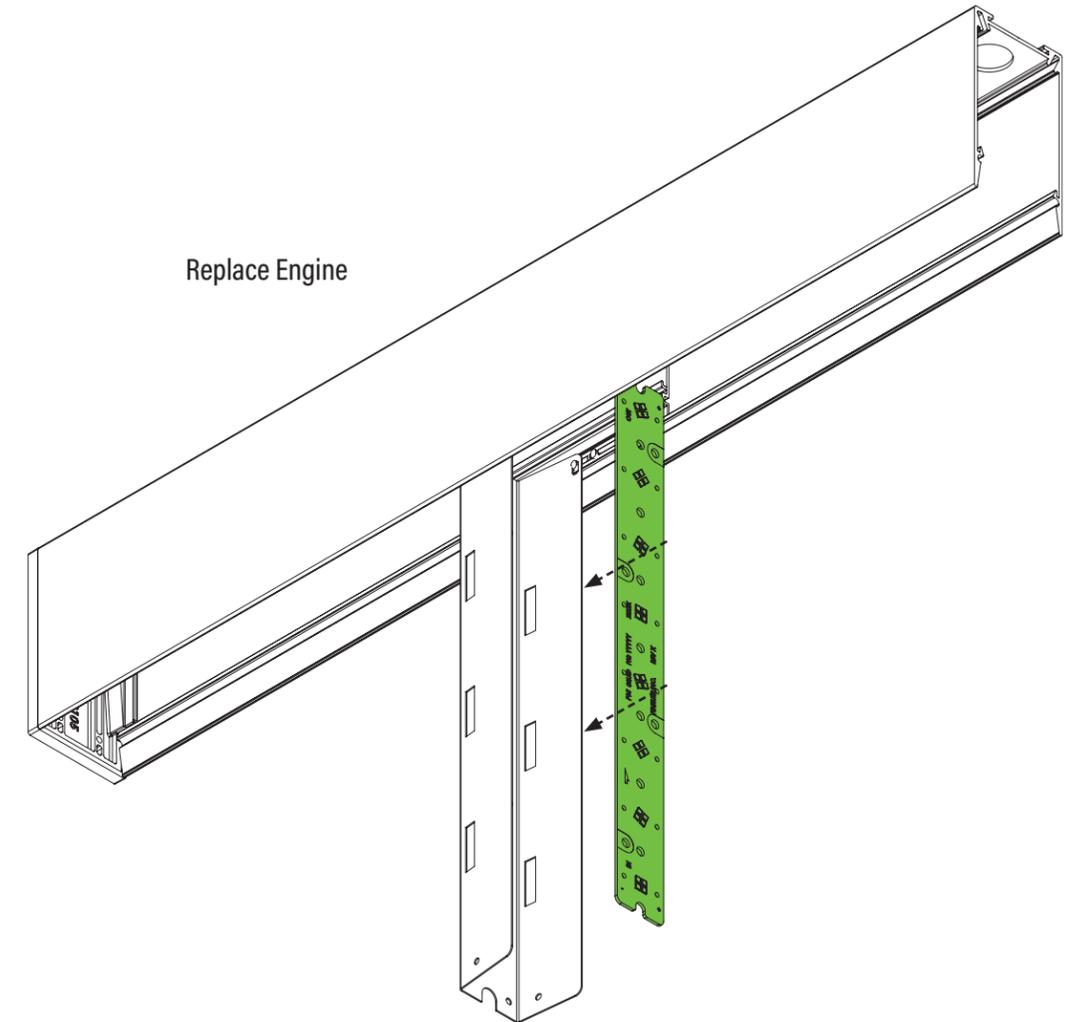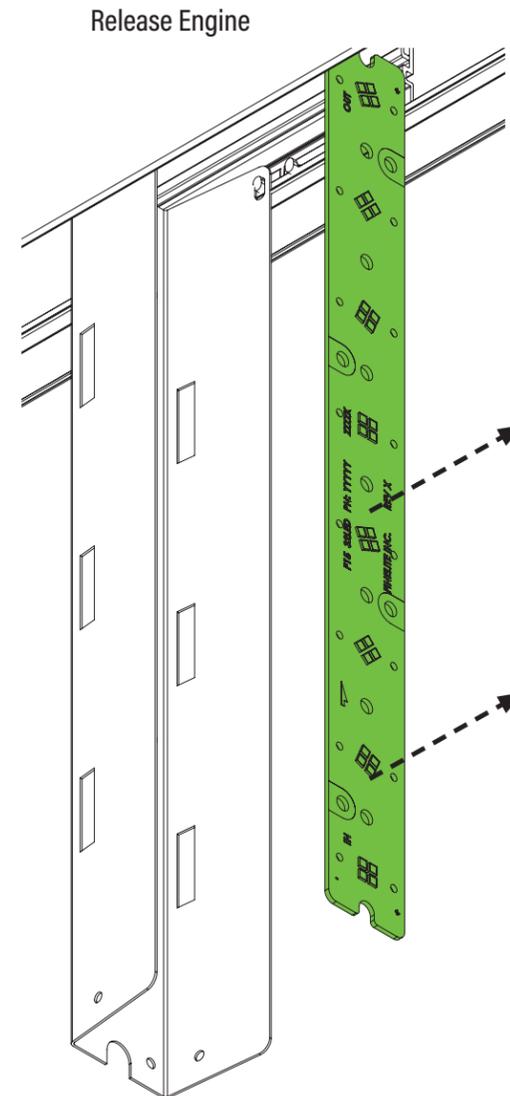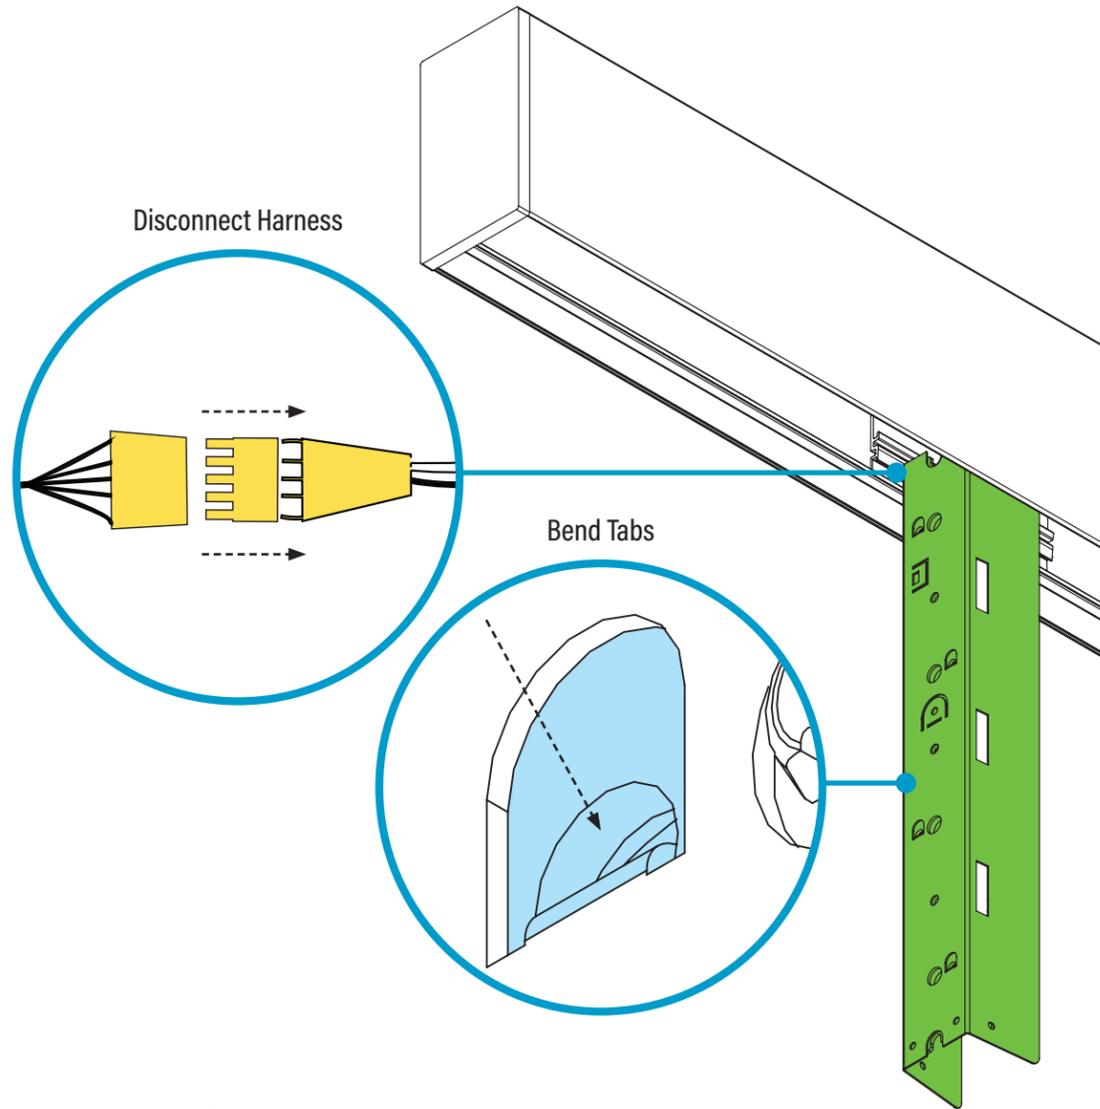

- Disconnect harness from LED engine.
- Bend tabs to release LED from backplate
- Replace with new LED engine and secure onto the backplate with tabs.
- Replace backplate by snapping back into clips.
- Replace Diffuser and turn on power.