


# HP-Perimeter Slot (HP-WS) Telescoping Chicago Plenum Installation Instructions

## Threaded Rod

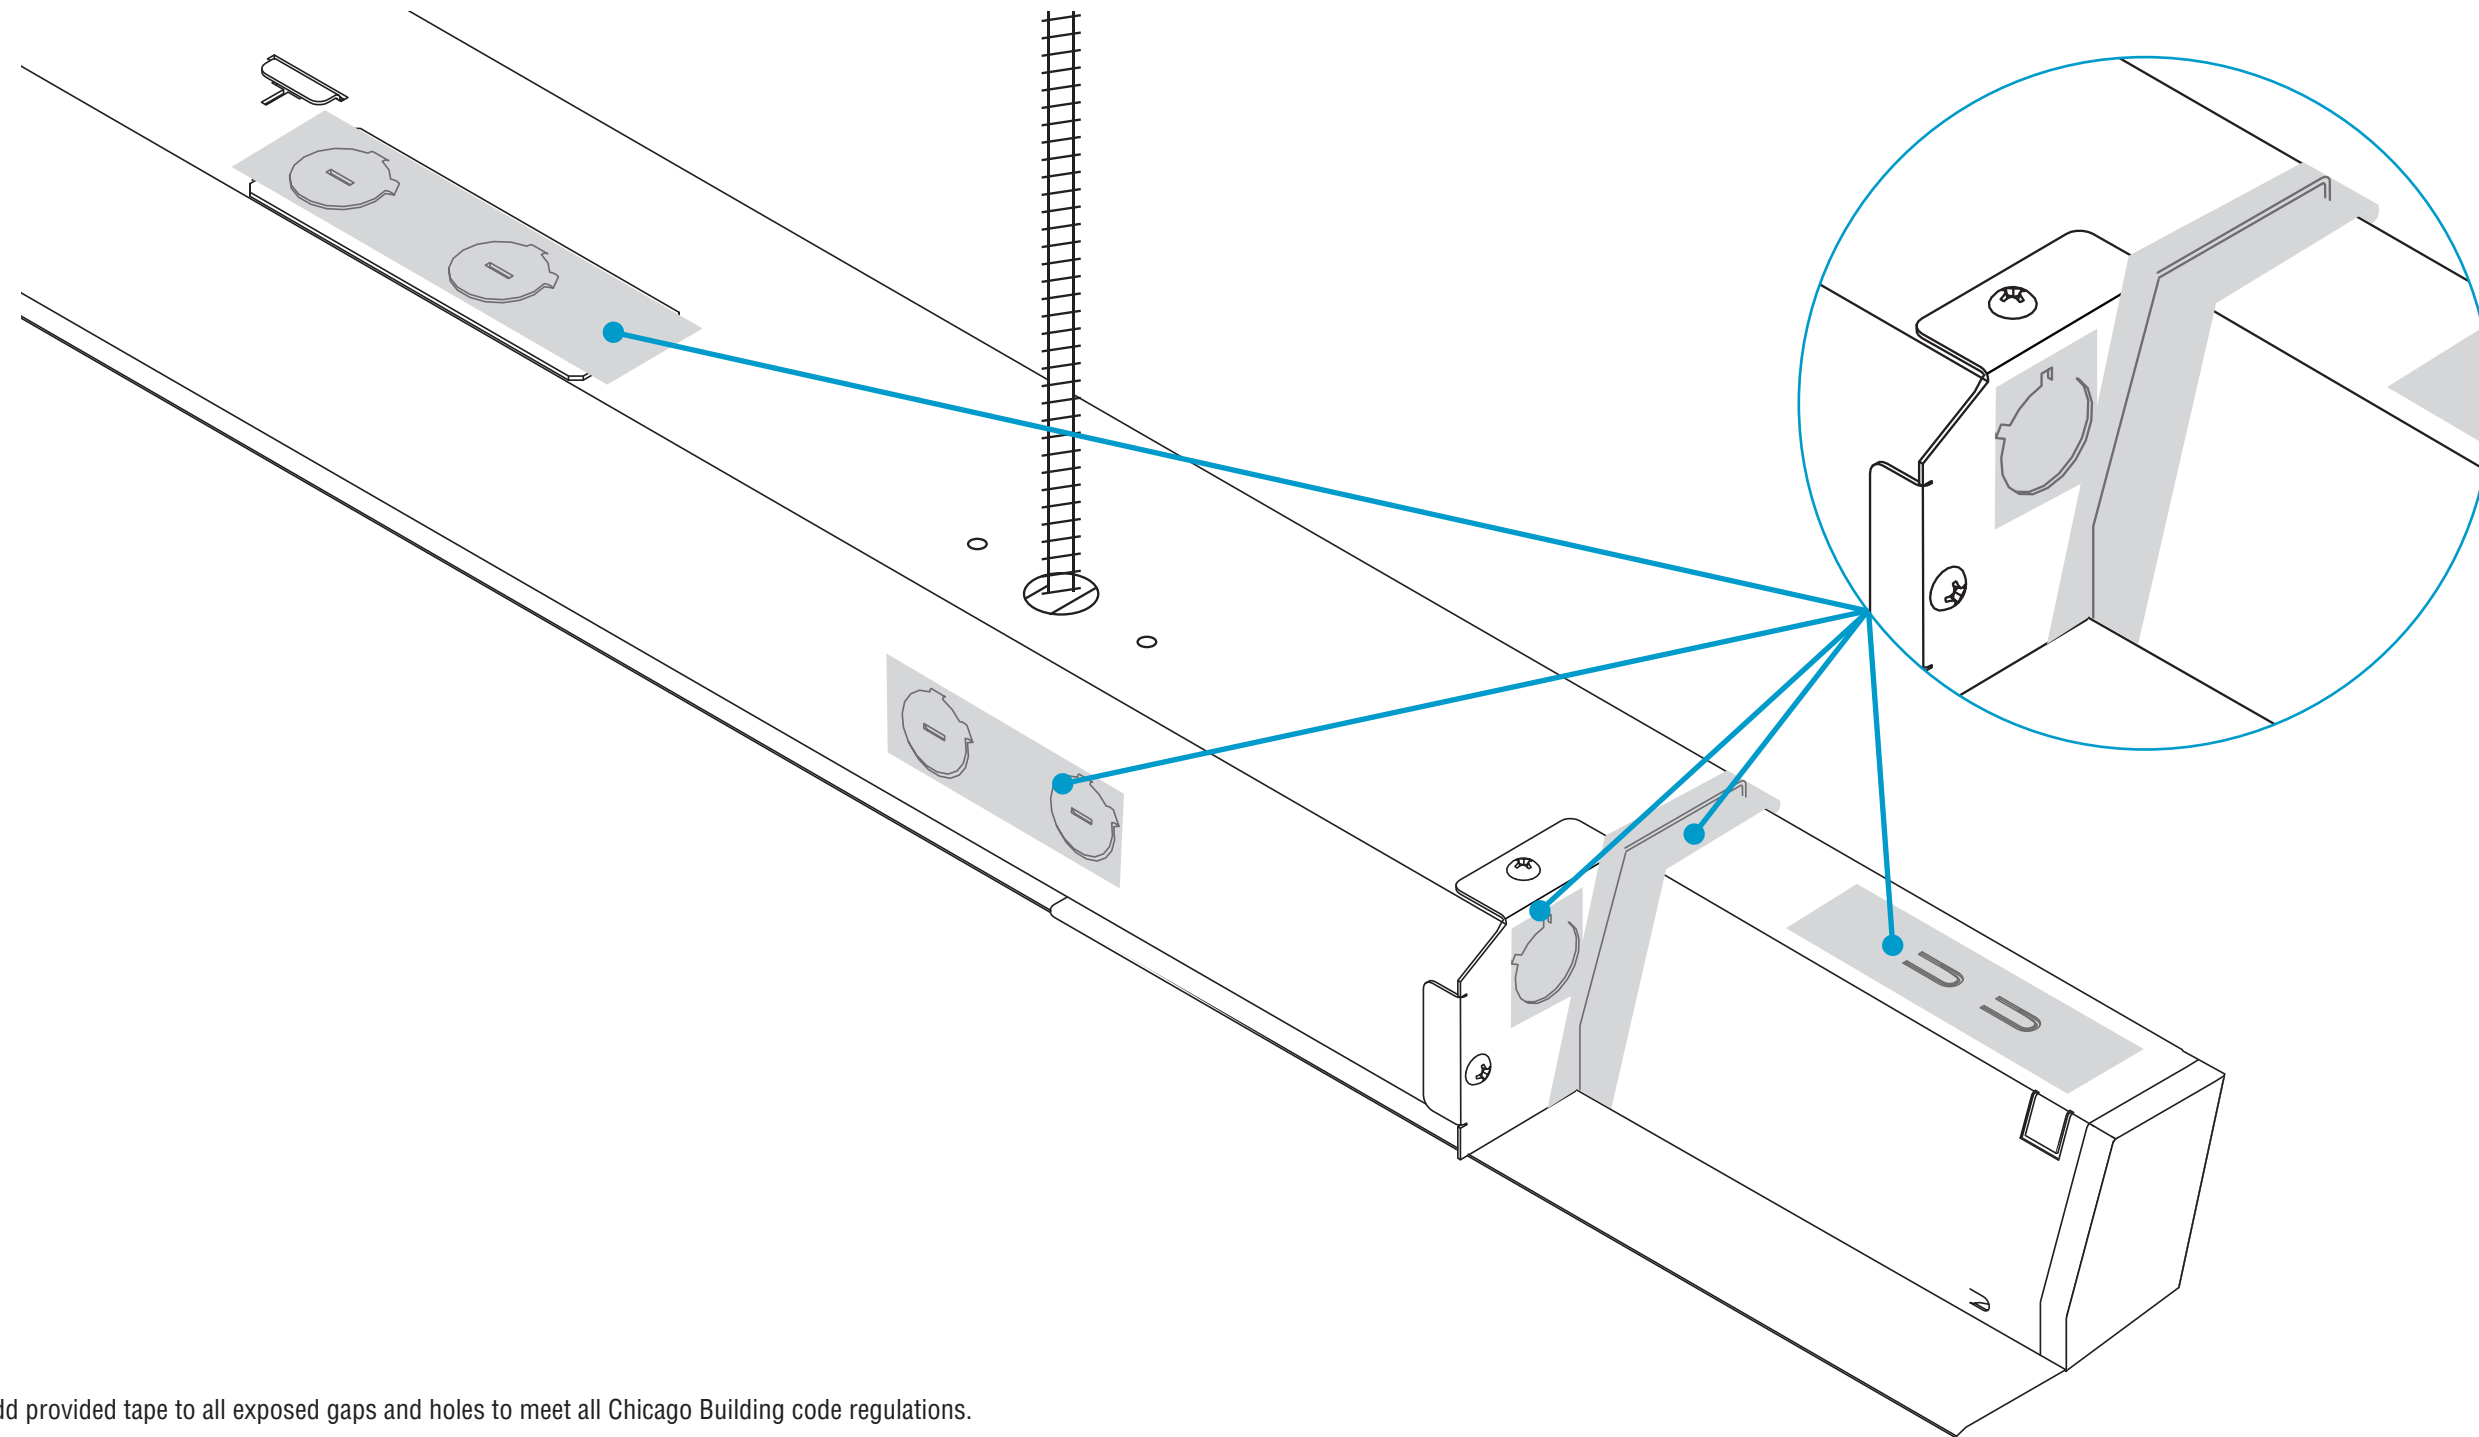

**Chicago Plenum Tape  
(Provided)**  
Note: Tape is not transparent. Holes  
shown to illustrate what to cover up.

Add provided tape to all exposed gaps and holes to meet all Chicago Building code regulations.