


HP-Perimeter Slot (HP-WS) Telescoping Chicago Plenum Installation Instructions Wall Bracket

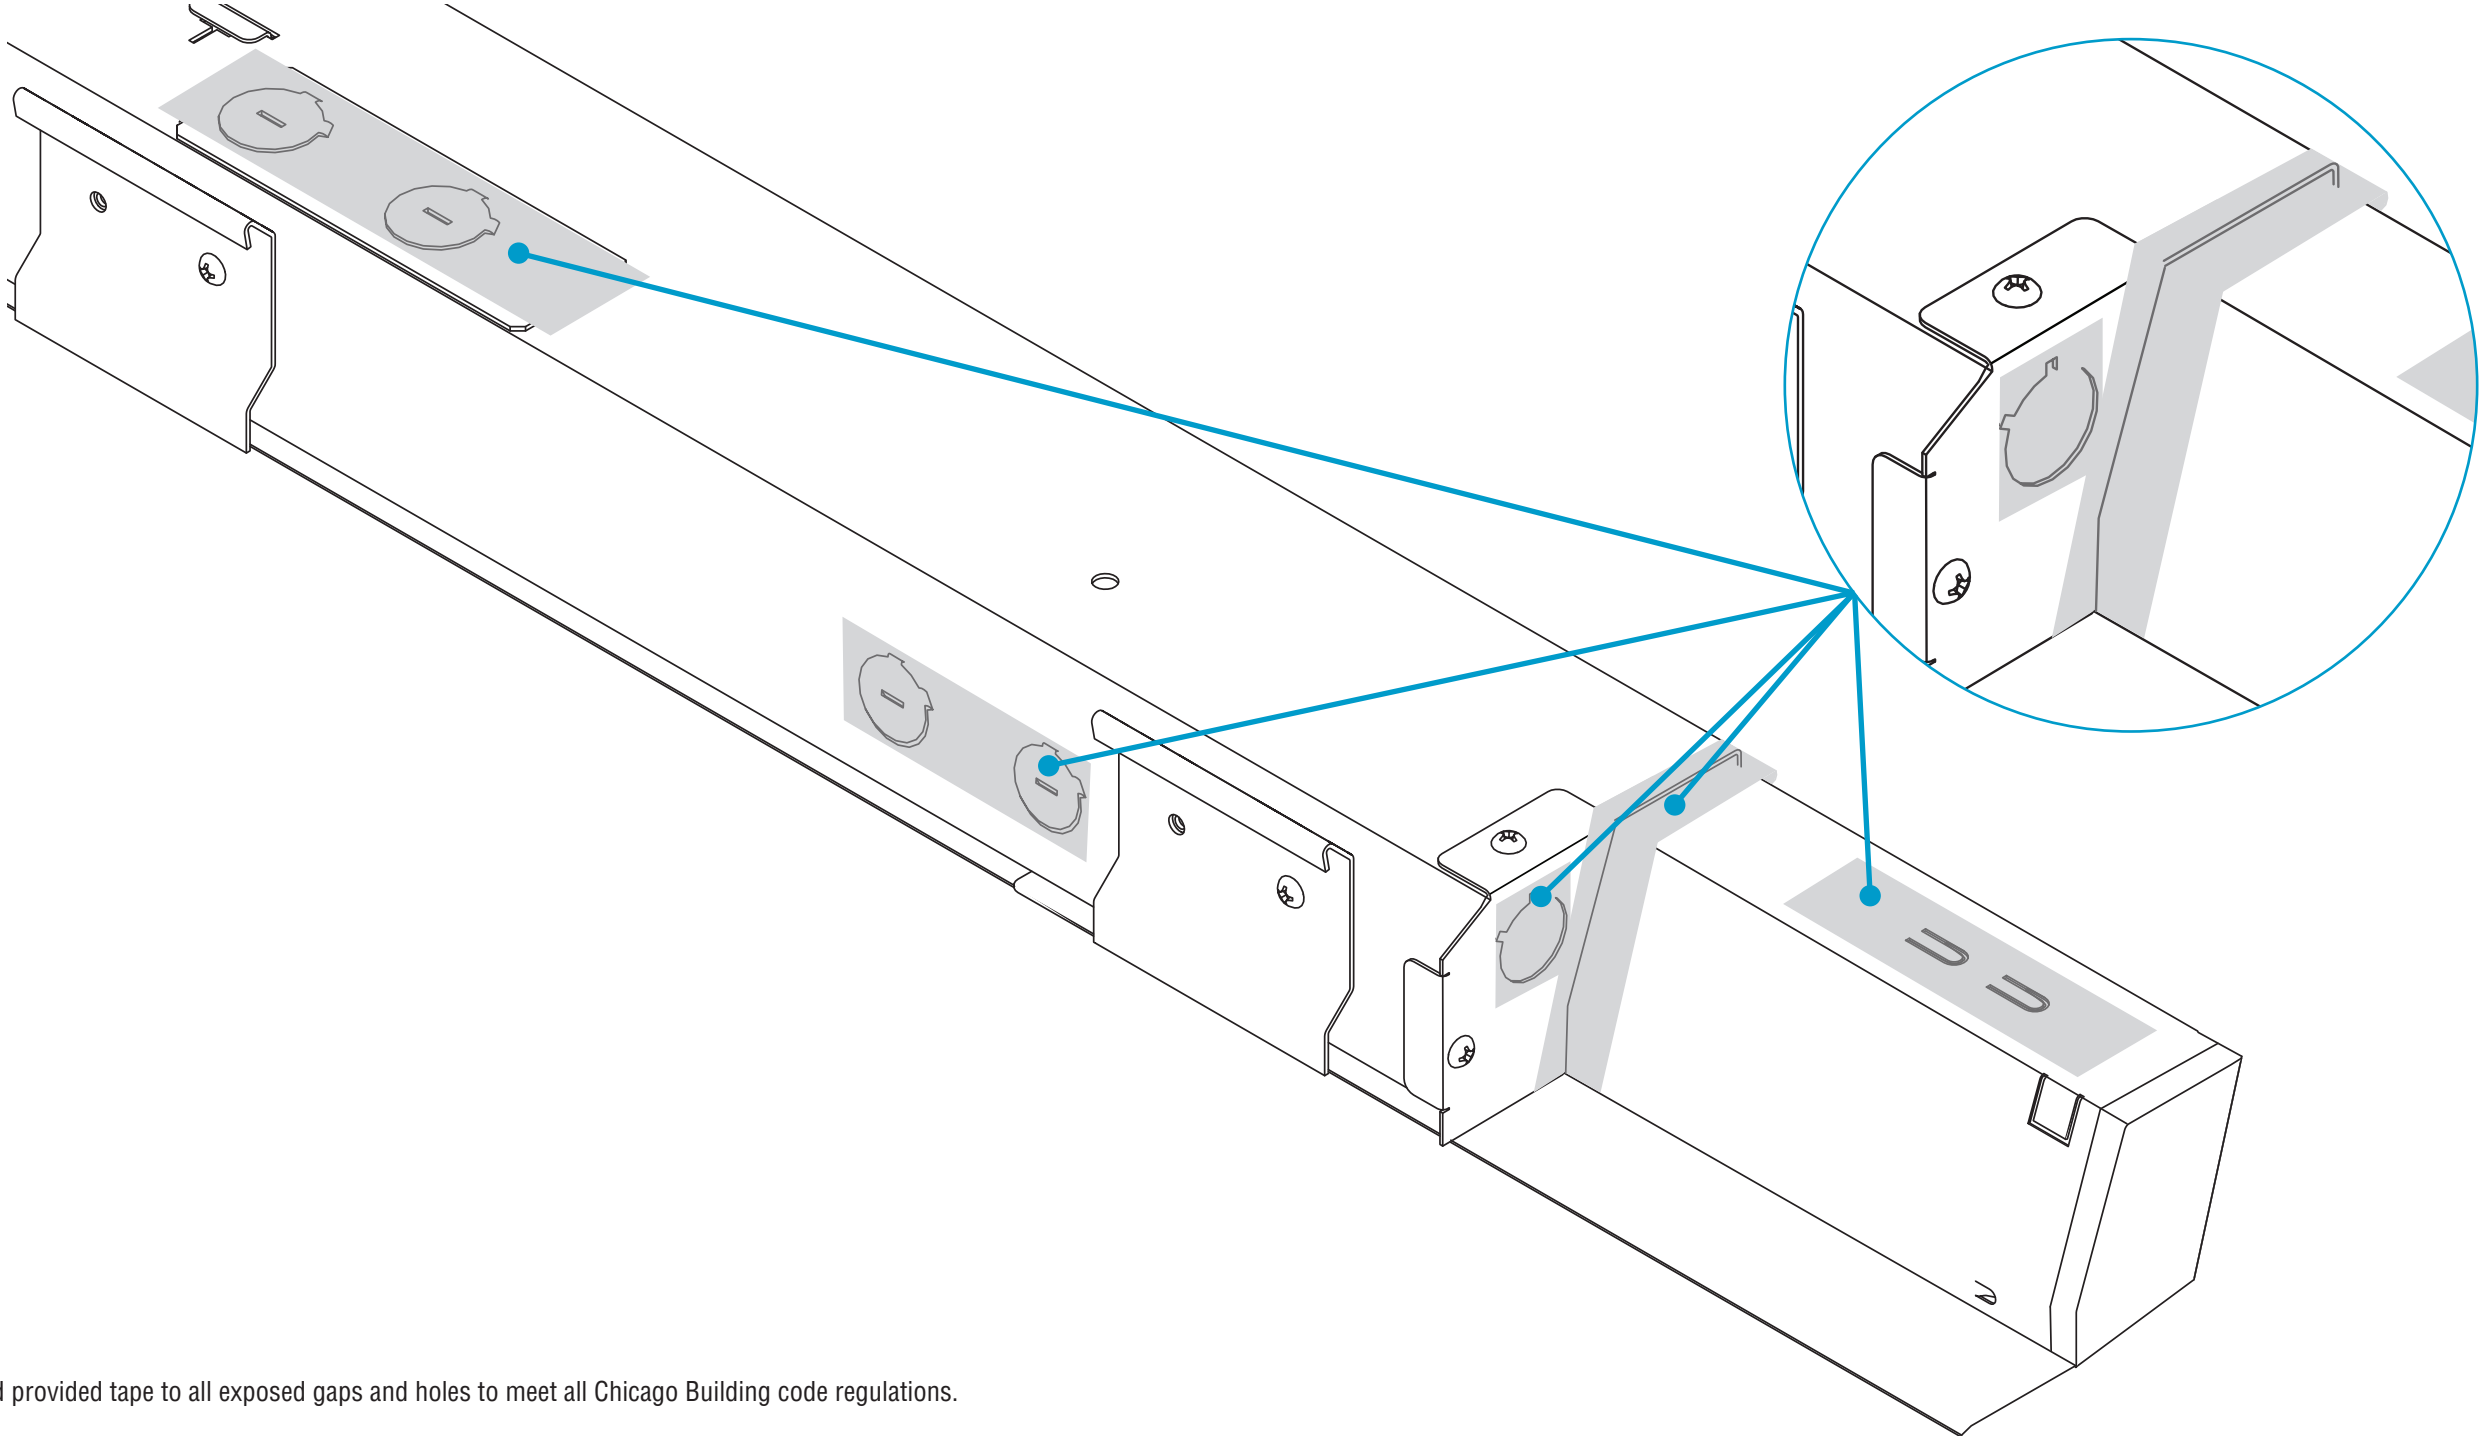

**Chicago Plenum Tape
(Provided)**

Note: Tape is not transparent. Holes shown to illustrate what to cover up.

Add provided tape to all exposed gaps and holes to meet all Chicago Building code regulations.