




Edge by Finelite™ INSTALLATION INSTRUCTIONS

UNDERCABINET LUMINAIRE

MOUNTING

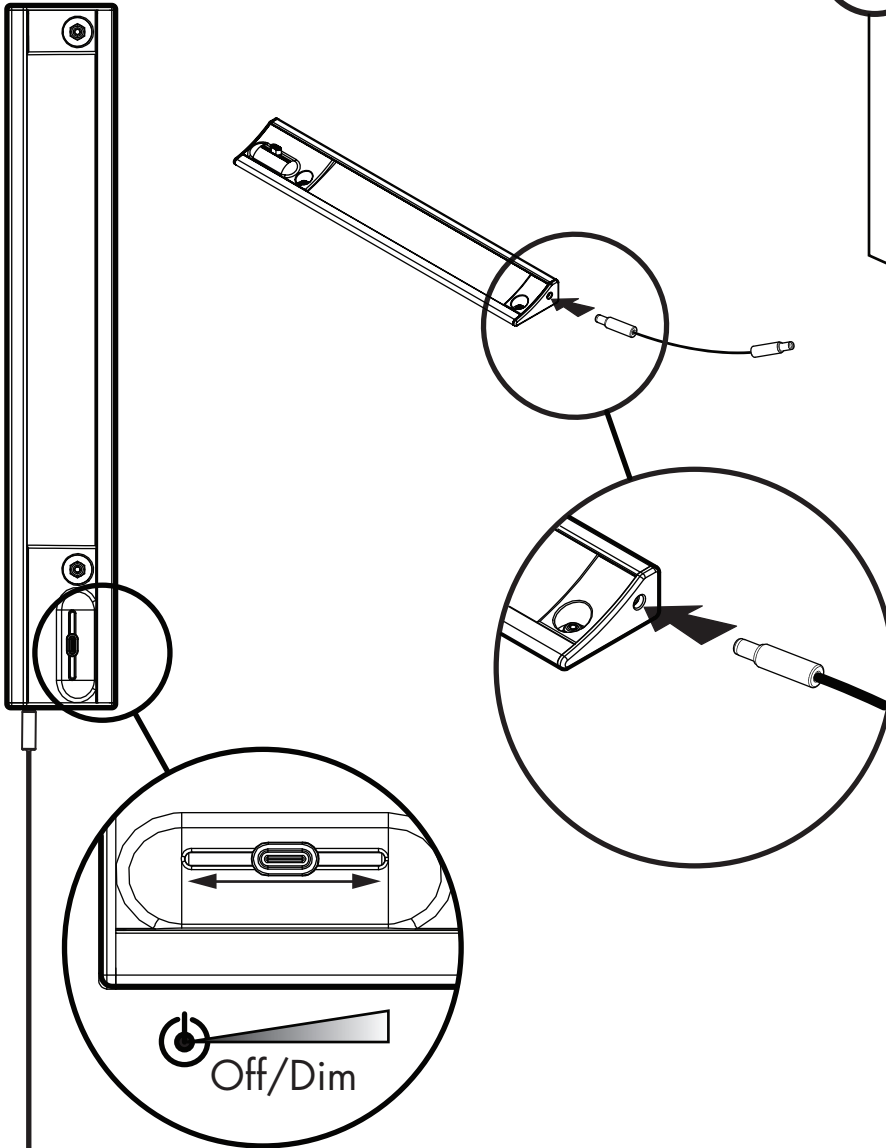

Wood

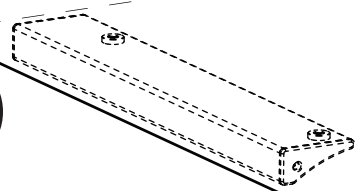



Use appropriate #8 screws provided by others.

Rare earth super-magnets provided pre-installed for mounting directly on steel.

NOTE: Remove rare earth magnets when installing with wood screws.


INDIVIDUAL 8W POWER SUPPLY

On/Off Switch (MAIN)

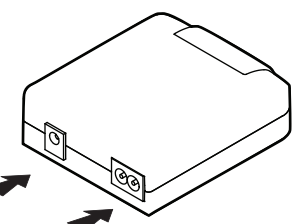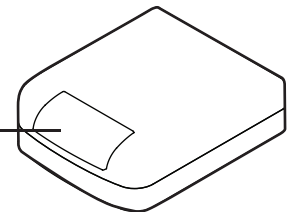


Edge by Finelite™ INSTALLATION INSTRUCTIONS

MULTIPLE UNDERCABINETS

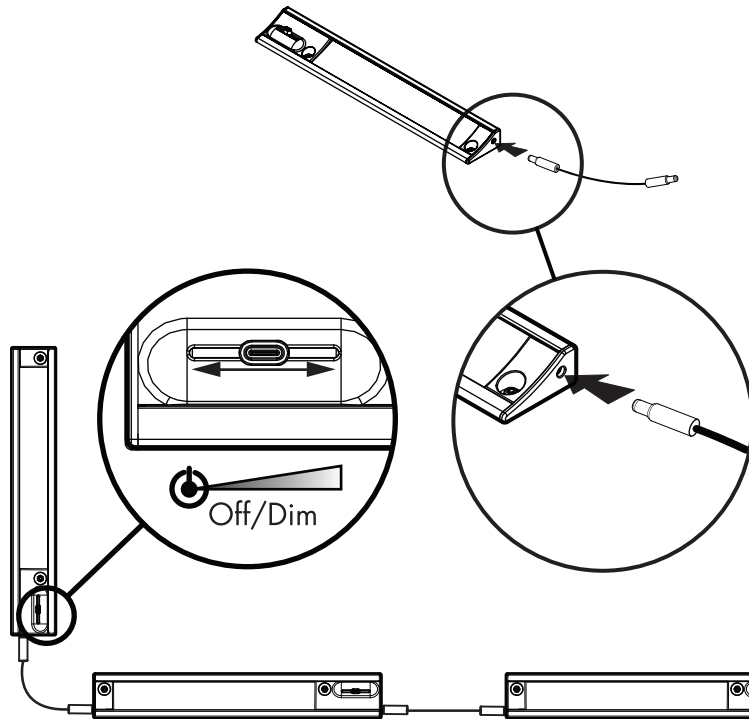


MOUNTING

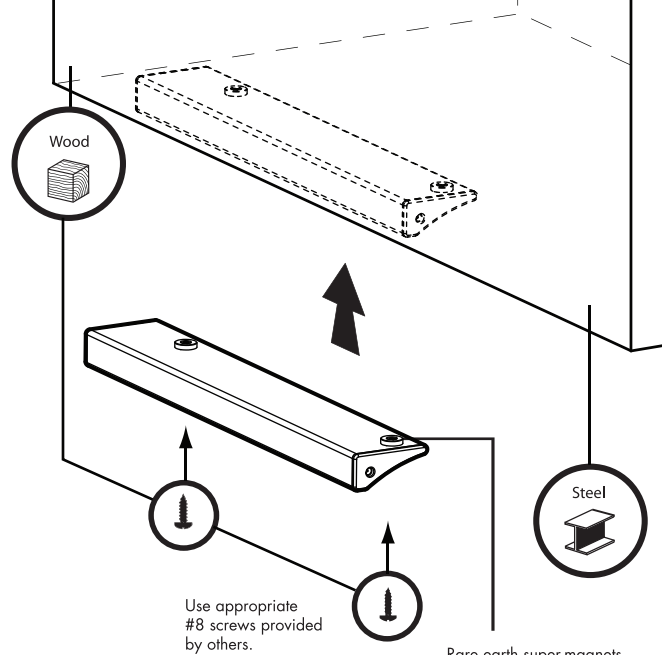

Rare earth super-magnets provided pre-installed for mounting directly on steel.
NOTE: Remove rare earth magnets when installing with wood screws.

21W or 60W POWER SUPPLIES

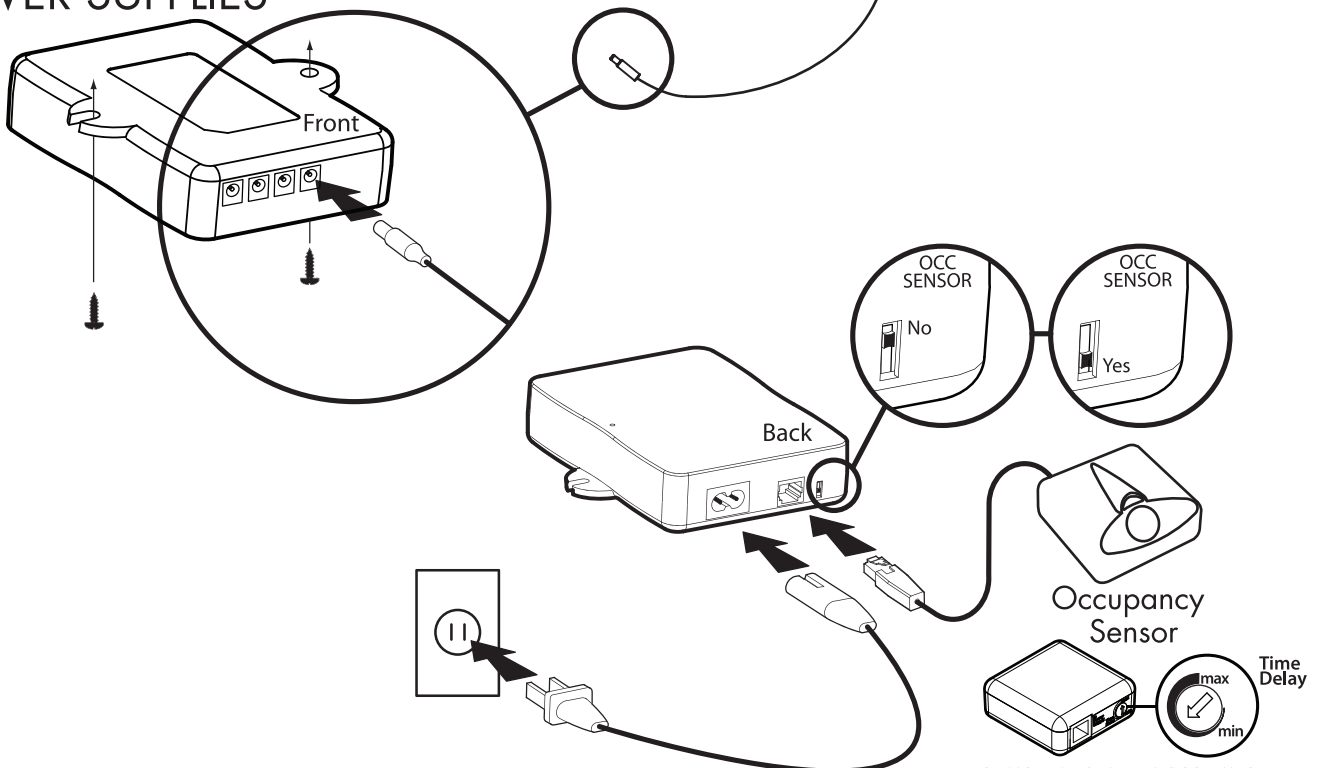

FOR MORE INFO, SEE PLS OCCUPANCY SENSOR INSTRUCTION SHEET