
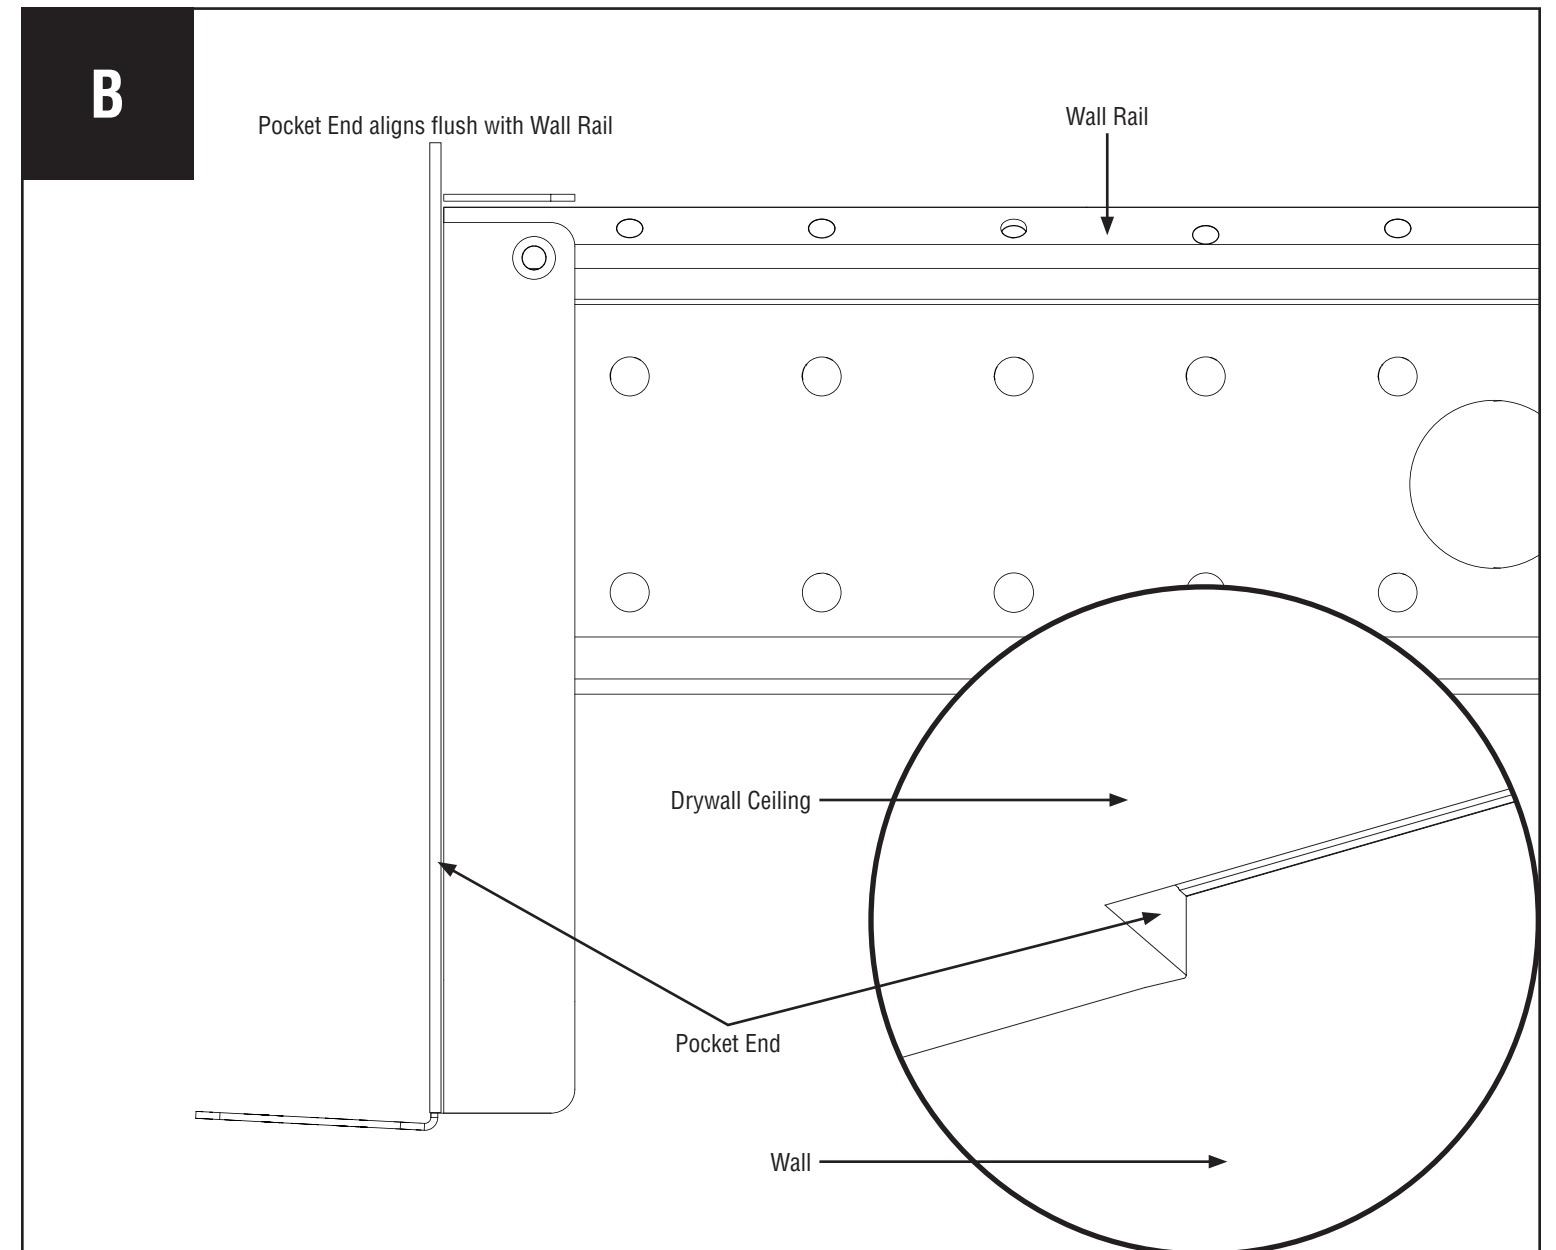


HP Perimeter Slot (HP-WS) Spackle Flange Pocket Endcap Installation Instructions

(To be used in addition to Spackle Flange Installation Instructions)

Rail Placement (at beginning of installation)

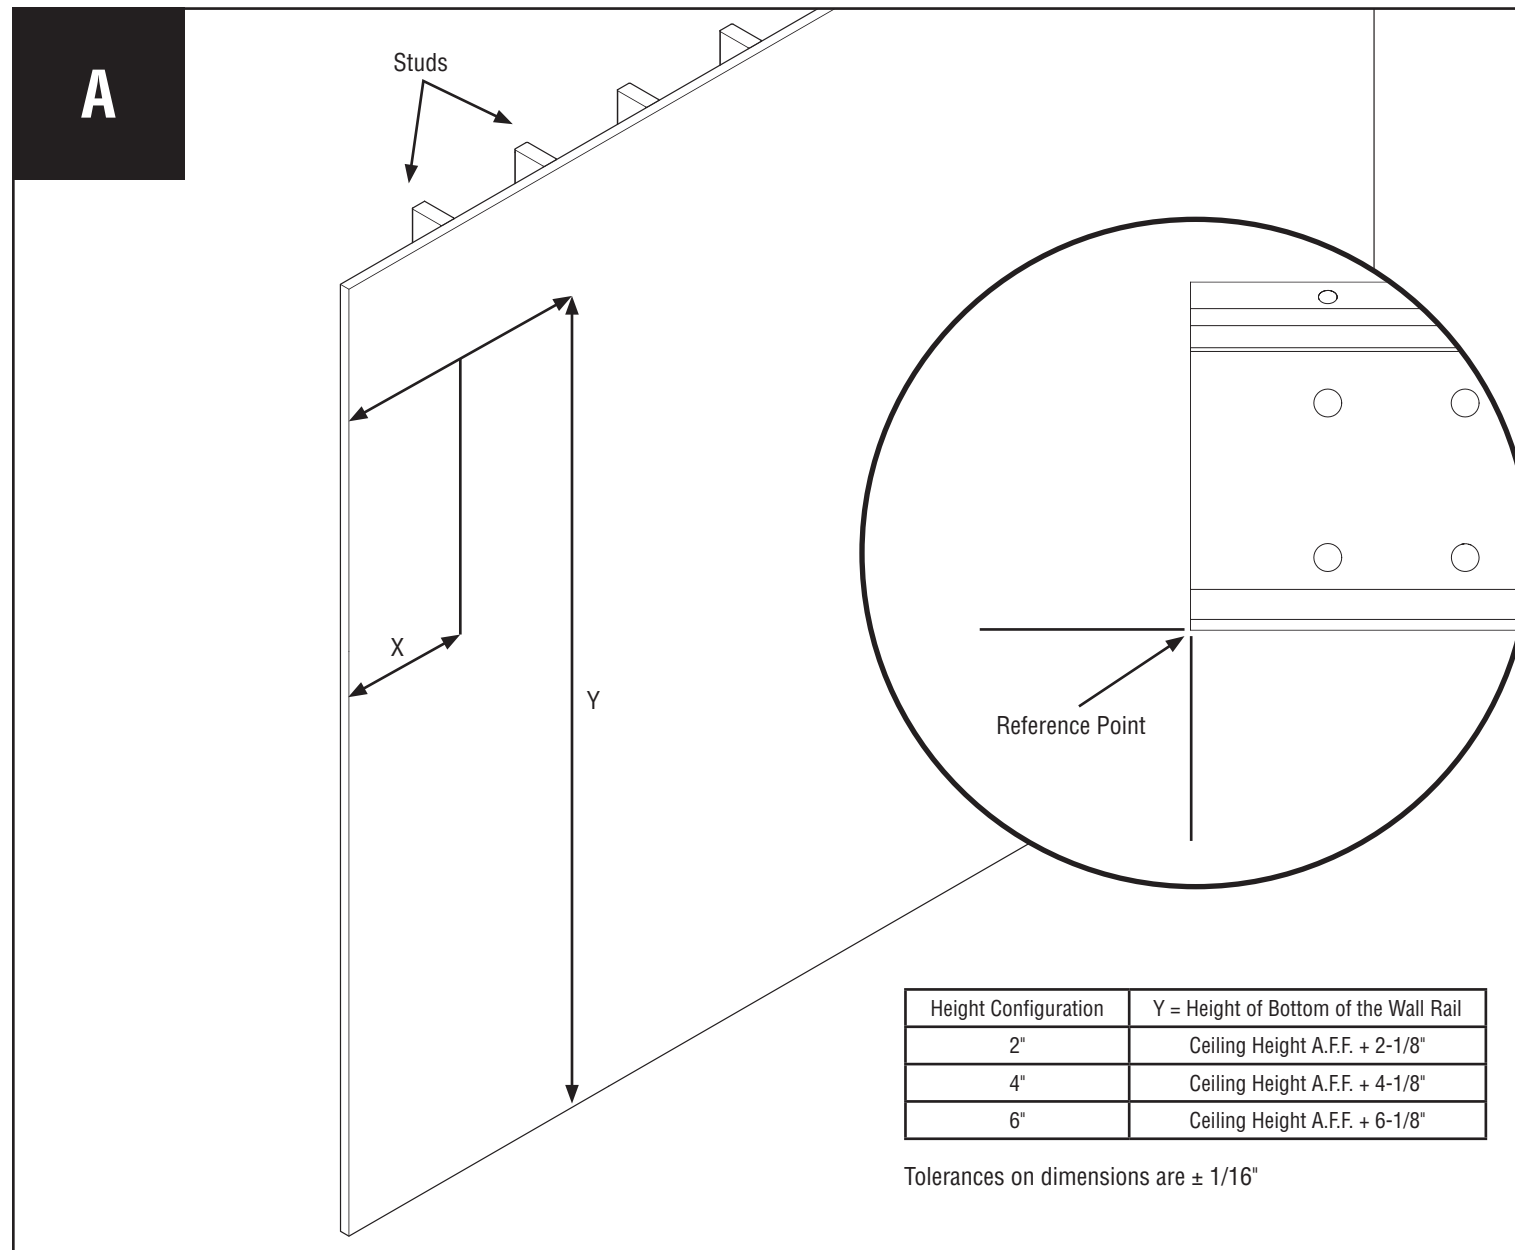

For Wall Rail placement, use the table to help you find where the height of the Wall Rail will be mounted. Mark wall for "Y" dimension, make sure lines are level.


To find the "X" dimension for mounting the Wall Rail, from where the pocket end will be once mounted. That "X" and "Y" from Step A will give you your reference point.

Note: All power connections to be installed to local/national codes by a Certified Electrician.

HP Perimeter Slot (HP-WS) Spackle Flange Pocket Endcap Installation Instructions


(To be used in addition to Spackle Flange Installation Instructions)

Endcap Support (during "Support to Structure" phase)

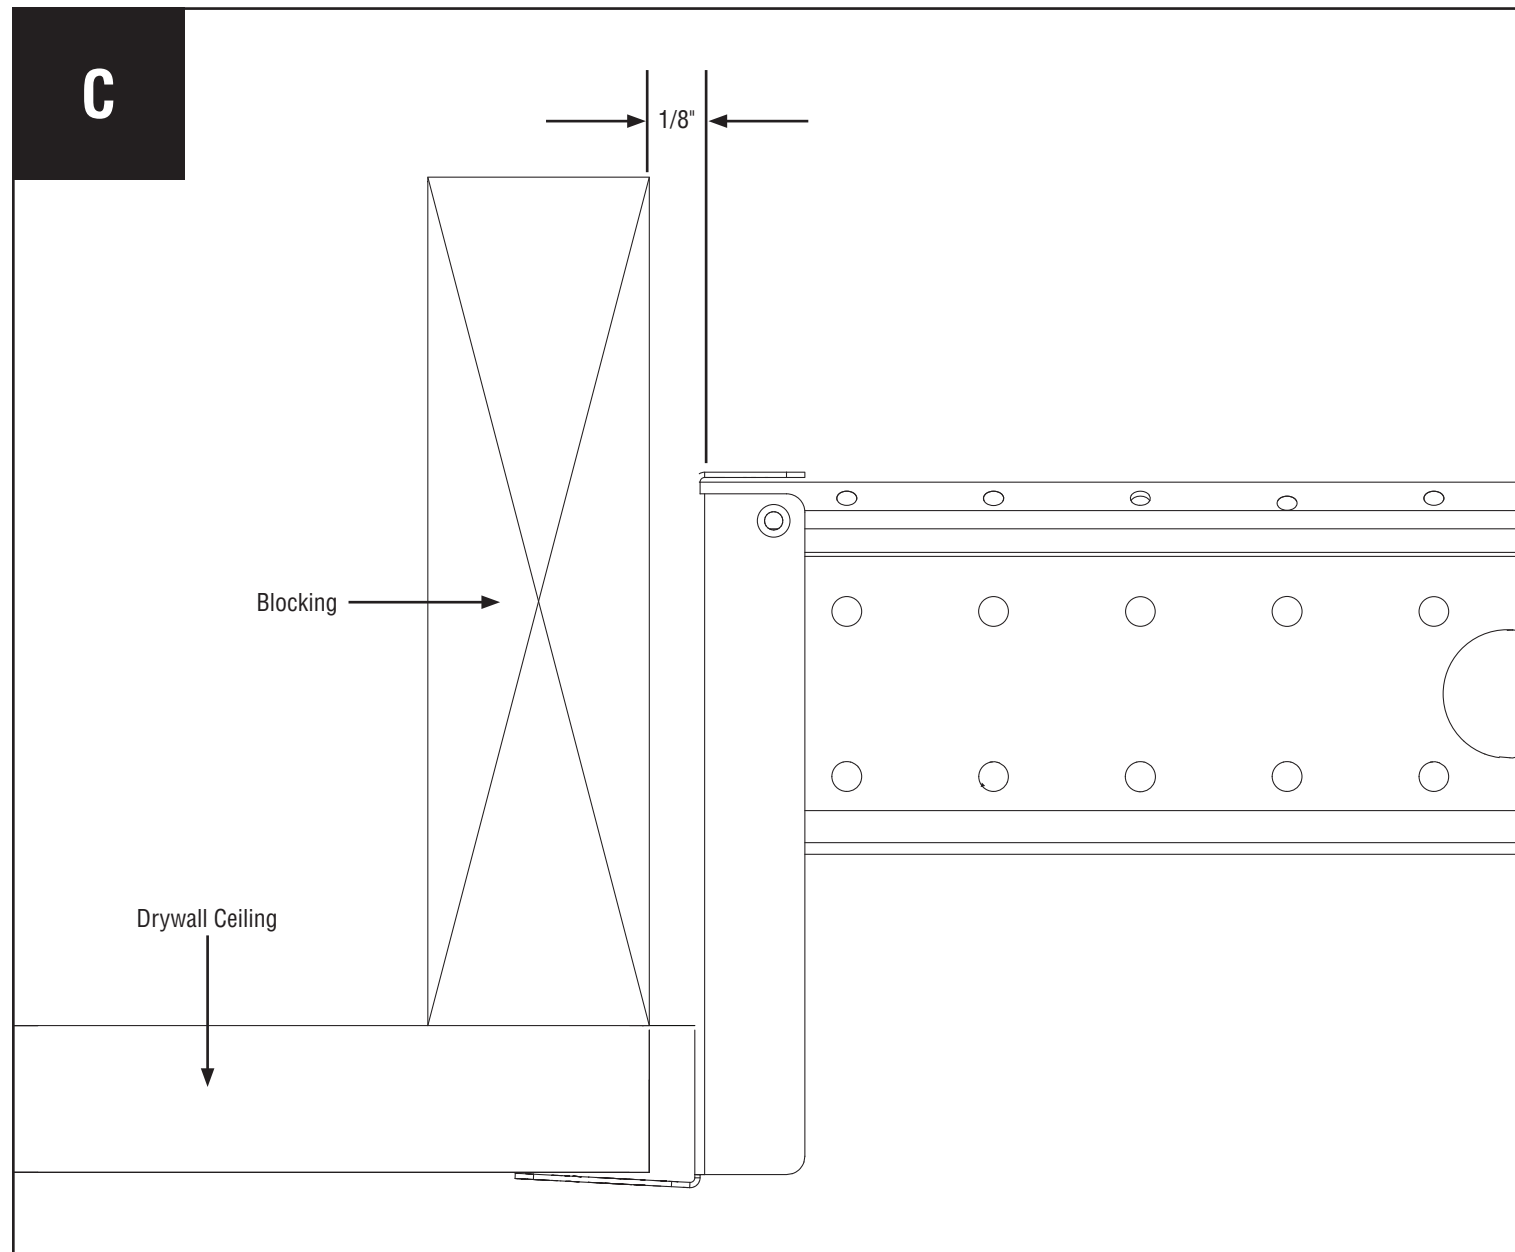

The end cap has a Spackle Flange similar to what runs the length of the fixture. Provide support blocking to attach the drywall through the Spackle Flange End Cap and secure the fixture to the wall.

Finishing

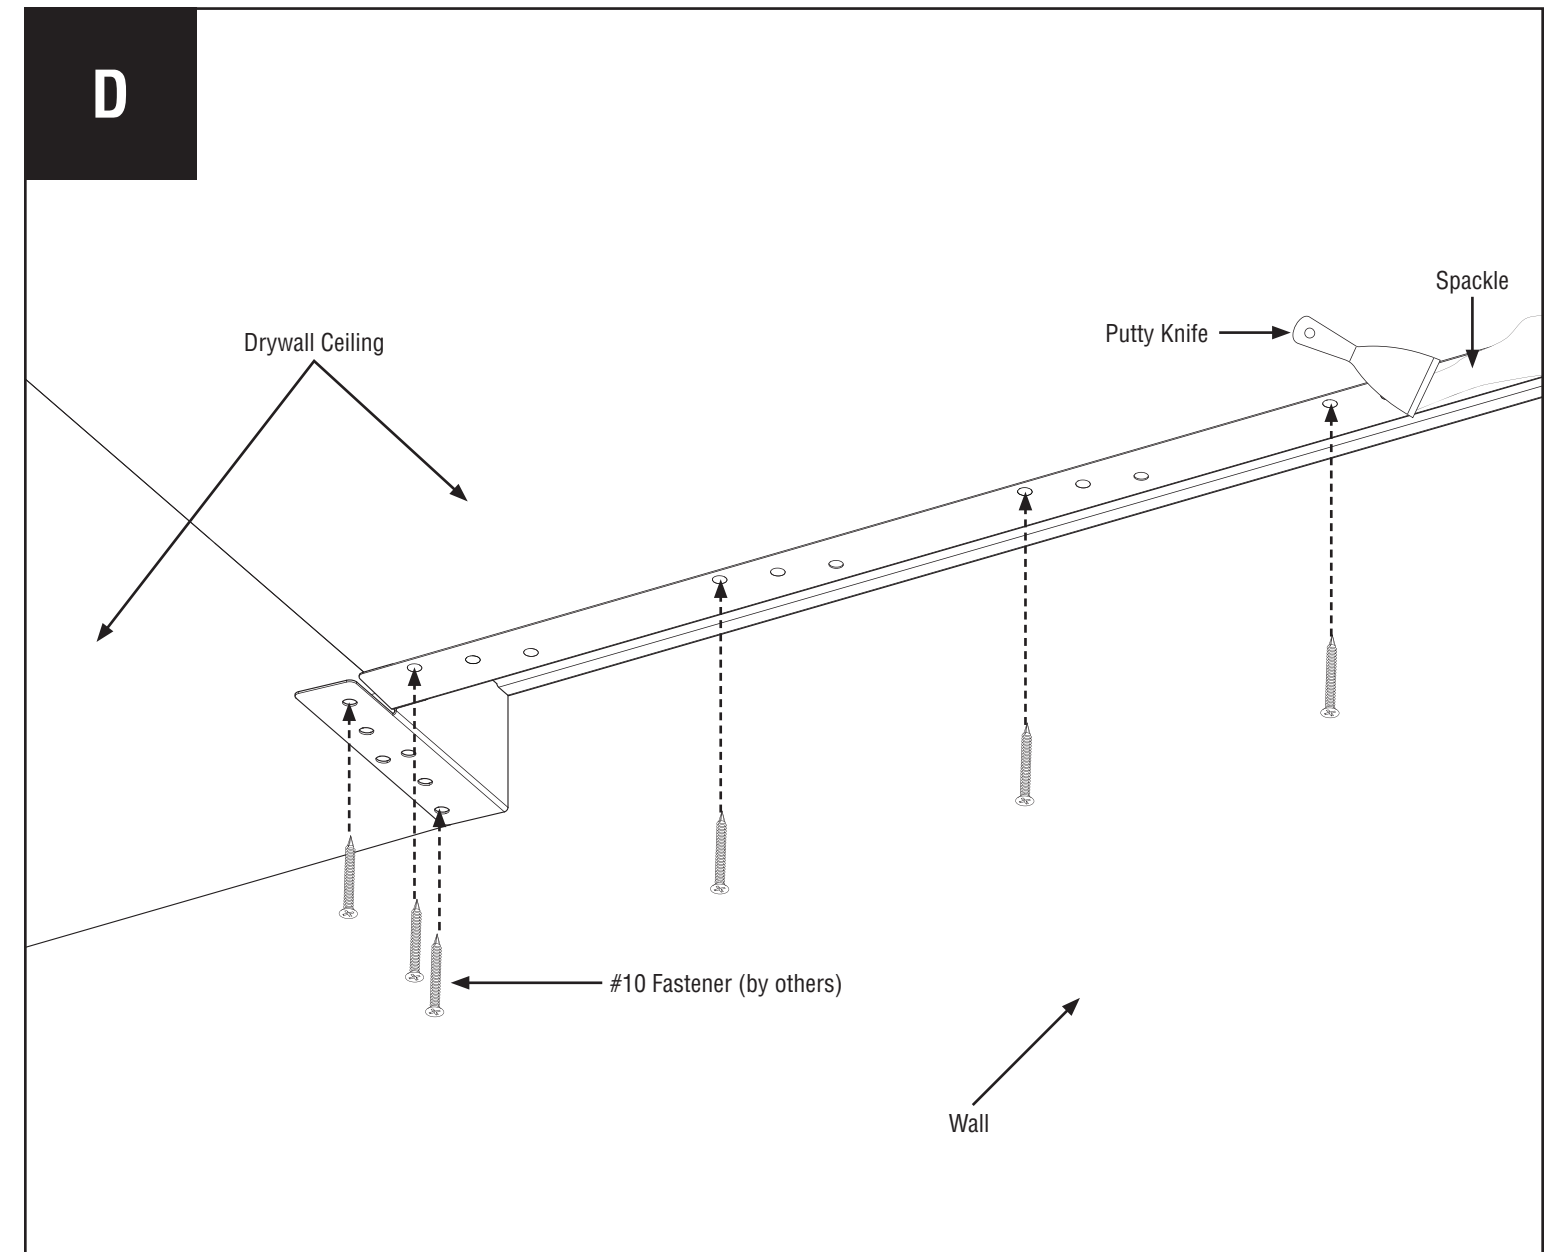

Fasten Spackle Flange to structure and drywall with appropriate #10 fasteners (by others). Mud over Spackle Flange before paint.

Note: All power connections to be installed to local/national codes by a Certified Electrician.