Overview

FINELITE® Better Lighting

NOTES

- · All power connections should be installed according to local/national codes by a Certified Electrician.
- This installation requires proper support as each luminaire is being installed.
- DO NOT attempt to join luminaires together on the floor. Damage may result when lifted.








Robust Joints



Plug-Together

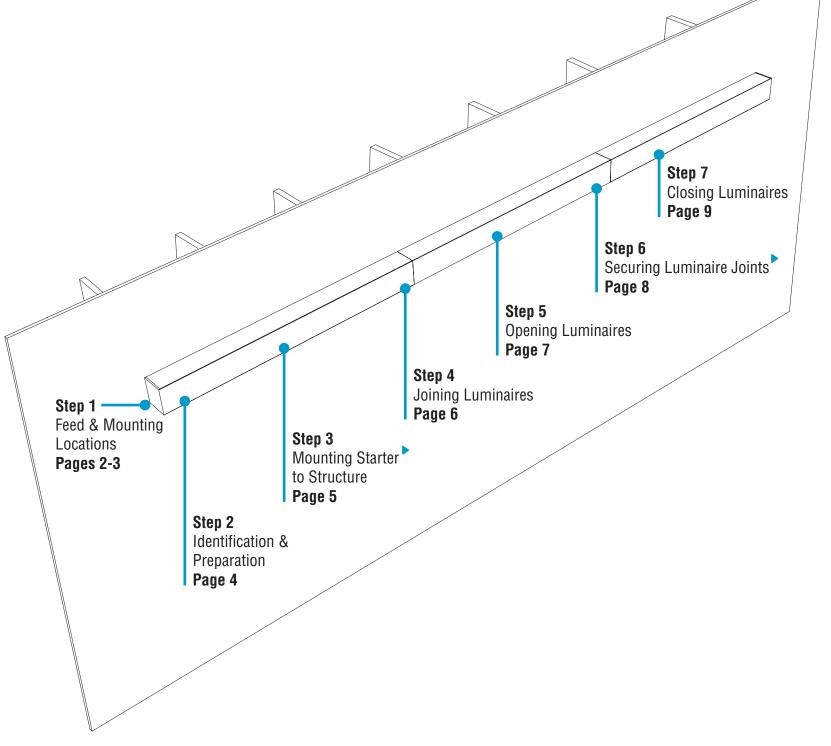


HP-2 / HP-4 Wall Mount Indirect Installation Instructions Step 1 - Feed & Mounting Locations

FINELITE® Better Lighting


J-Box & Feed Location

- Position luminaire on wall in desired location.
- Mark the top corner of the luminaire, not including the endcap. This is Point A.
 Use Point A to find and mark feed location.
- Use feed location to center and install 2x4 (single-gang) J-Box.
- Position and install starter wall rail. (See page 3.)

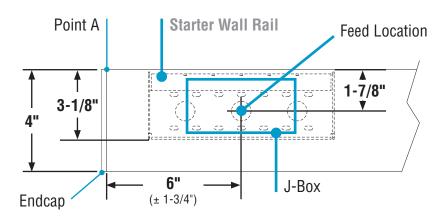


Mounting Locations

- X = Luminaire section length (X Measurements do not include endcaps)
- Position wall rails as indicated to the right.
- Center of starter wall rail is 6" (± 3/4") from Point A.
- Ensure wall rail mounts are secured to proper structural support.

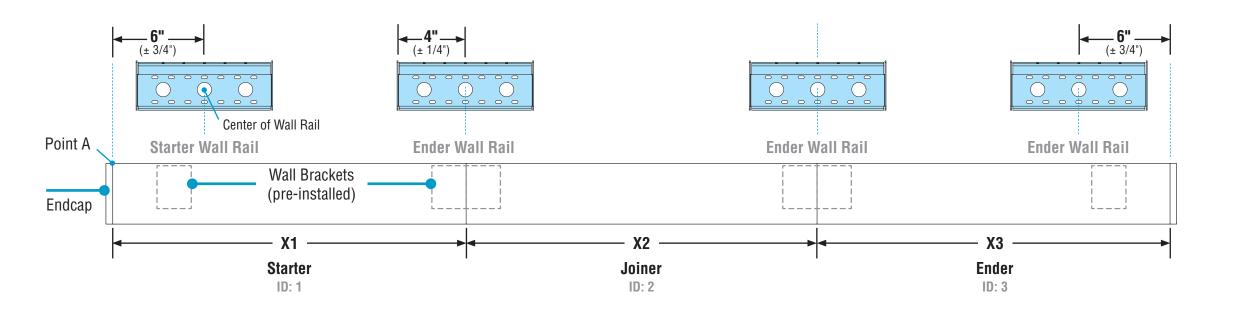


CONTINUED




Step 1 - Feed & Mounting Locations




A. Mount Wall Rail & Power Feed

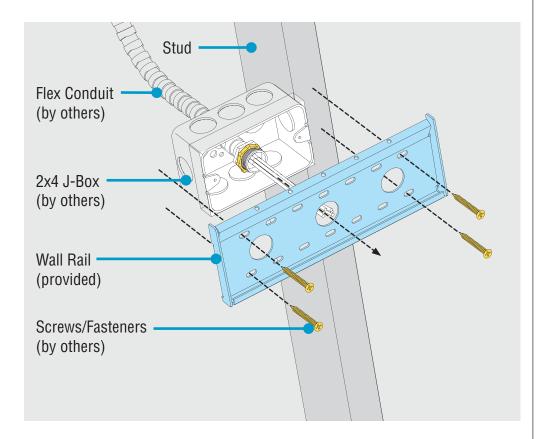

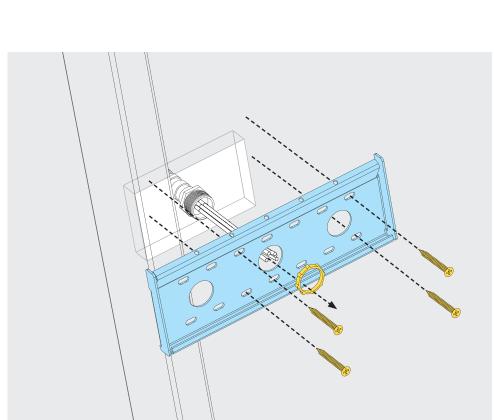



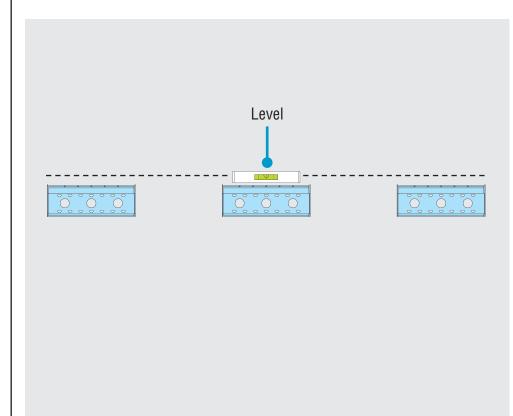


- - Install all wall rails, ensuring they are level with each other.

- Use feed location to center and install 2x4 (single-gang) J-Box.
- · Level wall rail to ensure proper mounting.
- Install screws through rail and into proper structure support.







Wall Rail (provided)

Alternate Mounting Method




Step 2 - Identification & Preparation




A. Identify Luminaires



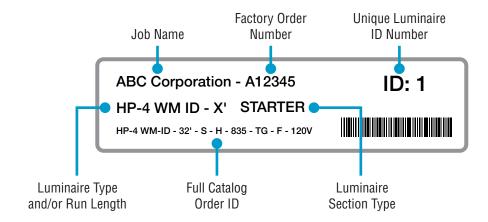

- Identify all luminaires by their ID label that can be found on the box, on the diffuser, and inside the luminaire.
- **NOTE:** Exact location of labels in these areas may vary.
- Remove all luminaires from their box.
- · Refer to Record Drawings that can be found in the hardware kit.


B. Remove Diffusers

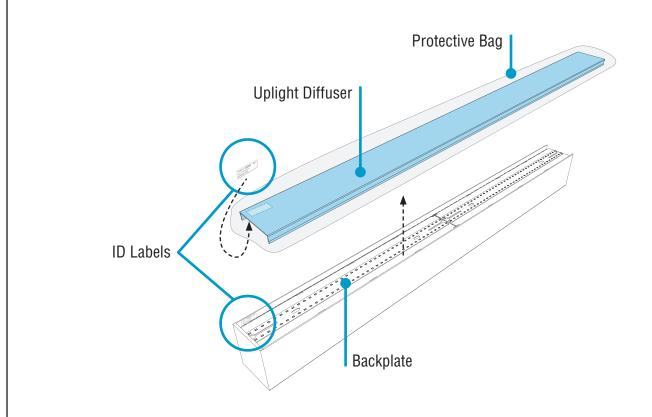

- Carefully remove all diffusers, keeping them inside their protective bags.
- · Set aside all diffusers to prevent from getting dirty or damaged.
- Ensure diffusers can be clearly identified back to its corresponding luminaire.

Kitted Hardware

- Finelite has provided items listed here, with their Finelite part numbers. These items can be found in separate boxes shipped with the luminaire.
- Account for all parts and set aside until they are needed.
- All other hardware needed for this installation will be by others.



Wall Rail Part# 20081 Feed & Mounting Locations pp. 2-3, Step 1



#8-18 x 1/4" Mounting Screw

Part# 94059 Mounting Starter to Structure p. 5, Step 3 Closing Luminaires p. 9, Step 7




Yoke Bracket
Part# 45042


#10-32 x 5/8" Yoke Screw Part# 94144

Part# 94144 Securing Luminaire Joints p.8, Step 6


Step 3 - Mounting Starter to Structure



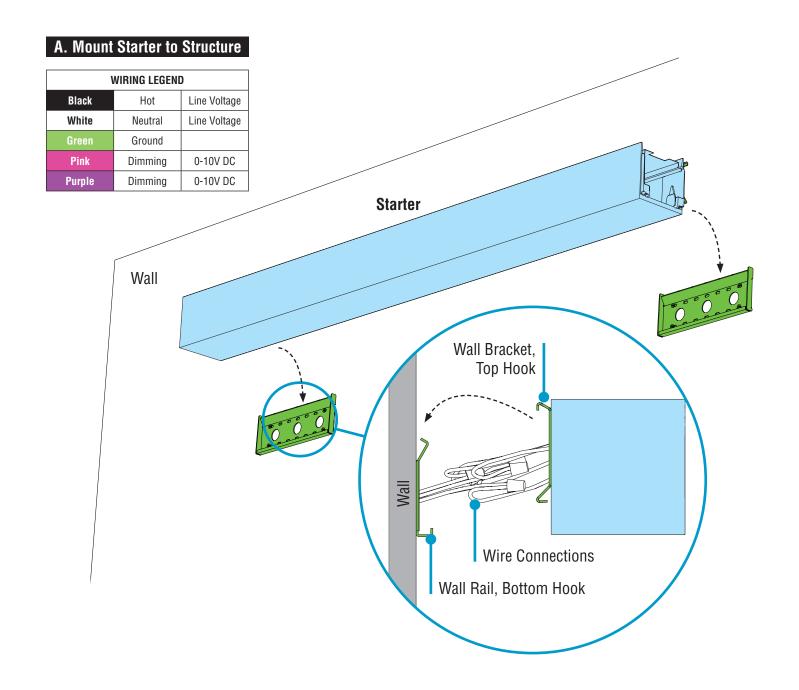

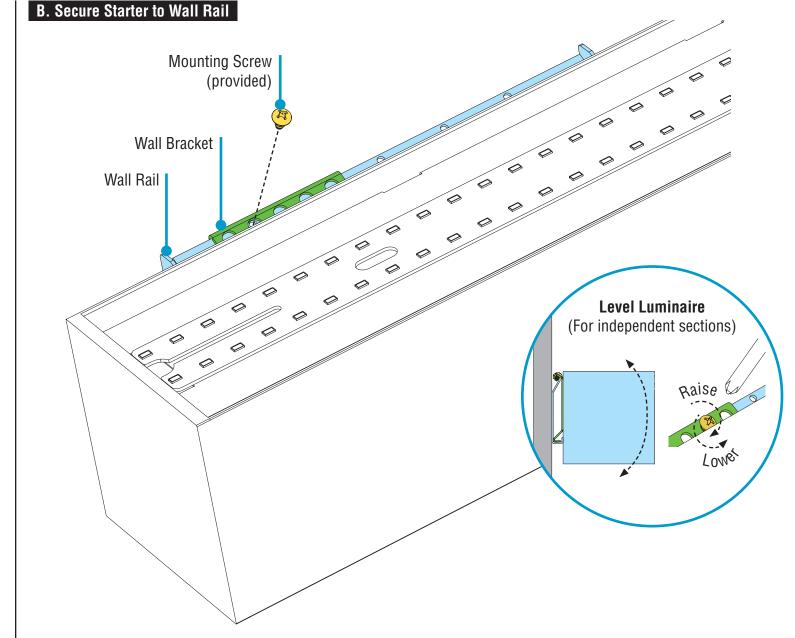

- While properly supporting luminaire, make electrical connections and push complete connections into J-Box.
- Position starter luminaire in place so that the top and bottom hooks of the wall bracket engage with the top and bottom hooks of the wall rail.
- If there is no joiner/ender, then secure starter luminaire to wall rail with a mounting screw and perform leveling. Tightening the screw raises and loosening the screw lowers the front edge of the luminaire. **PROCEED TO STEP 7, B**.
- If continuing with a joiner/ender luminaire, do not perform leveling yet.









HP-2 / HP-4 Wall Mount Indirect Installation Instructions **Step 4** - Joining Luminaires

Starter



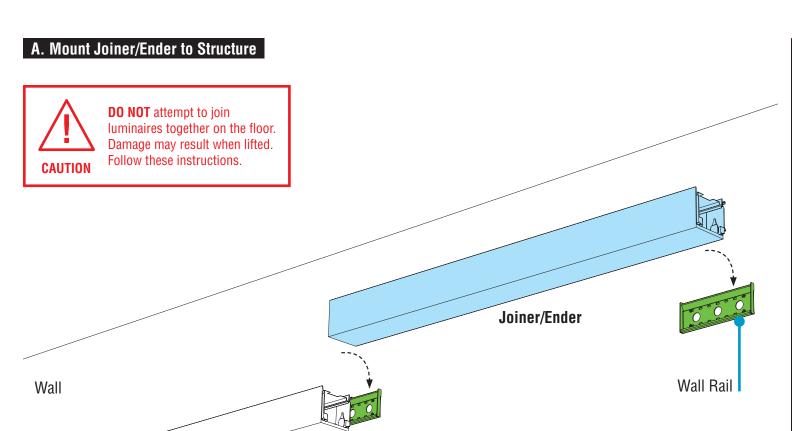

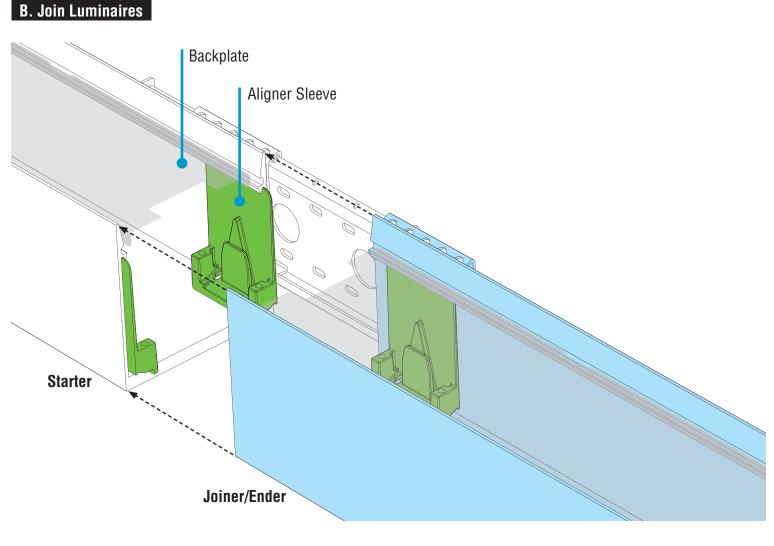


- Maneuver joiner/ender luminaire to wall and engage top and bottom hooks of the wall bracket with the top and bottom hooks of the wall rail.
- · Align joiner/ender with aligner sleeves on starter and slide together. Be careful not to damage any wiring.
- · If necessary, lift both luminaires, then slide together.

HP-2 / HP-4 Wall Mount Indirect Installation Instructions Step 5 - Opening Luminaires

FINELITE® Better Lighting


Release Backplates

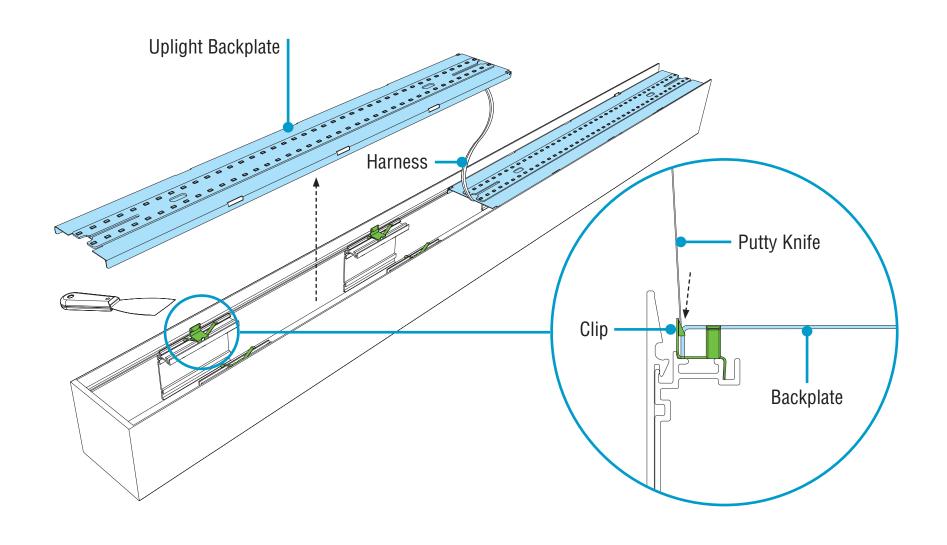


- To release backplates at joints only, use a putty knife to slip behind backplate edges and release them from clips.
- Lift backplate out of housing channel, pulling wiring harnesses through the housing.
- Let backplate rest atop of luminaire. DO NOT disconnect LED board harnesses.
 NOTE: If part of an independent section, PROCEED TO STEP 7.

Step 6 - Securing Luminaire Joints



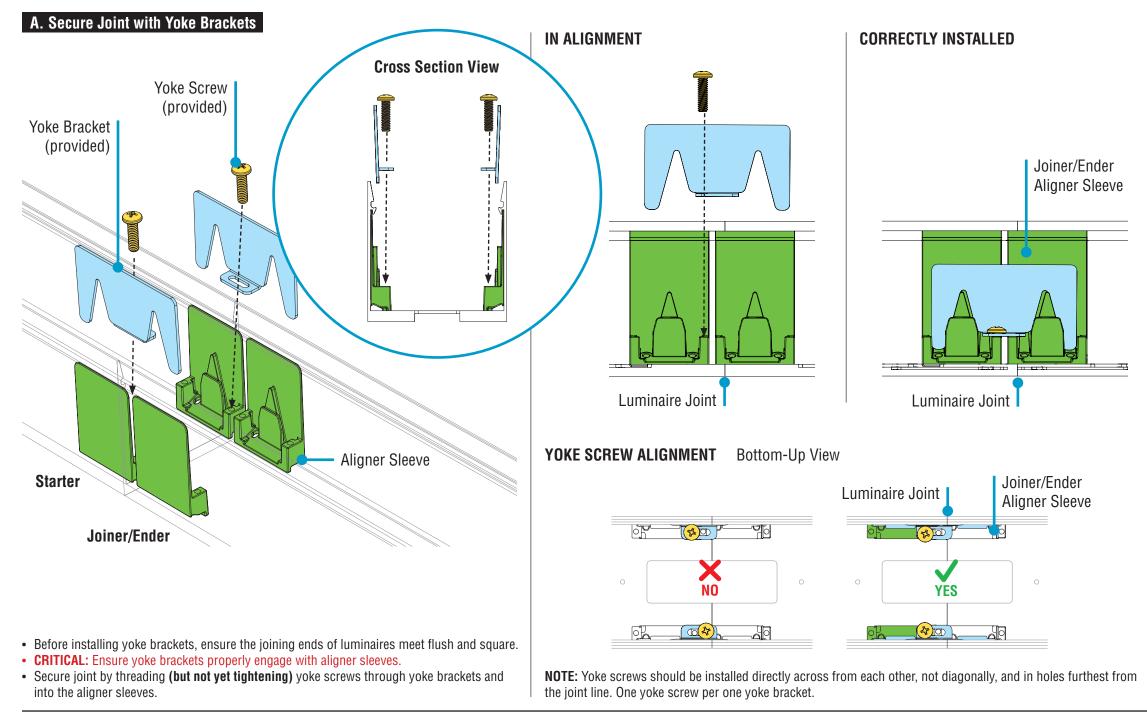

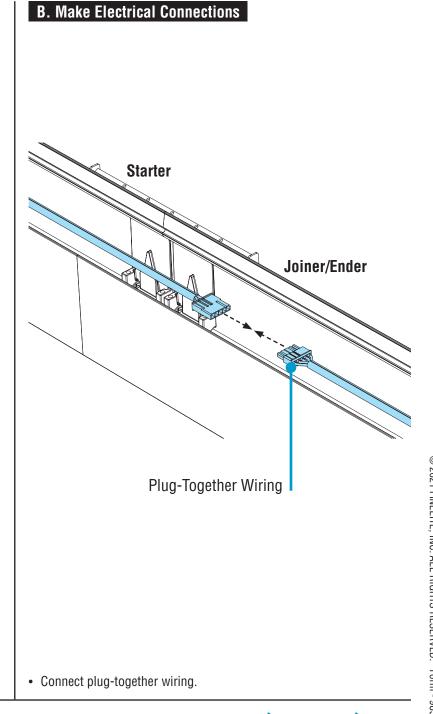













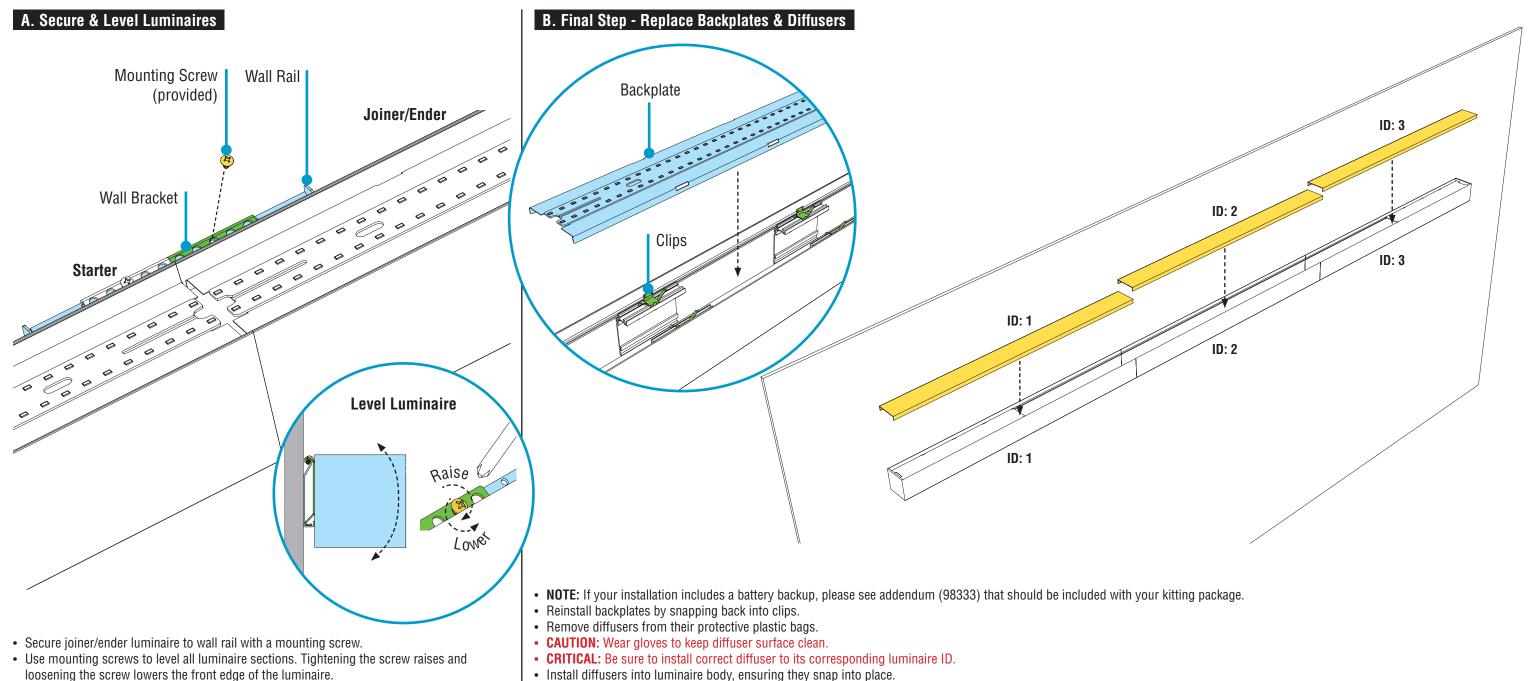

- loosening the screw lowers the front edge of the luminaire.
- Tighten yoke screws1 until joint seam of luminaires is closed.

• Turn power on to luminaire.