Regressed Luminaires Use Same Instructions

Overview

FINELITE® Better Lighting

NOTES

- If luminaire contains a sensor or socket refer to the appropriate Addendum.
- · All power connections should be installed according to local/national codes by a Certified Electrician.
- This installation requires **proper support** as each luminaire is being installed.
- DO NOT attempt to join luminaires together on the floor. Damage may result when lifted.





Removal



0-10V

Dimming




Access



& Installation

Robust Joints

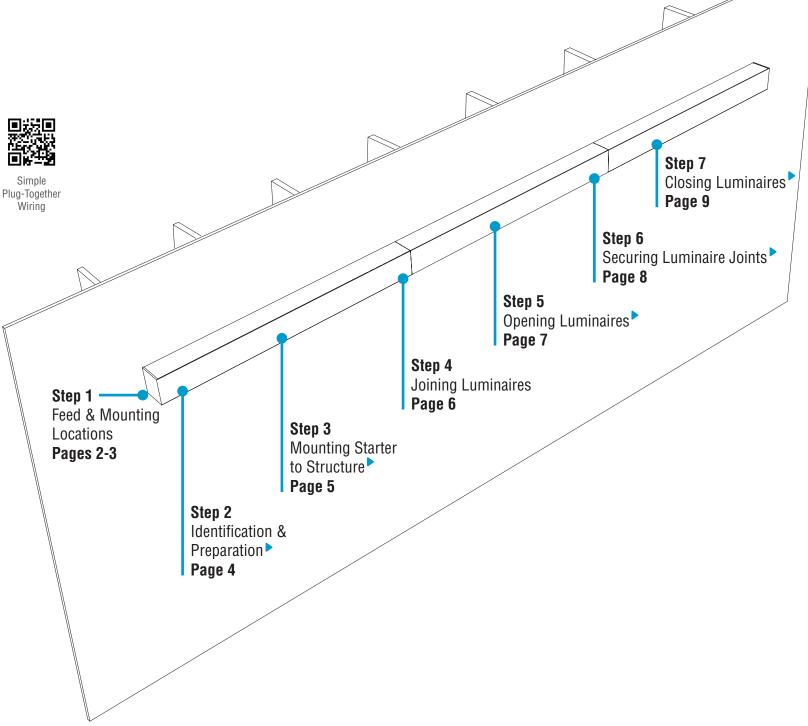


© 2020 FINELITE, INC. ALL RIGHTS RESERVED. Form - 98524. V5 EFFECTIVE DATE: 09/17/20

HP-2 / HP-4 Wall Mount Indirect/Direct Installation Instructions Step 1 - Feed & Mounting Locations

FINELITE® Better Lighting


J-Box & Feed Location

- Position luminaire on wall in desired location.
- Mark the top corner of the luminaire, not including the endcap. This is Point A.
 Use Point A to find and mark feed location.
- Use feed location to center and install 2x4 (single-gang) J-Box.
- Position and install starter wall rail. (See page 3.)

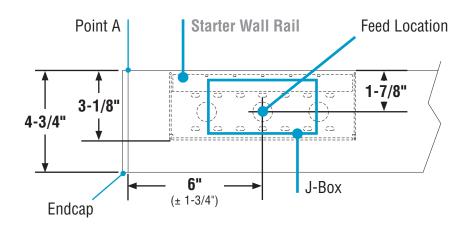

Mounting Locations


- X = Luminaire section length (X Measurements do not include endcaps)
- · Position wall rails as indicated to the right.
- Center of starter wall rail is 6" (± 3/4") from Point A.
- Ensure wall rail mounts are secured to proper structural support.

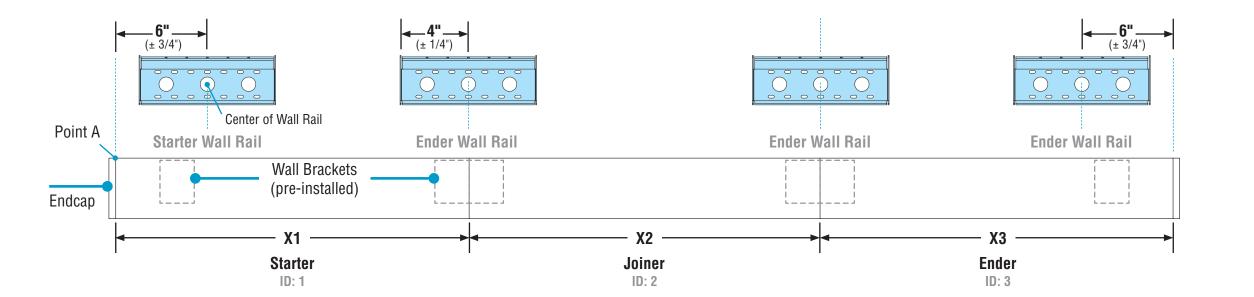

CONTINUED





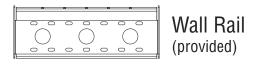



HP-2 / HP-4 Wall Mount Indirect/Direct Installation Instructions **Step 1** - Feed & Mounting Locations


Alternate Mounting Method

FINELITE® Better Lighting


A. Mount Wall Rail & Power Feed

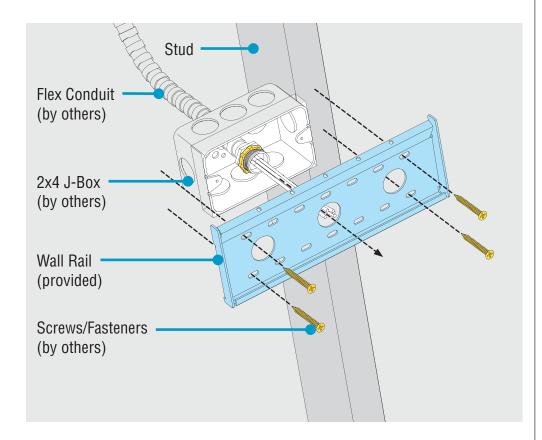

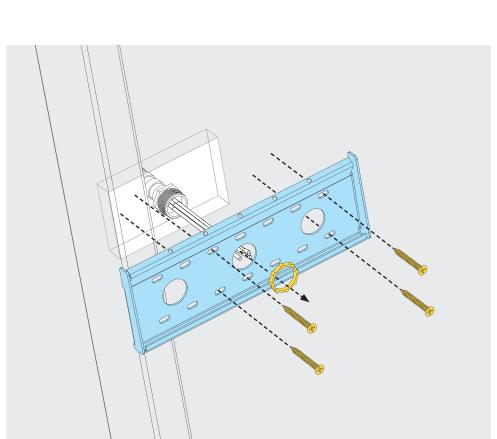



B. Level Wall Rails

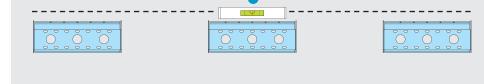

• Use feed location to center and install 2x4 (single-gang) J-Box.

· Level wall rail to ensure proper mounting.


• Install screws through rail and into proper structure support.

• Install all wall rails, ensuring they are level with each other.





2x4 J-Box (by others)

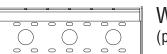

Wall Rail (provided)




Step 2 - Identification & Preparation

FINELITE® Better Lighting


A. Identify Luminaires



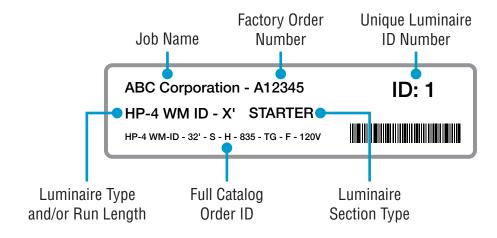


- Identify all luminaires by their ID label that can be found on the box, on the diffuser. and inside the luminaire.
- · Remove all luminaires from their box.
- **NOTE:** Exact location of labels in these areas may vary.
- Refer to Record Drawings that can be found in the hardware kit.

B. Remove Downlight Diffusers or Louvers Remove Diffusers Downlight Diffuser Protective Bag Remove Louvers

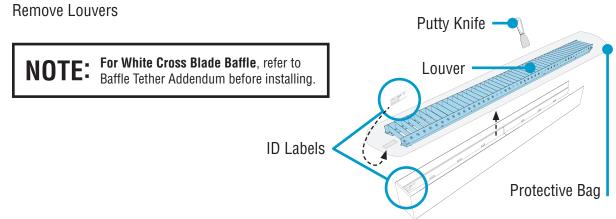

- · Carefully remove all downlight diffusers or louvers, keeping them inside their protective bags.
- FOR LOUVERS: Release louvers by inserting the blade of a putty knife approximately 1" down behind louver edges and pry up.
- Set aside all downlight diffusers or louvers to prevent from getting dirty or damaged.
- Ensure downlight diffusers or louvers can be identified back to their corresponding luminaire.


C. Remove Uplight Diffuser

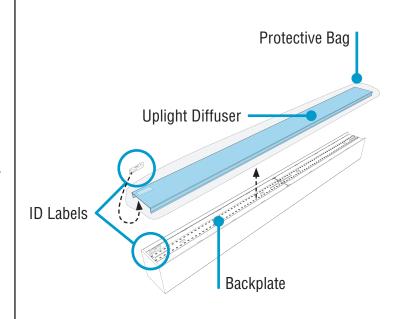

- · Carefully remove all uplight diffusers, keeping them inside their protective bag.
- · Set aside all uplight diffusers to prevent from getting dirty
- Ensure uplight diffusers can be identified back to their corresponding luminaire.

Kitted Hardware

- · Finelite has provided items listed here, with their Finelite part numbers. These items can be found in separate boxes shipped with the luminaire.
- Account for all parts and set aside until they are needed.
- All other hardware needed for this installation will be by others.

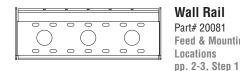

Wall Rail Part# 20081 Feed & Mounting Locations



#8-18 x 1/4" **Mounting Screw**

Part# 94059 **Mounting Starter to Structure** p. 5. Step 3 **Closing Luminaires** p. 9, Step 7



Yoke Bracket Part# 45042

#10-32 x 5/8" Yoke Screw


Part# 94144 **Securing Luminaire Joints** p.8, Step 6




Step 3 - Mounting Starter to Structure




A. Mount Starter to Structure

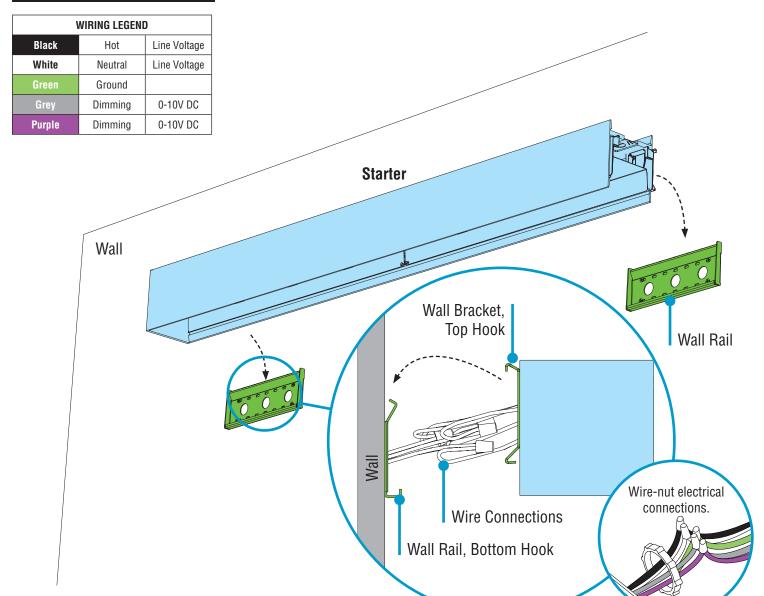

- While properly supporting luminaire, make electrical connections and push complete connections into J-Box.
- Position starter luminaire in place so that the top and bottom hooks of the wall bracket engage with the top and bottom hooks of the wall rail.

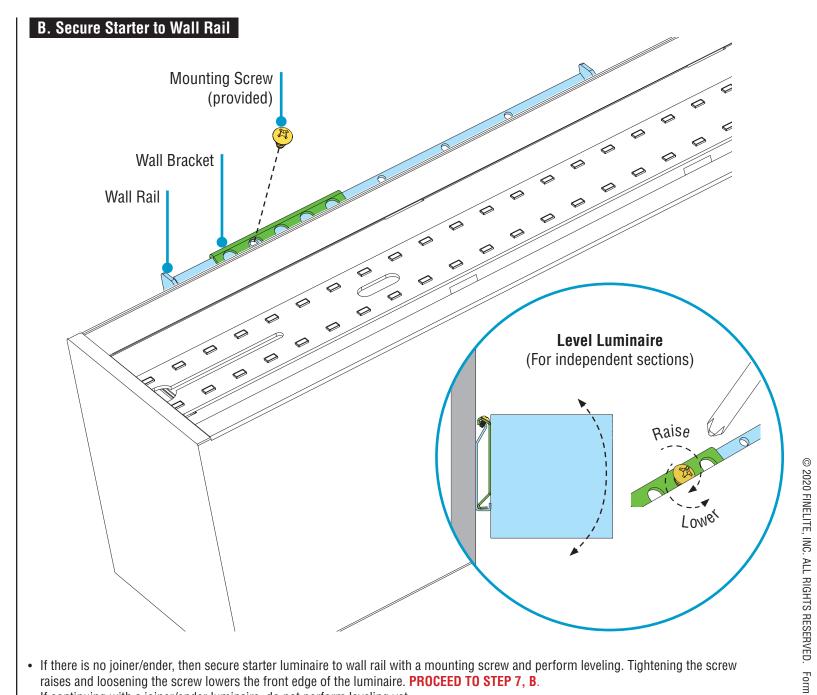

- If there is no joiner/ender, then secure starter luminaire to wall rail with a mounting screw and perform leveling. Tightening the screw raises and loosening the screw lowers the front edge of the luminaire. PROCEED TO STEP 7, B.
- If continuing with a joiner/ender luminaire, do not perform leveling yet.

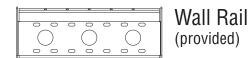






HP-2 / HP-4 Wall Mount Indirect/Direct Installation Instructions Step 4 - Joining Luminaires




A. Mount Joiner/Ender to Structure

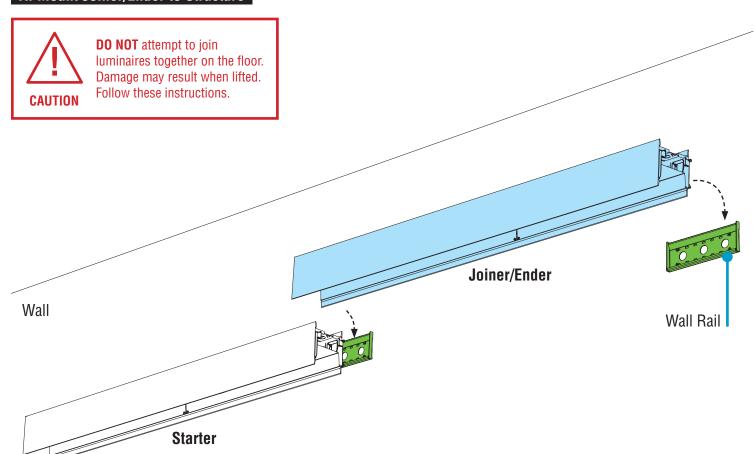

B. Join Luminaires



Once luminaires are aligned together, **joiner luminaire is not yet secure**. Ensure it does not slide off as it rests on the starter luminaire.

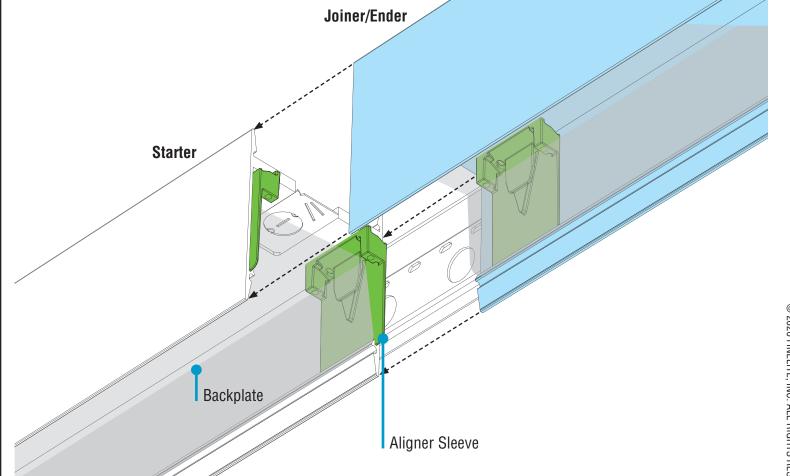



- Maneuver joiner/ender luminaire to wall and engage top and bottom hooks of the wall bracket with the top and bottom hooks of the wall rail.
- Align joiner/ender with aligner sleeves on starter and slide together. Be careful not to damage any wiring.
- If necessary, **lift** both luminaires, then slide together.


HP-2 / HP-4 Wall Mount Indirect/Direct Installation Instructions **Step 5** - Opening Luminaires



Joiner/Ender

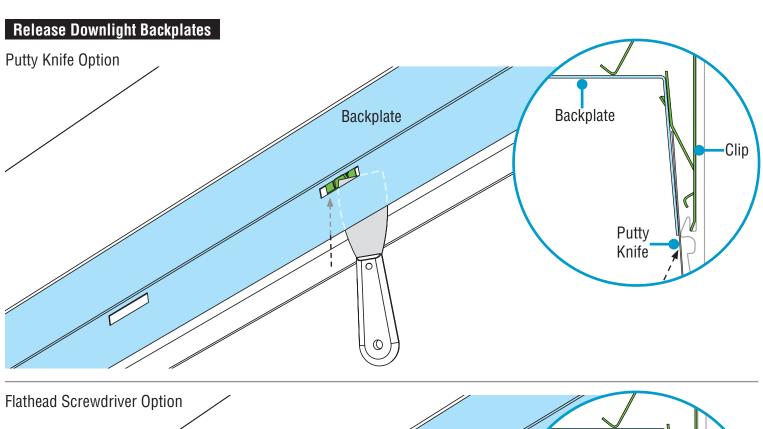

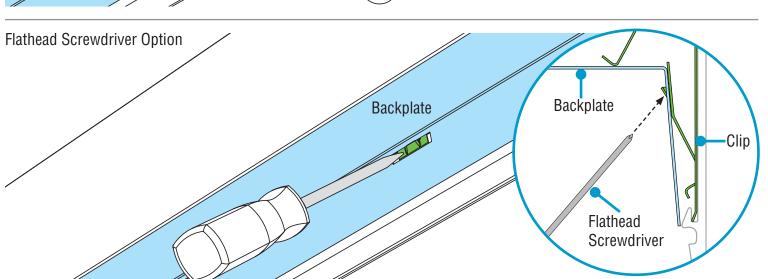

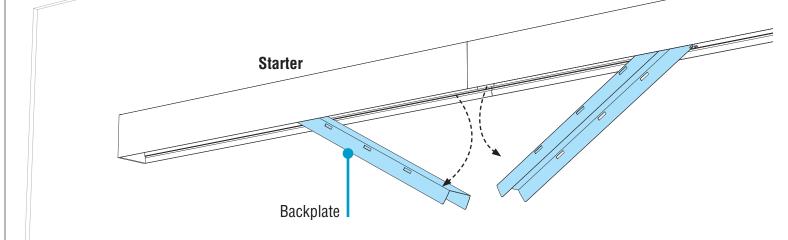

- NOTE: For independent luminaires, backplates do not need to be released.
- Release the backplates from clips by sliding the blade of a putty knife behind backplate edges.
- To use a flathead screwdriver, press end of screwdriver (from inside the luminaire) against the clip, until the backplate is released.


• Carefully rotate backplates out at the joints only and let them hang from luminaire body.




Effortless

Step 6 - Securing Luminaire Joints




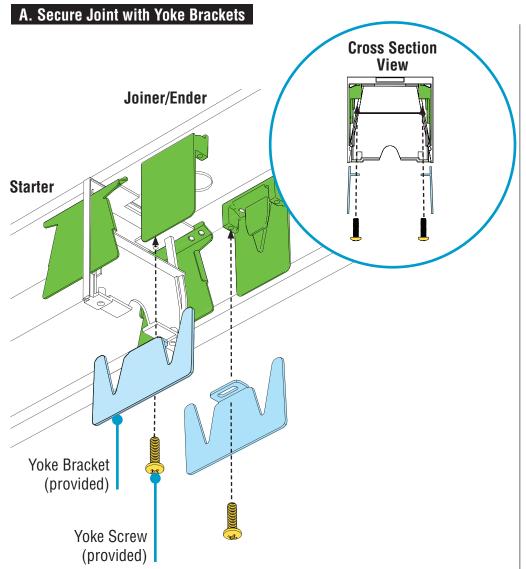

- FOR SENSOR OR SOCKET: If luminaire contains a sensor or socket at joint, refer to page 4 of appropriate Addendum before Securing Luminaire Joints.
- Before installing yoke brackets, ensure the joining ends of luminaires meet flush and square.
- **CRITICAL**: Ensure yoke brackets properly engage with aligner sleeves.
- Secure joint by threading (but not yet tightening) yoke screws through yoke brackets and into the aligner sleeves.

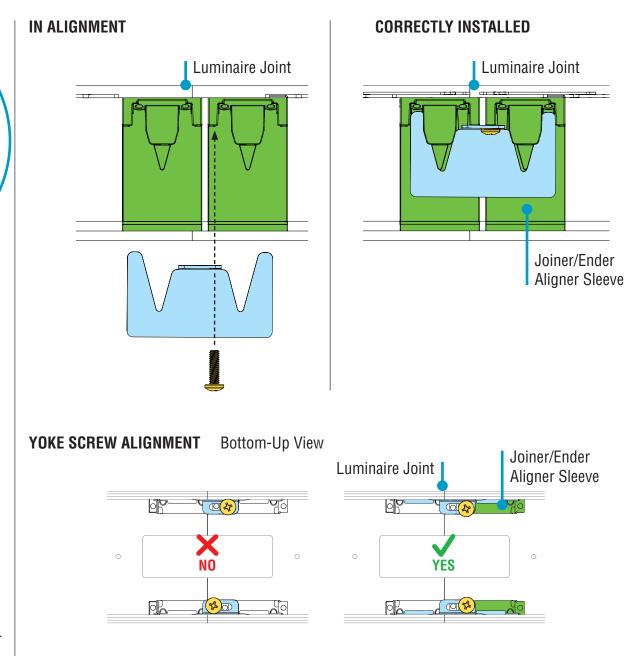

NOTE: Yoke screws should be installed directly across from each other, not diagonally, and in holes furthest from the joint line. One yoke screw per one yoke bracket.

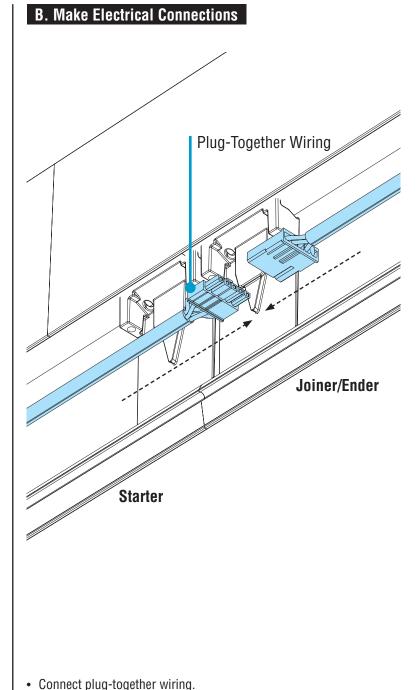












Robust Joints

Step 7 - Closing Luminaires



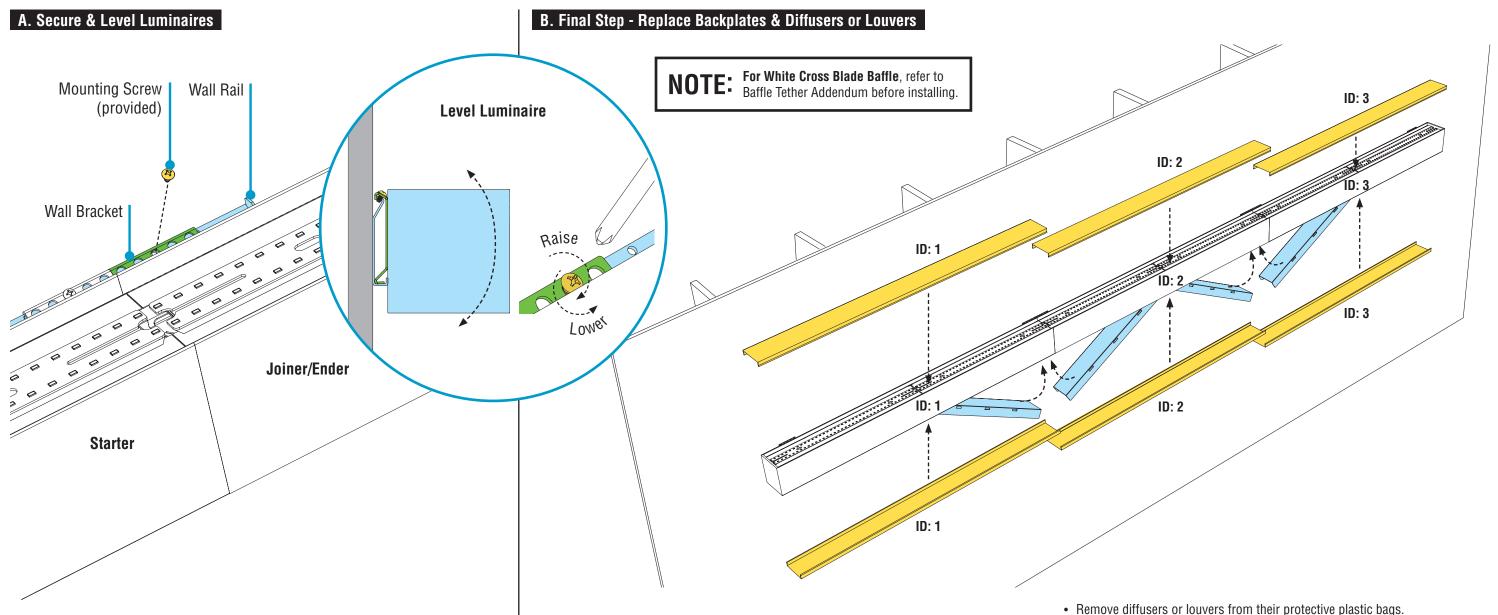

- Secure joiner/ender luminaire to wall rail with a mounting screw.
- Use mounting screws to level all luminaire sections. Tightening the screw raises and loosening the screw lowers the front edge of the luminaire.
- Tighten yoke screws1 until joint seam of luminaires is closed.

- NOTE: If your installation includes a battery backup, please see addendum (98333) that should be included with your kitting package.
- FOR SENSOR OR SOCKET: If luminaire contains a sensor or socket at joint, refer to page 5 of appropriate Addendum before Closing Luminaires.
- Reinstall downlight backplates by rotating back into luminaire body and snapping into clips.
- CAUTION: Wear gloves to keep diffuser or louver surface clean.
- **CRITICAL**: Be sure to install correct diffuser or louver to its corresponding luminaire ID.
- NOTE: For White Cross Blade Baffle, refer to Baffle Tether Addendum before installing.
- Install diffusers or louvers into luminaire body, ensuring they snap back into place.
- Turn power on to luminaire.



