

FINELITE® **Better Lighting**


Patent Pending Series 11 Micro Flex LED Driver Replacement Instructions

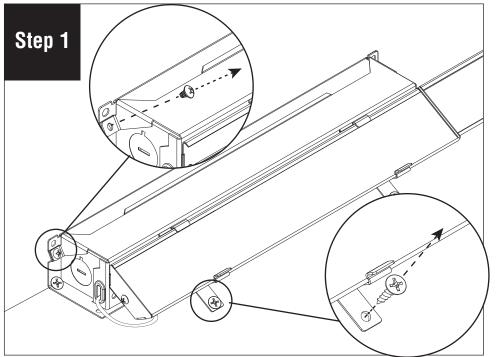


Confirm which driver needs to be replaced. Shut off power to the fixture. Remove 2x Phillips screws on cover using #2 Phillips screw driver and 2x Phillips screws on optical channel clips.

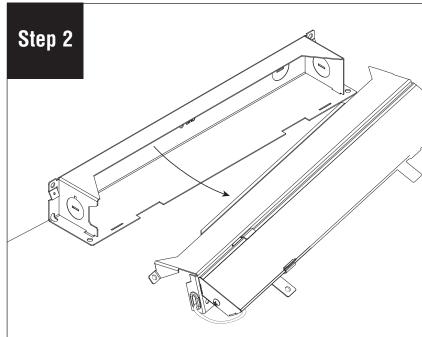


Pull cover assembly away from body.

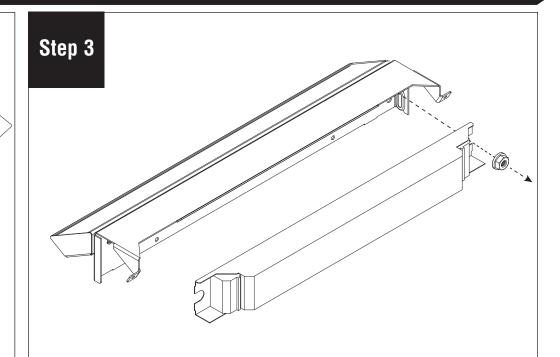

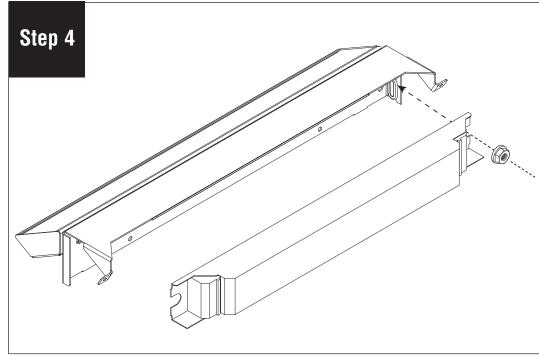


Carefully replace wires connected to driver. Replace #10-32 kep nut with 3/8" nut driver to secure driver to housing.

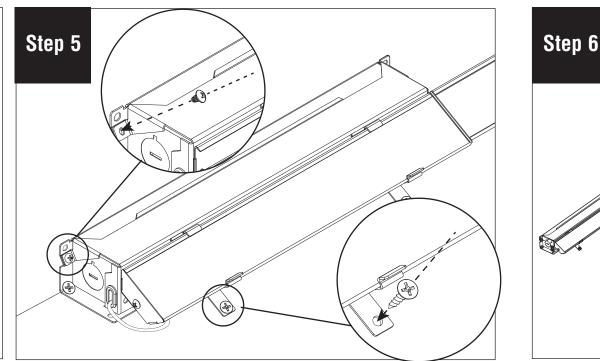

Reinstall cover assembly and secure 2x Phillips screws on cover using #2 Phillips screw driver and 2x Phillips screws on optical channel clips.

A brand of Legrand Finelite, Inc. • 30500 Whipple Road • Union City, CA 94587-1530 • 510 / 441-1100 • Fax: 510 / 441-1510 • www.finelite.com

Carefully remove wires connected to driver. Remove #10-32 kep nut with 3/8" nut driver, and remove driver from housing. Return spent driver to Finelite or local E-Waste recycler.

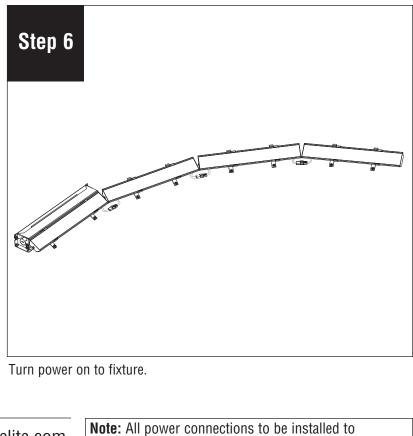

local/national codes by a Certified Electrician.

© 2018 FINELITE, INC. ALL RIGHTS RESERVED. Form 98258. EFFECTIVE DATE: 12/18/18